

Alex A. Schiffer
+ other autors

Exprimental Guide for

JOE CELL

GLOSSARY	6
DISCLAIMERS	11
DANGERS	12
INTRODUCTON	13
Intention	13
Joe.....	13
What is a Joe cell?	14
Chapter 1	15
ORGONE	15
Some properties of Orgone energy.....	15
Chapter 2	19
COMPARATIVE NAMES FOR THE LIFE FORCE	19
Chapter 3	20
ORGONE POLARITY	20
Chapter 4	23
THEORY OF CELL DESIGN	23
Theoretical requirements.....	23
Making a theoretical cell	25
Capacitor effect	26
End result.....	26
Chapter 5	27
MATERIALS AND CELL DESIGN.....	27
A. Parts list.	28
A2. 4 cylinder test cell.....	29
A3. 4 cylinder car cell.	29
A4. 5 cylinder test cell.....	30
A5. 5 cylinder car cell.	30
B. Selection of material.....	31
B1. Stainless steel cylinders and cones or domes.	31
B2. Insulation material and cylinder spacers.	33
B3. Cell to motor tube.	34
C. Machining operations.	35
C1. Cutting operations.....	35
C2. Polishing.	35
C3. Welding.	35
C4. Insulators and spacers.....	35
C5. Press fit operations.....	35
D. Options.	36
D1. Construction of a charging vat.	36
D2. Construction of 4 cylinder test cell.....	36
D3. Construction of 4 cylinder car cell.	36
D4. Construction of 5 cylinder test cell.....	36
D5. Construction of 5 cylinder car cell.	36
E. Assembly.	37
E1. Charging vat.....	37
E2. 4 cylinder test cell.	37
E3 4 cylinder car cell.....	37
E4. 5 cylinder test cell.	37

E5. 5 cylinder car cell.....	38
Chapter 6	43
SEED DIAMETER/HEIGHT RATIO	43
Chapter 7	45
WATER TYPE AND IT'S RELATION TO THE CELL	45
Water type	45
pH.....	47
The water will be either:.....	47
Perfect Science water	48
Gojuice	49
Chapter 8	50
CHARGING THE WATER.....	50
Preparation	50
The charging process.....	51
Steps	51
Stage 1.....	53
Stage 2.....	54
Stage 3.....	55
Additional note	55
Final comments on charging the cell.....	56
Special stage 3 water, (referred to in chapter 11.).....	56
Miscellanea.....	56
Chapter 9	57
CELL CONNECTION TO MOTORS AND MOTOR MODIFICATION	57
Cell location and mounting	57
Cell electrical connections	59
Negative connection.....	59
Positive connection.....	59
Regulation.....	60
Cell-to-engine tube.....	60
Blind plug location.....	62
Ignition timing.....	63
Chapter 10	68
WHEN THINGS GO WRONG	68
Approach to the problem.....	68
1. The water.....	69
2. The cell construction	72
3. The charging operation.....	73
4. Cell to car interface.....	75
5. Car modifications.....	77
A5. To return the car back to normal fuel.....	81
6. Geographic location.....	82
7. The Y factor.....	82
Chapter 11	85
MISCELLANEOUS THOUGHTS	85
Cone angle calculations.....	85
How does it work ?.....	89
Two Alternatives	91
Electrolysis process.....	91
More on pH	93

Rotating fields.	94
The past.	96
The Core men.	100
The present.	102
The future.	103
Chapter 12	104
READER'S CONTRIBUTIONS	104
"Y FACTOR" POLARIZATION/MODIFICATION	104
From Joe via Brett:	104
From Bruce:.....	105
RESULTS USING SMALL CONES AND DE-IONISED WATER (April 1997)	105
VITA HEALTH POWDER - KAL 5.....	106
MAGNESIUM SULPHATE.....	106
POTASSIUM HYDROXIDE.	106
OBSERVATIONS.	107
MARK 1 JOE CELL TESTS (JUNE 1997).....	108
JOE CELL TESTS	109
JOE CELL UPDATE (May 10th 1999)	111
THE JOE CELL SAGA CONTINUES (September 1999).....	112
ORGONE BOX EXPERIMENT (1991).....	113
ORGONE WATER TREATMENT (1998)	114
A Joe cell modification	116
supplied to energy21 by an unknown source.....	116
Artictles	121
ALEX A. SHIFFER: NEGATIVE ELECTRICITY.	121
ADD ON'S (Pictures,...)	128

GLOSSARY

*" To obtain real knowledge, we must feel the truth of a thing, and
understand that it is true,
and know the reason why it cannot be otherwise.*

Max Heindel.

Acid A substance which releases hydrogen ions when it is added to water. The hydrogen ion is solvated ie. a water molecule adds on to it, to give the oxonium ion.

Acetic acid The common name for ethanoic acid.

Accumulator In our case, a rechargeable Orgone concentrating container

Alkali A base which is soluble in water. They are usually metal hydroxides eg. sodium hydroxide, but ammonia solution is also an alkali.

Alloy Is a mixture which is made up of two or more metals or which contains metals and non-metals.

Aluminium The most abundant metal in the Earth's crust, (approximately 8% by mass). It is obtained by electrolysis of Bauxite

Ampere The unit of electric current. It measures the rate of flow of charge. 1 Amp = 1 coulomb/second.

Anion A negatively charged ion.

Annealing A process of heating a material for a given time at a given temperature, followed by a slow cooling. It is a common form of heat treatment.

Anode When a solution undergoes electrolysis, the electrode with the positive potential is called the anode. In the Joe cell, it is the outer casing.

Atom The smallest indivisible particle of an element that can exist.

Battery A device which converts chemical energy into electrical energy.

Brass An alloy of copper and zinc.

Bronze The combination of >90% copper and <10% tin.

Capillarity The tendency of the water in a Joe cell to move up the sides of the cylinders depending on the relative attraction of the water molecules to each other and to the cylinder walls.

Cathode The negatively charged pole in a battery or electrolytic cell.

Cation A positively charged ion.

Cell Defined in our case as an accumulator of Orgone energy.

Conductor An electrical conductor is a substance which allows an electric current to flow through it.

Current Electric current is the movement of electrons through a conductor. It's measured in Amperes.

DC Direct Current. The type of electrical current produced from a simple cell or battery.

Diamagnetic A repulsion by a material from a strong magnetic field. It will try to find its way to the weakest part of the magnetic field.

Distilled water Tap water and rain water are not pure. They contain salts and dissolved gases. Water is often distilled to increase purity. Most of the

salts are left behind but the water may still contain dissolved gases. The presence of carbon dioxide reduces the pH of the water considerably.

DOR Deadly Orgone. An " unhealthy " form of Orgone energy in the atmosphere.

Under agitation by materials that act as irritants to Orgone, the Orgone energy eventually becomes immobilised and " dead ".

Electrode An electrode is a conductor which dips into an electrolyte and allows the current (electrons) to flow to and from the electrolyte.

Electrolyte A solution which contains ions.

Electrolysis When a direct current is passed through a liquid which contains ions (an electrolyte), chemical changes occur at the two electrodes.

Electron A fundamental negatively charged particle, part of an atom. If an atom loses an electron, it becomes positively charged ie. a cation, or if it gains an electron, it becomes negatively charged, ie., an anion.

Element A pure substance which cannot be broken down into anything simpler by chemical means.

Ethanoic acid It is one of the simplest fatty acids. Vinegar contains 5% or more of ethanoic acid.

Fuel A fuel is a substance that releases heat energy when treated in a certain way. In most fuels, the energy is released by combustion. So, strictly speaking, when the car is running on the Joe cell, it is not using any fuel.

Heat treatment The subjection of metals and alloys to controlled heating and cooling after fabrication to relieve internal stresses and improve the physical properties.

Hydrogen A gaseous diatomic element. The atom consists of one proton and one electron.

Insulator A substance which, in our case, is a poor conductor of both electricity and Orgone.

Ion An atom which possesses an electrical charge. When an atom gains or loses an electron, it becomes an ion.

Ionisation The gain or loss of an electron in an atom.

Iron The most widely used metallic element. One of the main problems with iron is that it rusts.

Leaky The inability of our cell to retain the Orgone charge over a period of time.

Litmus This is extracted from lichen and used as an acid-base indicator.

Mass This is how much material a substance possesses. It is usually measured in grams or kilograms.

Magnetic material One of a number of substances that are strongly attracted by magnets and can be magnetised. These include iron, nickel, and cobalt, and all those alloys that contain a proportion of these metals.

Meniscus The curved upper surface of the water in the Joe cell, caused by capillarity action.

Molecule The smallest particle of an element or compound which exists independently.

Nucleus The part of an atom where the mass is concentrated. It contains protons and neutrons.

Neutron One of the particles which are found in the nucleus of all atoms except hydrogen. It has approximately the same mass as the proton but no charge.

Nitrogen An unreactive diatomic gas which forms about 78% of the atmosphere.

Orgone The cosmic life force. See section on Orgone in book.

Oxonium ion The loss of an electron from a hydrogen atom leads to the formation of a hydrogen ion. This is a proton.

Oxygen A gaseous non-metallic element. It makes up approximately 21% of the atmosphere.

Paramagnetic A material with a slight attraction towards the region where the magnetic field is strongest is said to be paramagnetic (As opposed to a diamagnetic material).

Petrol A mixture of hydrocarbons which is used as a fuel.

pH pH scale from 0 to 14 used for measuring acidity or alkalinity. A pH of 7.0 indicates neutrality, below 7 is acid, while above 7 is alkaline. Strong acids such as those used in car batteries, have a pH of about 2; strong alkalies such as sodium hydroxide are pH 13.

Acidic fruits such as citrus fruits are above pH 4, fertile soils have a pH of about 6.5 to 7.0, while weak alkalis such as soap are 9 to 10.

The pH of a solution can be measured by using a broad-range indicator, either in solution or as a paper strip. The colour produced by the indicator is compared with a colour code related to the pH value. An alternative method is to use a pH meter fitted with a glass electrode.

For our Joe cell work, the paper strip indicator is more than adequate (and cheap).

Pipette A piece of glassware used for measuring and transferring a volume of liquid.

Polymer A large molecule in which group of atoms are repeated.

Proton A positively charged subatomic particle found in the nucleus of the atom.

Rubber A natural polymer. It is a hydrocarbon. Rubber is a good insulator.

Seeding The initial capture of the Orgone force in our cell.

Steel An alloy which contains iron as the main constituent.

Sump The lower 1 inch area under the cylinders in a Joe cell.

Suspension When a solid is added to a liquid and the solid neither dissolves in the liquid nor sinks to the bottom, the mixture is referred to as a suspension because the solid is suspended in the liquid.

Vinegar A solution which is made by the action of bacteria on wine or cider. It contains about 4% ethanoic acid. It is used widely in the food industry for preserving foods.

Water An oxide of hydrogen. It is one of the most common compounds on the earth. It does not conduct electricity in its pure state although it can be electrolysed if small amounts of acid or alkali are added. The

products are hydrogen and oxygen. The water which we drink is never pure.

DISCLAIMERS

Irremissible reading for the practising experimenters and constructors.

As the author of this book titled, " Experimenters Guide to the Joe cell ", I hereby make the following formal declarations and give the following advice:

1. I make no recommendation to anyone to construct a Joe cell. I am merely giving an account of my own learnings, experiments and the results obtained thereby.
2. I do not urge and do not recommend the alterations to the fuelling of registered motor vehicles or other engines which are to be used on public roads or other places.
3. In the event that a person, who by his/her own decision endeavours any, or all parts of my experiments, I strongly suggest, that the operator must be well versed beforehand, in the arts and knowledge requirements of the above tasks, for a safe and successful construction.
4. Misuse, or abuse through negligence or intent, or unfamiliarity with construction techniques, or the laws of the country, or safety procedures, are NOT the responsibility of the author, but are in the hands of the practitioner.
5. The author does not accept any responsibility for any injury, death to any living form, damage to property, or damage to the environment, or breaches to any laws that apply at the time to the modifications of internal combustion engines and the pollutants thus released, nor any other event that may give rise to legal action in the event of any persons carrying out research and development, or any other act that may be initiated as a result of the information contained within this document.
6. While the author stands by the authenticity of the results achieved by his own experience, due to the many variable factors of the process including the " Y " factor, no guarantee is implied or given that the outcome of any work carried out by any persons will be the same as those given in this document.

Melbourne, Australia-1999. The author, Alex. A. Schiffer.

Like all potentially dangerous devices, use at your own risk.

DANGERS

I would like to mention here the special dangers that are associated with the use of the life force, more particularly the Orgone energy. I presume that the reader is familiar with the arts required to experiment with hydrogen and oxygen, and is also competent in the use of the tools required to achieve the required results. You have read the disclaimer and I will leave it at that.

As you may be unfamiliar with Orgone, I would like to mention some additional precautions.

Orgone is very sensitive to disturbances and agitations from many sources. Thus the Orgone energy is very easily excited or irritated to produce toxic effects.

The following should be avoided:

- Any cathode ray device such as a TV sets, computers, oscilloscope, etc.
- Microwave ovens, fluorescent lights, luminous face watches, smoke detectors and electric blankets.
- Mobile phones and towers, courier radio telephone service or similar instrumentalities, airport radar and communication services, TV, AM, FM radio transmitters, radio traffic lights, police radar, high tension power lines, nuclear power plants, nuclear waste or storage facilities, and past or present nuclear testing areas.
- The above electromagnetic and nuclear devices and materials are known to irritate Orgone energy, driving it into a severely excited state which Reich identified as the Oranur effect. These effects persist long after the irritation is removed (years). Under such persisting agitation, the Orgone energy eventually becomes immobilised and " dead ". Reich identified this deadened energy state as Dor (Deadly Orgone). A typical human reaction to Dor is lethargy, immobilisation and emotional remoteness. The most important effect is, that it tends to drive latent medical symptoms to the surface.

YOU HAVE BEEN WARNED!

If Oranur or Dor is present, an accumulator will amplify these tendencies.

If my cells " play-up ", I feel very tired, my face looks and feels bloated, I have trouble with my eyes, and I feel as if I was sun burnt. You should dismantle the cell immediately and find the cause. As for yourself, have a cold shower as soon as possible and you should feel better.

INTRODUCTION

*" Since corrupt people unite amongst themselves to constitute a force,
then honest people must do the same "*

Count Leo N. Tolstoy.

Intention

My intention (to the best of my ability) is to remove some of the mystery, secrets, guesswork and plain misinformation that surrounds the construction of the " cell ". The aim is to help the constructor make a cell in a laid out, step by step, method that I employ to make my own cells. My knowledge comes from making the cells. As I have built many working cells, this experience has given me the knowledge, not by guesswork or reading someone's book or listening to second or third hand " expert " opinions. I now pass this information on to you. and it will always stay as my opinion and information until you build your own cell. Only then will you know how to make a cell, and not before!

Joe

In approximately 1992 a new form of a generator was constructed in Australia. In preparation for this book, I spoke to both the designer and his fiancée, regarding my wish to give him the due credits, etc., for his 7 years of work and cooperation with all involved parties. Unfortunately due to the lunatic fringe and money grabbers that dealt with him, this poor, victimised individual has decided to relinquish any further involvement with the cell that bears his name. So in respect to his wishes, he will simply be referred to as Joe. I would simply like to say, dear Joe, that if it was not for rare individuals like you, we the vast brainwashed majority, would never find the true beauties of Mother Nature's gifts.

It is now probably too late to save Mother Earth from the years of pollution and desecration caused by the thoughtless money-grabbing multinationals. As a species, we are unique. Even a little simple bird keeps its nest clean, yet we the most intelligent of creation, destroy our only home! Yet, individuals like Joe show us that there is a better way, a simple pure way, Nature's way. Without the benefit(?) of years of dogmatic mind shrinking education, Joe found, by intuition, how to ask Nature a question in such a way that it answered. The answer was a method of powering machinery without the use of our primary resources or the creation of pollution. This method is well known to the select few and the technology has been around for centuries. Joe has made a crude easy to build version of this generator. The generator is called a Joe cell.

What is a Joe cell?

To find out, let us look at some of the characteristics of the cell as stated by Joe:

- The water in the cell is not consumed.
- The cell runs cold to the touch.
- It takes a period of time before the engine will run from the cell. It then has an erratic power output and works in an intermittent fashion.
- When the cell is removed from the car, the engine takes an appreciable time to return to " normal " and run from the original fuel.
- If the cell is left in the car for a long period, the engine becomes " charged ". From this point, the cell is not required for the motor to run.
- All spark plug leads can be removed and the engine will still run as long as the ignition coil and distributor remain functional.
- The output of the cell, does not have to be connected to the internals of the engine, a close external coupling will do.
- The cell requires the " charging " of the water to work.
- The " charged " water can be poured from one container to another without losing the " charge ".
- The cell requires a specific style of construction, little understood by most constructors.
- An empirical construction style has evolved with little, if any, science or success.
- The source of power for the cell and its use has great value for some individuals. These individuals are creating misinformation, cloaking operations and fear to the cell constructors.
- Human presence can affect the operation of the cell in a positive or negative way.

There is much more information on the Joe cell that is available to the privileged few, but we have enough information from the above clues to identify the energy type. From the above, it is plain to see (as I will explain to you) that without a shadow of a doubt in my mind, the Joe cell is a crude Orgone accumulator, and that the cell runs on, or collects Orgone. There is a 100% correlation with Orgone energy and its properties. As these accumulators have been and are in use all over the world, the constructor can share in this vast pool of knowledge. For example, as early as the first of January 1867 a French patent, number 60,986 was issued to a Martin Ziegler for an accumulator of a living, non electrical type of force . The experimenter can with a little research, and notes like these, bypass the myths, misinformation and the mongers of secrets and get on with scientifically based facts. Also, he can be prepared to realise and meet the **DANGERS** that await the rash and fool hardy.

Chapter 1

" How else should it be done then? , was always the immediate question.

The answer is simple:

Exactly in the opposite way that it is done today! "

Viktor Schauberger.

ORGONE

As all known effects of Orgone are seen in the functioning of a Joe cell, it is reasonable to assume that the reader should have a good working knowledge of Orgone energy. Additionally, as the cell obeys all known Orgone laws and as the cell's operation does not contradict even one Orgone effect, it is safe to assume that this is the energy that is utilised in the cell. In honour of, and respect to one of the world's great, forgotten, and scorned scientists, namely Wilhelm Reich, I will continue to use the name Orgone as used by Reich. A multitude of other scientists, great and small, have given this mysterious force a name. In a following chapter I have listed at least 70 names by various individuals for the same or a similar force.

Orgone energy is the live cosmic energy of Nature. To quote Reich ... **The Cosmic OR Energy fills the universe ... and ... it is a spontaneously pulsating, mass-free energy ...**

For interested readers, there is a huge collection of facts, opinions and absolute rubbish on the Internet regarding Reich and Orgone. As the aim of this book is to focus on the Joe cell, the above definition will suffice.

Some properties of Orgone energy

Thousands of properties have been observed for the life force and I would like to list and explain the main ones relating to the cell.

1. It is mass free. ie. Orgone energy has no inertia or weight etc. So conventional test equipment that requires a reaction or something to " push " against to measure a force will be ineffective.
2. It is present everywhere, but more importantly to the Joe cell user, the concentration is variable from place to place and from time to time. Therefore, if the cell is leaky and located in a low concentration area, it may stop breeding or even loose the seed. The external signs are a motor that will not produce full power or will not run at all.
3. It is in constant motion. It has an uneven movement from West to East at a speed considerably greater than the earth's rotation. The motion is a pulsating expansion and contraction and a flow normally along a curved path. Inside an accumulator, the energy is emitted as a spinning, pulsating wave. Both of these can be seen to varying degrees in a charging vat and/or cell. These signs are very

important to the experimenter as they are his tools in the different stages of seeding and breeding of the cell.

4. It negates the laws of entropy. Orgone energy flows from lower concentrations to higher concentrations ie. Orgone attracts concentrations to itself. This is the normal process of creation and as such is a proof of Orgone being a living energy. For the experimenter, this is very important, especially in the seeding stage. If the cell is located in an unfavourable location, it may not seed or take a long time to seed. I have had cells taking 4 weeks to seed, others take only a few days.
5. Matter is created from it. Under appropriate conditions, which are not rare or unusual, I have had different minerals formed from identical cells. This in my case is usually a white or green powder that forms as very fine colloid that eventually sinks to the bottom of the cell. You definitely do not want this to occur in the Joe cell as the cell will not run the car and the only solution is to completely dismantle, repolish and clean all components. For the sceptical, you may assume that the deposits are coming out of the water. I strongly disagree.
6. It can be manipulated and controlled. We do this in the cell by forming alternate organic and non-organic " cylinders " to form an accumulator for the Orgone. Thus the organic layers attract and soak up the Orgone and the metallic layers draw it from the organic material and radiate it into the interior of the accumulator. Additionally we use electricity, magnetism and electrolysis to assist with the breeding process.
7. It comes from the sun in vast quantities. As such, allowing for thermal lag, the Orgone density peaks in the afternoon and diminishes in the early morning hours. As people have found, a leaky cell will not function as it " dies " around 3 am to 4 am.
8. It is affected by weather, ie. humidity, cloud, temperature and time of day affects the accumulation of Orgone. For the experimenter with a leaky cell this explains the weird behaviour of leaky cells ie. sometimes they work, other times not, but if you stand on one foot, talk to it, try different water, chemistry, more or less power etc. it will " come good ". This has created a whole religion of what you must do or not do, to such an extent that with the blind leading the blind, the cell in the hands of a casual constructor is doomed to failure.
9. A. It moves in the direction of a magnetic field. This is highly significant to the cell builder. This factor controls the position and polarity of the cell's internal wiring as well as controlling how much residual magnetism the steel can have and still allow the cell to work. This is critical in the choice and cutting operations of the related metals. Again, a whole mythology has developed around this area. From reading previous material on the subject, it seems that the steel has to be cut by vestal virgins in the Black Forest on a moonlit night!

- B. It moves at right angle to an electrical field. Again, highly important, as it dictates polarity and wiring connection to the cell.
10. It is absorbed by water. This is one of the reasons that we use water in the cell. To be successful, the water has to be the right type of water. By the way, for example, we could have used bees wax instead of water, but as we want to encourage the breeding process with all the tricks in the book, the bees wax would have prevented the use of electrolysis.
 11. It is polarised. As Orgone is polarised, that is , we can have positive or negative Orgonic force, so we can build a positive or negative cell. But, if you mix your positive and negative construction materials as most people do, then your result is a leaky or non-operational cell.
 12. It will penetrate or travel along all known materials. All bodies of continuous structure are equally good conductors eg. It may travel through 70 feet or more of metal. As such, do not think that you are trapping it in the cell. The only reason it stays in the cell at all is because it wants to. It is up to the experimenter to set up a seeding and breeding environment that is conducive to Orgone and not try to create an imaginary prison that the experimenter hopes will trap the Orgone. As a side note, mankind has created synthetic materials in recent times that can greatly stop the penetration of Orgone. I am talking about polymers.
 13. It has a slow conduction rate. Orgone will take 20 seconds or more to traverse 50 yards of wire. For the experimenter, this means that you should wait about 30 seconds after turning power on to the cell before you can expect to observe Orgone action at a stable rate.
 14. It exhibits a constant upward tendency, raising vertically. Highly important in creating a non-leaky cell installation in an car.
 15. It cannot remain in steel or water longer than about 1 hour. Simply said, if you cell is not breeding, it will die in about 1 hour. This explains the use of a 1.5 Volt battery across leaky cells to maintain a breeding process. What you achieve with the small potential across the cell, is a very low rate of electrolysis that matches the leaking of the cell and thus maintaining the breeding process.
 16. It radiates a great distance. From a typical cell the radiation circumference is at least 160 feet. Think about it!
 17. It follows optical laws. It can be refracted by a prism, reflected by polished surfaces, etc. This explains the reason for the mirrored or highly polished surfaces in some parts of the cell. It also allows us to control some leaking by utilising optical laws.
 18. It surrounds itself with alternating spherical zones of opposite polarity. This is utilised by us to determine cylinder diameters and consequential spacing in the optimisation of the cell.
 19. It is affected by living beings. Again, important, as the experimenter and his attitude can interact with the cell

20. It can only be concentrated to a finite amount. If a cell is charged to its maximum degree so that it can hold no more, the Orgone will transform itself into electricity, and in this way or form, find a discharge. By the visual observation of the bubbles, pulsations, and surface tension of the water, we utilise this fact to our advantage.
21. Torsion (Orgone) fields transmit information without transmitting energy, and they propagate through physical media without interacting with the media.
22. Torsion (Orgone) fields cannot be shielded by most materials, but can be shielded by materials having certain spin structures. As in point 12 above.
23. Each physical object, in living or non-living nature, possesses its own characteristic torsion (Orgone) field.
24. All permanent magnets possess their own torsion (Orgone) field.
25. Torsion (Orgone) fields can be generated as a result of a distortion of the geometry of the physical vacuum. This is demonstrated by pyramids, cones, cylinders, flat triangles, etc.
26. Torsion (Orgone) fields can be screened by aluminium. This allows the use of aluminium coated mirrors, or highly polished aluminium to reflect our Orgone (Torsion) field. See point 17 above.
27. It will pass through all materials, but at different speeds.

Chapter 2

" Matter is latent force, and force free matter "

The mystic school.

COMPARATIVE NAMES FOR THE LIFE FORCE

At no stage do I even remotely hint that the following terms are identical. The purpose of the list is to show the many names given to unexplainable forces of which Orgone is one.

Akasa. Hindus
Animal magnetism. Mesmer.
Arealoha. Francis Nixon.
Astral light. Kabbalists.
Baraka. Sufis.
Bio-cosmic energy. Dr. Oscar Brunler.
Biodynamic Ether. Rudolf Steiner
Biofield. Yu. V. Tsyman.
Bioplasma. Russians.
Biotronic. Czechs.
Brahma. Hindus.
Ch'i. Chinese.
Chronal field. A. I. Veinik.
Cosmic energy.
Cosmo-electric energy George Starr.
D-field. A. A. Deev.
Dige. Apache.
Digin. Navaho.
Dynamis. Ancient Greeks.
Eck, Eckankar.
El. Hebrews.
Elan-vital. Henri Bergson.
Electrogravitation. T. T. Brown.
Elima. Nkundu.
Eloptic energy. T. Galen Hieronymus
. Eloptic radiation. Hieronymus.
Entelechy. Dreisch.
Ether. Aristotle.
Ethertricity. Gaston Burrige.
Fermi Energy.
Fluoroplasmic energy. B. Hilton.
G-field. Sir Oliver Lodge.
Gravity field energy. H. A. Nieper.
Hike. Egyptians.
Hullo. Chickasaw.
Ka. Egyptians.
Kerei. Indonesians.
Kirlian effect.
Latent neutral. Keely.
Life Force. Dr. Aubrey T. Westlake.
Logoidal plasma. Hieronymus.
Magnetic Fluid. Mesmer.
Manitou. Algonquian.
Manna of the Polynesians.

Manna. Israelites.
Maxpe. Crow.
Mitogenetic emanation. A. G. Gurvich
. Mon-emanation. I. M. Shakhparnov.
Multipolar energy. V. V. Lensky.
Mumia. Paracelsus.
Mungo. African.
N-emanation. M. R. Blondolt.
Negative entropic energy. James DeMayo.
Nervous Ether. Richardson.
Nervous Ether. Richardson.
Neutral force. Kabbala.
Neutricity. Gallimore.
Neutrino sea. P. A. A. Dirac.
Numen. Romans.
Odic Force. Baron Karl Von Reichenbach.
Orenda. Iroquois.
Orgone Energy. Dr. Wilhelm Reich.
Pneuma. Gallien.
Prana. Hindus.
Psychotronic energy. Czechs.
Pure non manifest energy. Todd R. Knudtso
Reiki. Japanese.
Scalar energy.
Space energy.
Spiritus. Fludd.
Tachyon energy.
Telesma. Hermes Trismegistus.
Time emanation. N. A. Kozyrev.
Tinh. Annamites of Vietnam.
Tondi. Sumatra.
Universal life force. Baron Eugene Ferson.
Virtue. Jesus.
Vis medicatrix. Hippocrates.
Vvis naturalis.
Vital Fluid. Alchemists.
Wakan. Sioux.
Wakonda. Omaha.
X-agent. H. Moriyama.
X-Force. L. E. Eeman.
Z-emanation. A. L. Chizhevsky.

Chapter 3

ORGONE POLARITY

" It was especially forbidden to divulge the law of attraction and repulsion, which constitutes nature's greatest secret. "

Mrs. Bloomfield-Moore, circa 1893.

As Orgone is polarised, either positive or negative, it can be manifested sometimes as both polarities for a short period of time. In our search for the perfect Joe cell, it is essential to utilise polarity-conductive materials in the construction of the cell. With the use of suspect materials that encourages the creation or retention of both polarities, the cell is not only a poor breeder ,but also leaky. I would strongly encourage the experimenter to choose to construct either a negative or positive cell and not to use materials at random or what happens to be handy or cheap. This is a sure way to failure.

Positive (Warm)	Negative (Cold)
Root fibres of plants	Tips of plant leaves
Negative electricity	Positive electricity
Iron	Selenium
Copper	Sulphur
Tin	Iodine
Lead	Palladium
Brass	Cobalt
German silver	Phosphorus
Alkalies	Acids
Alkaloids	Charcoal
Argentinium silver	Evaporation
Mercury	Steaming
The base, (non pointy end), of crystals	Tip of crystals
Friction	Sound
Magnetic South	Magnetic North
Left hand	Right hand
Left side of body	Right side of body
Back of neck	Forehead
Running water	Distillation
Bismuth	Vibration
Zinc	Tellurium
Osmium	Decomposition
Titanium	Oxides
Potassium	Haccoid salts
Calcined lime	Chemical reaction
Caffeine	Vinegar
Paraffin	Alcohol
Creosote	Mouth and tongue
Moon	Sun
Planets	Stars
Red end of sun's spectrum	Blue end of sun's spectrum

As seen from the above short list, chemical reaction, electrolysis, evaporation, steaming, vibration, sound and chemicals are the most common goings on in the cell and in the motor. To rephrase, since the natural events in our cells habitat favour these actions, I would suggest that the experimenter builds a cell that utilises as many of these parameters as possible, until he gains the knowledge of the causes of the cell behaviour. I personally only build acid cells. I have a dislike of the corrosion associated with alkaline cells and also find that the water remains crystal clear and the insulators do not fail in my acid cells.

Chapter 4

" Everything that is natural is silent, simple and cheap "

Viktor Schauberger.

THEORY OF CELL DESIGN

After 6 years of experimentation, I made the assumption that the Joe cell was working on Orgone energy. This assumption came as a result of hundreds of hours of reading and experimentation. In all that time, all the recorded effects of Orgone, (and there are hundreds) have matched the behaviour of the Joe cell. There has never been a departure from the known recorded effect of Orgone energy, not even one! As such it would take a far braver man than I to argue with the huge supporting evidence of thousand's of man-hours and the work from hundreds of qualified individuals from all over the world. So, as my own humble experiments agree with the majority, I have said, and will repeat many times, the cell runs or more correctly, **accumulates Orgone energy**.

Theoretical requirements

Sometimes I have to restate the obvious, namely, if we are to accumulate Orgone energy, we must have an Orgone accumulator! We are not designing this cell to use Neutrino's, Deuterium, Nitro-glycerine, steam, Nitrogen, Hydrogen, Hydroxy, or any other author's pet opinion to the contrary. You will have to read other publications for those topics and cell designs, this train goes to Orgone country. We are designing our cell to run on Orgone energy! When I say " we ", I am assuming that the reader is following suit, and will build a cell closely matching these instructions. As such, a close study of the chapters on Orgone properties and cell polarities would be in order. If you were a naughty boy and skipped over these sections, I would suggest that you read them now. So what have you discovered? You should be in agreement with me on at least two points, ie. that the cell should use as many of one type of Orgone polarity materials and properties as possible, and additionally, we want to utilise as many as possible of all external forces available to us to assist us in the accumulation of the Orgone energy.

Are we on the right track with our Joe cell accumulator? What would we aim for in the design of a perfect energy accumulator ? Is there any better way to go? Maybe we are on the wrong track? At this stage it may be a good idea to consider the design parameters for the ultimate energy source. After all, why waste our time with the Joe cell if there is a " better " way of getting our energy. Better meaning, cheaper, parts effective, less polluting, less destructive, longer lasting, etc. If we look at the quote from Viktor Schauberger at the start of this chapter, "... natural, silent, simple

and cheap..." is a very good starting point. Let me give you a brief list of the requirements of this magic accumulator and see if we are on the right track with the Joe cell:

- The Joe cell is natural as it operates on the life force (Orgone). It is the only natural man-made energy producing device that does a direct interchange from a primary energy source to the final energy supply. As such it seems to provide " free energy " and thus be an impossibility. This is a huge stumbling block for people who do not understand the concept of " free energy ".
- The Joe cell is silent. There are no moving parts. A solar panel or Peltier effect device would be the closest highly inefficient relations.
- The Joe cell is simple. No moving parts, a set of cylinders and water, you could not get it any more simple.
- The Joe cell is cheap. After the initial outlay, there are no further material costs or replacements required to worn-out parts. The Joe cell is virtually everlasting. If you build one with second hand components, your total outlay should be under AUS \$200.00
- When we use energy that is at its fundamental stage ie. the energy cannot be broken up into any other energy constituents that are at a smaller level; we have no waste by-products and thus no pollution. The Joe cell runs on the life force energy (Orgone) which is a fundamental force of the Universe. You are not going to get any more basic than that!
- Any centrifugal, expanding and exploding force is wasteful due to the creation of heat. Any device that generates heat as part of its operation can never be considered an efficient energy source.
- Nor can it ever be an over unity device. The Joe cell runs cool and so does the motor that runs from it.
- Any energy produced from a set of conversion stages is wasteful. For example, a nuclear submarine has a nuclear reactor to create heat. The heat is used to create steam from water. The steam drives a steam turbine. The steam turbine is used to run an electric generator. The electric generator is used to drive an electric motor. The electric motor turns a propeller. The propeller twists in water thus providing a thrust. The thrust propels the submarine. You would have to be kidding! No wonder that superior beings roll on the floor with laughter on observing our " technology ". How unnatural is all that? The Joe cell converts the primary life force (Orgone) into an expanding multiple use force in one step. Beautifully simple!
- The Orgone does not have to be stored or converted and stored. It is an **on-demand system** and thus there is no infra-structure required to store, distribute, ship, sell, etc. Unlike petrol, it is the same price each week (free). Definitely not good news for the oil multi-national concerns. Maybe that is why we are not using this force? < grin>.

So to summarise, I would say that, (to the best of my knowledge) as there is no alternative energy device to compete with the Joe cell, we would be on the right track if we build a cell that ran on Orgone. Please

note that the Joe cell and its construction has limitations and negatives as you have already read and will read in later chapters. As we do not live on a perfect world, we are not perfect humans and the Joe cell is not a perfect device.

Making a theoretical cell

By reading through the list of Orgone properties and selecting the ones that look useable, you should have selected these:

Property 14. As it has a preference for a vertical and constant upward alignment, we will have the outlet of our cell at the top most point of the final structure.

Property 6 As it can be manipulated, it means that we can build a container to house it. We will have cylindrical cylinders, concentric and with a vertical axis to fit in with Property 14.

Property 10. As it is absorbed in water, we are going to make a water cell. As we are dealing with water, the cell has to be water proof and non corrosive.

Property 20. As it can only be concentrated to a final amount, we know that sooner or later something will occur in the vertical plane and with our outlet located at the top of this vertical axis, ie. Property 14, something will come out.

Property 9A As it moves in alignment with a magnetic field, we know that if we place one of our potential's at the bottom of our " conductor ", and the other potential at the top of our " conductor " a magnetic field will result and the Orgone field will move in the same direction. As our conductors are the metal cylinders, they now must have a concentric vertical alignment to fit in with Property 14. As we are dealing with magnetic fields, our cell material should not interfere with the chosen field that assists the Orgone to follow in a vertical alignment. Also, as we are dealing with water, electrolytes and magnetism, the cell material suitable for the simple cell should be stainless steel with a low as possible magnetic residual. Just on the side, our " conductor " is a complex combination of water, stainless steel cylinders and ion flow. Nevertheless, it will create a directional magnetic field

Property 9B. As it move at right angle to an electrical field, our concentric vertical cylinders prove a perfect match, ie. the electric current flow is from the inner most cylinder, to the outer most cylinder in horizontal lines. As the Orgone flows at right angles to this field, the end result is again a vertical alignment of Orgone. Good stuff!

Now, from the table of Orgone polarities, we can get a few more " helper's " to coax the Orgone force to work for us;

The electrolysis will be very interesting to it, and as Joe said, connecting the power to the cell when the engine is running is like switching the turbocharger on full boost, man you are off! Like wise the friction from the reciprocating parts in the engine will get it to go in and have a peek and

then, " got you! ", we can use it! The sound and vibration are additional bonuses when the car is running.

Capacitor effect

For the electronically versed readers, let me explain to you one way that the cell acts as a concentric energy accumulator. It is a well known fact that the charge of a capacitor is proportional to the surface area of the plates. Similarly, we know that the potential increases as we bring the plates closer together. Now look at the beauty of the Joe cell. We have a set of concentric plates with an obvious reduction of surface area as we move towards the middle of the cell, ie. as the cylinder gets smaller in diameter, the surface area reduces proportionally. Now, as the surface area of the cylinders decrease towards the middle, we automatically have the charge increasing as we move towards the center! Therefore, the greater the number of cylinders, the greater or more intense is this charge build up. So, thrown in at no extra design cost is an automatic magnifier for the Orgone force that is concentrated automatically at the center of the cell. The above applies only if the water can act as an dielectric, ie. that it does not have too many ions in the water. Thank you Nature! By the way, on a larger scale, the earth is the middle of the accumulator and the different atmospheric layers are the cylinders that concentrate the sun radiations.

End result

We now have a theoretical cell. It is made from a plurality of concentric stainless steel cylinders in water, with an application of a suitable electric and magnetic field, and a top-located outlet on a vertical aligned cell. So, the above is the layout and the logic in the construction of a theoretical cell. Now, dear Joe did not do any of the science, did not know any of the scientists, did not read any related books and did not know what Orgone was, but by a stroke of sheer luck and intuition, he made his final cell in the above configuration, and the rest is history! Yes, dear friend, our theoretical cell is exactly how you should make you practical working cell. This will be explained in the next chapter.

Chapter 5

" There is no ideal crucible, no crucible so perfectly sealed and protected that it can be considered a closed system, a unit absolutely isolated from the rest of the universe.

Raymond Abellio, circa 1975.

MATERIALS AND CELL DESIGN

In this section, I would like to take you step by step, through the cell construction process. I have stated in other sections of this book and I would like to also state here that there are countless methods of constructing Orgone accumulators. The method described here is based on the Joe cell construction techniques. For a very comprehensive description of this type of cell, I would presume that the reader has read, or has access to, a copy of Barry Hilton's book, "How to run Your Car on Zero Point Energy ". This book contains in words and diagrams what Joe wanted the public to know about his cell. As such it is essential reading.

Note. I have a copy of the above book and recommend it to others, but!, that does not imply that I agree with the theories or facts as expressed by Barry and Joe. Nor does it imply that I promise you that if you buy the above book, you will be able to " run " your car, or even have a working cell. Simply stated, I see Barry's book and my own, as pieces similar to the pieces of others, in a jig saw puzzle. If you put all the pieces together, you will understand the life force, or whatever else you want to call it. You do not require all the pieces if you only want to " run " a car, but the more pieces you have, the greater is your understanding of the causes, not just the effects. Thus the car will run for a longer period of time without mysterious " down times ".

I am not interested, as established before, in arguing, challenging, debating, competing, or defending my written notes with any parties. I give you these notes freely as a pointer, to show you a method of cell construction that works for me. If you have something constructive to contribute, I will gladly alter my notes.

Right, with the preamble out of the way, lets get to work. I will go through each step:

- A. Parts list.
- B. Selection of materials.
- C. Machining operations.
- D. Options.
- E. Assembly.

A. Parts list.

The following parts lists, tie in with section D.

Common to all vats and cells, you will require lugs that can fit over a ½ inch (12 mm.) bolt, and multi strand wire capable of flowing 10 Amps continuously, red for positive and black for negative. You may want to purchase an in-line fuse holder and a few 5 Amp fuses to suit.

A1. Charging vat. (Optional item).

This vat can be any suitable low paramagnetic food grade steel container. A favourite with Joe and others is a stainless steel beer keg. These seem to be plentiful, but be wary of quality. The seam welds are particularly paramagnetic. There is a story of Joe testing about a hundred kegs before he found one that he liked. Unless you are going to use the large cones, about 10 inches (250 mm.) diameter, I see no useful purpose to have such a large charging vat. Even if you employ it to fill up your radiator, it is still a hell of a lot of water. I could see a use for one as a shared club or group resource, but not for one individual. I personally use a much smaller vat with an internal working height of 11 inches and a diameter of 8 inches. This type of keg has the advantage of not being seam welded horizontally half way up the container. This is exactly where you do not want any magnetic bands! My cone diameters are either 5.5 inches or 6 inches depending on the scrap metal dealer.

So, you will need:

- 1 x Keg of your chosen size.
- 8 x Cones of chosen size.
- 1 x Nylon, or similar, central cone support rod.
- 8 x Nylon, or similar, spacer washers to suit cones and central support rod.
- 16 x Neoprene O-rings to suit central support rod
- 1 x 300 mm. long by 6 mm. diameter (approx) stainless steel support rod. (Use horizontally across keg to hold central rod and cone assembly).
- 1 x 1 meter long (approx), by 12 mm. wide stainless steel strap, approximately 1 mm. thick.
- 6 x Stainless steel pop rivets.

Note. If you just want to get on with it, and you only want to charge your car cell, you do not require a charging vat. Its main virtue is the quantity of water and the ability to remove any scum from the top of the water. Unfortunately, as your car cell is enclosed, this scum is not so readily removed, but there is nothing to stop you charging the water in your car cell, tipping out your stage 3 water in a glass container, filtering this water and reintroducing it back into your car cell. Anyway, if you use the methods described in these notes, you will find that your scum will be at a minimum. I have always charged my car cells as a stand alone unit, ie. no charging vat. The advantages are that you know that the cell and the water are okay and not just the water, as the case would be, if you simply added the water out of your charging vat into your car cell.

A2. 4 cylinder test cell.

The test cell is a vital piece of equipment that you should make. It has two main functions: One, it is a training aid for you while you are learning about the different stages of charging the water. You will easily be able to observe the different bubble types, surface tensions, deposits in the sump and colloids suspensions in the water. Two, you will be able to fill it up with suspect water from you main car cell and test to see if the water is still at stage 3. You do not have to be Einstein to work out that your test cell container should be transparent.

You will need;

- 1 x Glass or clear (not translucent) acrylic container about 6 inches (150 mm.) diameter by about 8 inches (200 mm.) tall. The container must have a lid!
- 1 x Set of 1 inch, 2 inch, 3 inch and 4 inch cylinders about 5 inches (125 mm) long.
- 18 x ½ inch (12 mm.) diameter by ½ inch long spacers.
- 1 x Approx. 10 inches (250 mm) stainless steel strap as per charging vat parts list.
- 2 x Small stainless steel nuts and screws to secure the strap to the plastic or glass container.
- 2 x Stainless steel pop rivets.
- 1 x 1.5 feet (500 mm.) of heat shrink tubing to fit over you stainless steel strap.
- 2 x Lower acrylic support combs, (to be described later).

Note. If you use the glass jar, you may want to insert the negative via a ½ inch (12 mm.) stainless steel bolt via a hole that you drill through the bottom of the jar. In that case, you will need a 3 inch (76 mm.) stainless steel bolt, nut and washer, plus two Nylon or Teflon machined washers where the bolt exits the glass container. The extra effort may not be worth it unless you can get the parts cheaply.

A3. 4 cylinder car cell.

The construction of the 4 cylinder and 5 cylinder cells are the same except for the extra cylinder and 6 spacers. Thus I will only describe the construction of the 5 cylinder cell. If you want to make a 4 cylinder cell, follow the construction of the 5 cylinder cell without the extra cylinder.

Note. The only reason that I mention the 4 cylinder cell at all, is again due to the myths that have developed in the " field ". Basically, the story goes like this: It is rumoured that if you do not use the charging vat, you can only charge and run you car with a 5 cylinder cell. You supposedly cannot charge you water with a 4 cylinder cell, only run you car on it. Joe also mentions in his video that he thinks that the 4 cylinder may even run the car better than the 5 cylinder cell. Personally, I have found that you can charge both a 4 and a 5 cylinder cell and thus, they will also run the car. As the leakage of a cell is determined by the " layers " or number of concentric cylinders, the 5 layer cell is a better cell. I have found that a 5

cylinder cell works much better for me and I really have nothing to recommend the 4 cylinder cell for, except that it is a smaller cell. There is still meagre feedback from constructors, so the jury is still out.

A4. 5 cylinder test cell.

This is my favourite configuration. My very first test cell was a glass 5 cylinder cell with 7 inch long cylinders. This cell has been in constant use now, for about 6 years, still not broken after countless dismantles and services. The insulators and cylinders after 6 years are as good as they were on day 1.

This cell uses the ½ inch bolt-through-the-bottom alternative.

The construction is the same as the 4 cylinder test cell, with the addition of 6 extra spacers to support the extra 5 inch cylinder. That's it.

A5. 5 cylinder car cell.

This is the one, dear people. You either get this one right or end of Joe cell as reality and back to fantasy. This is the baby that has to seed and breed for you. This is the one that has to be reliable and sludge free. This is the one that people will judge your sanity on. If it does not work, you go down the path of all other failures and dreamers. Conversely, when you get it working, you will not be able to count all your new " friends ". They will all want one, just " like the wizard made ".

There are variations, I will give you my favourite one, you will need:

- 1 x Set of hand selected, polished, clean, low paramagnetic, (maybe heat treated) 1 inch, 2 inch, 3 inch and 4 inch inner cylinders, of 8 inch length, or length very close to 8 inches, as calculated from own your calculations as per Chapter 7.
- 1 x 5 inch diameter outer cylinder, as above, but 10 inches long.
- 1 x Lower plate, one 5 inch thread, one 5 inch O-ring seal and one 5 inch nut to suit the above
- outer casing. This is not off-the-shelf. You will need machine work to make the press fit
- section. See diagram.
- 1 x Top cone. This is a standard 5 inch to 1 inch tube reducer. Apex angle to suit material but between 60 and 90 degrees and optimally 57 degrees for 316L stainless.
- 24 x ½ inch diameter by ½ inch long ebonite or similar spacers.
- 1 x 3 inch long by ½ inch diameter stainless steel bolt, nut and washer.
- 2 x Nylon or Teflon machined insulators for bolt exit.
- 1 x 1 inch (24 mm.) diameter compression fitting for your cell outlet. This outlet will be a right- angle or straight fitting depending on your individual requirement. This is where your 1 inch (24 mm.) outside diameter aluminium engine pipe fits in.
- 1 x A suitable length of 1 inch outside diameter (24 mm.) aluminium tube for your cell to engine blind plug fitting. (My tube has a 20 mm. inside diameter but this is not critical).

- 1 x 1 inch (24 mm.) long, ½ inch (13 mm.) inside diameter stainless steel tube. This slips over the stainless steel bolt and holds the inner cylinders clear of the bottom
- 3 x Acrylic combs to support the inner cylinders. Optional, to be described later.

Note. All components should have the minimum paramagnetic field possible. Your test magnet can be slightly attracted, but must not stick and support its own weight! All parts are to be cleansed in mild vinegar or acetic acid that has been added to juvenile water. Do not leave finger prints on any stainless steel surface.

Regarding heat treating, as the Curie point of most stainless steel is 800F and higher, our heat treatment must exceed this temperature. Two methods that work are:

1. Local advice from a Melbourne heat treatment operator: he suggests to place the material in an oven at 1200F for three hours in a Nitrogen gas, then reduce the temperature slowly to atmospheric over twelve hours.
2. TM Technology, (http://www.tinmantech/html/faq_stainless_working_joe-c.html) suggest 800F to 1200F for ½ to 2 hours.

B. Selection of material.

Material selection can be broken down into:

B1. Stainless steel cylinders and cones or domes.

A vast amount of good advice and pure drivel has been written on this subject. So much so, that I had cell builders from USA telling me that the right grade 316l stainless steel is unobtainable over there, and Australia is the only place that is can be sourced from! I have also been told by " experts " that this steel can only be made in the Southern Hemisphere (due to the Earth's magnetic field rotation,) and that is why the Joe cell only works in Australia and New Zealand! When I tell them that I cannot afford to buy new steel and obtain most of my stock via scrap metal dealers from dismantled American and British food machinery, they then think I am hiding the truth from them and that I am somehow refusing to show them the " secrets " of the cell design. What can you do with some people?

So, where do we go to get this " unobtainium " material? Where is the line between fact and fiction?

First of all, let's go to the start of Joe and his cell designs. You would have noticed historically that he used plastic and stainless steel in his designs and, irrespective of the material used, ALL types of cells worked for him. So it does not have to be stainless steel at all! As I will show in a later book, stainless steel is really quite a lousy material, but will suffice for this cell. However, as people, including Joe, experimented with various

chemicals, they discovered that some stainless steels had three main advantages; namely, it formed a good pressure container, it was impervious to the majority of chemicals and it was " non-magnetic ".

I will list some of the " non-magnetic " stainless steel, but please note that all stainless steel will be magnetic to some slight degree:

- AISI 304. Used in dairy, textile, dyeing and chemical industries for containers subject to different types of corrosive conditions.
- AISI 316. Parts for chemical and food plants, wearable for high temperature.
- AISI 316L. As for 316, but with superior corrosion resistance when exposed to many types of chemical corrosives, as well as marine atmospheres. It also has superior creep strength at elevated temperatures.
- AISI 310. Furnace parts, radiant tubes, annealing boxes and heat treatment fixtures.
- AISI 410. Cooking utensils, turbine blades, coal screens and pump rods.
- AISI 420. For the automobile and aircraft industry. Components such as valves, pistons, and nuts and bolts.
- AISI 431. Parts requiring highest strength and rust resistance.

Now, for reasons that I do not fully understand, the Joe cell fraternity has decided that only 316L will do. I have proved over and over that this is a myth. Not only that, I would challenge any builder to pick 316L stainless from similar grades at a scrap metal dealer! What we are looking for are cylinders, cones and domes that have the least remanent paramagnetism. This is easily checked by taking your faithful rare earth magnet to your metal dealer. My magnet is only 5 mm. diameter by 3 mm thick and is attached to a convenient length of fishing line. By swinging the magnet near the stainless steel you will easily see how paramagnetic the steel is. Especially check the longitudinal or spiral seam welding. The magnet will be attracted to the seam, but reject the material if weld seam is discoloured for more than ¼ of an inch (6 mm.), or it is a different thickness to the rest of the metal, or the magnet sticks and stays there supporting its own weight.

Note.

Always have a keeper on your test magnet when you carry it in you pocket, as it just loves to " wipe out " credit cards and similar magnetic stripe products!

Do not use a ferrite magnet! similar to the easily obtainable round speaker magnets that every experimenter has in abundance. These are nowhere near strong enough and you will be deluded into thinking that you have found " Joe cell steel heaven ", as the stainless steel will pass your magnetic tests.

If you plan to heat treat you cell components after all machining and welding operations, the selection process does not have to be quite so rigorous. I personally would get the least paramagnetic steel anyway, as it

is no extra in a scrap dealer and you may not have to heat treat the completed cell.

If you are buying new stainless stock be prepared for some awfully dodgy 316L stainless.

It seems to vary tremendously with the country of origin. I have found that certified stainless in a plastic wrappers and with '316L' written longitudinally and repetitively along the whole length is generally fine. You will find that when you spin a good piece in a lathe and gently hold it with your hand, a good piece will feel " round ", but with a bad piece, you will feel longitudinal ripples. Similarly when you are cutting a piece of genuine 316L you will hear a ringing and the saw will be really working to cut it. I have cut some so-called 316L that cuts like butter! Believe me, real 316L is a bitch to work with.

Summary of the above. Since 316L is " the best ", try to buy some certified 316L stock. Try to buy some seamless tube if you can. Do not buy any on some salesperson's guarantee that it is non-magnetic. Test it! If they will cut it free of charge, see how they cut it and get it cut at least 1 inch, (25 mm.) oversize. Usually a top supplier will charge about a \$1.00 a cut with a liquid cooled band saw. In such a case, you do not require a large waste margin, a ¼ inch will do for you truing operation on the lathe. Make sure that there are no dents or major scratches in the sections that you purchase.

The cones are usually an off-the-shelf reducer and you should have no problems in getting what you want (except for price). The cones normally have seam welds, so check these. You can also get off-the-shelf, any compression fitting, flange, thread, blanking cap, bolts, nuts and washer. What you can buy is only limited by the size of your wallet All certified stock, even the washers, will have '316' written or stamped into the component. If you are using dome ends of varying geometrical configurations, you will have to have them hand beaten or spun to you dimensions. I don't have to tell you that anything to do with stainless is expensive. Think about it three times and buy once only! Consider carefully what cone angle you want to use. For example, a cone reducer from 5 inches to 1 inch can be made in many different angles. Do not assume, that because the end holes are the correct diameter, that this automatically makes the optimum cone angle.

B2. Insulation material and cylinder spacers.

The insulation material that is used where the ½ inch (12.5 mm.) bolt exits the lower cell fitting is not that critical. I have used Nylon, Teflon and similar polypropylene and polycarbonates. They all work fine. Find a plastics supplier and rummage through his bin of rod offcuts, or if that fails, you will have to buy some. The colour is not important. I use a white or off white as a preference. Teflon is by far the best, if you can afford it. I

do not use it. I buy 2 inch (50 mm.) greasy Nylon rod that is far cheaper and that I machine to my final sizes.

The insulators between the cylinders are a different story. These tend to have deposits formed on them over a long (over 6 months) period of time. The can also crack or loose their elasticity causing the cylinders to move, or they will disintegrate or turn to jelly. When I first started on this project, I copied Joe and used rubber " counter hose " as found on the roads in that era for traffic monitoring. This hose material is no longer in use, and there was really nothing special about it, just handy as it was always laying around on some road or other < grin >.

As my cell design developed, I started matching my materials with the Orgone polarity. I found sulphur based product ideal for the acid cell, so now I use ½ inch (12 mm.) ebonite rod. I am not telling you to start using ebonite rod, only that it is a suitable spacer. Ebonite rod is quite cheap eg. ½

inch diameter by a meter long is about AUS \$6.00. In Melbourne you can obtain it from E. C. Menzies Pty. Ltd., 19 Ewing St. Brunswick. Phone is (03) 9387-5544. As purchased, this rod is not polished and you could polish it with fine wet and dry emery paper if you so wish.

You can also use 100% silicon thick wall tubing, or red rubber chemical corks of the right size as recommended by Barry Hilton. I have tried a mixed set of the above in one cell to see which would fail first. I discovered that after 6 months both the silicon tubing and the rubber corks lost some elasticity and although the cylinders had not slipped, in a four wheel drive, rough terrain application, there would have been some problems. A neutral and superior spacer can be machined from Teflon rod and it works very well.

B3. Cell to motor tube.

This one is nice and quick. I have stuck to 1 inch (24 mm.) outer diameter aluminium tube, with a wall thickness of 1/16 of an inch, (about 1.6 mm.) so the inside diameter is 20 mm. It is readily obtainable, reasonably easy to bend, electrically conductive and works well as a guide for Orgone. I standardise on 1 inch (25 mm.) outer tube diameter for all the cells that I make and supply and thus the cells are interchangeable for fault finding and performance checking. I would strongly suggest that the bigger groups involved in cell design, should agree to a set of standards for cell design that are mutually agreed to world wide. This would allow mass production of cells with the related advantage of cost cutting and uniformity. Other diameter of tubes and materials can be used, there is no rigid rule. If you find something that works for you and it is readily obtainable and cheap, please let me know so that I can add it as an update to this manual. For example, I have used normal clear plastic water tubing, covered it with aluminium foil and then I have heat shrunk a plastic sleeve over the lot to give it strength. Not as good as solid aluminium, but easy to form and easy to make when you have no access to solid aluminium tube.

So there you have it for the materials. Low component count, therefore simple and close to Nature.

C. Machining operations.

Machining operations can be broken down into;

C1. Cutting operations.

This is one of the important steps in cell construction. As previously stated, any high speed cutting at the steel supplier's premises will probably involve the creation of heat. Any colour change due to heat in the cutting operation must be removed from the final length of the component. That is why I suggested the oversize margin in B1. If the tube is cut with a liquid cooled bimetallic blade or at low feed speeds with a metal cutting disk, you will not see any colour change whatsoever! When I cut my tubing at home, I simply use a 4 inch (100 mm.) angle grinder in a cutting attachment and slowly rotate the tube as I cut the steel. There is no colour change and I can cut my tubes so close to the finished size that the lathe work is only a truing operation. As mentioned above, I true the tubes and match for length at slow speed in the lathe. The final matching of the cylinders is done by holding a metal ruler across the tops of two cylinders. You should see no light under any of the four contact spots. I match all my cylinders starting at the 1 inch one and work outwards.

C2. Polishing.

This is not a difficult operation. I use about 400 grade emery paper and whilst the part is rotating in the lathe, I polish the internal and external tube surfaces. Do not polish to leave cross hatch marks, ie. do not move your emery paper laterally back wards and forwards at speed. Make you lateral traverses slowly. That's it, no mysterious techniques.

C3. Welding.

I have my parts either Tig, Mig or plain old oxy acetylene welded with 316L rod or wire. Again no mysterious techniques, just a good welder.

C4. Insulators and spacers.

I turn my chosen spacer material on the lathe. I cut off my ebonite rod or Teflon to ½ inch (12 mm.) lengths on the lathe. Ditto, no mysteries. As you can see, there is no laser cutting or matching to angstrom units for part dimensions. Nor is there any submerged welding by highly qualified aircraft experts. All operation can be performed by a handyman or the nearest machine shop.

C5. Press fit operations.

I sometimes press fit components. At all times, as a result of the press fit process, I make sure that I have no change in internal dimension and the press fit is exactly that, ie. not a finger push fit. I clean and " pickle " the surface prior to the press fit operation for about 15 minutes and then

wash off the chemicals in juvenile water. On the external side of the press fit, I deposit a ring of 24 hour Araldite to guard against any weepage of electrolyte. The adhesive you, use whatever it is, must not be accessible to the internal working of the cell, otherwise it will deposit itself all over the cylinders and insulators and diminish or " kill " cell operation.

D. Options.

The following options are possible;

D1. Construction of a charging vat.

The options are related to the cone diameters As explained in A1, I make the small charging vats; Joe, Barry and others make the large ones that use 10 inch (250 mm.) cones. There are variations in the quantity of cones, as used by Joe, and this is covered in detail in Barry's book. I prefer to use 8 cones, 1 reflector, 1 positive, 2 negative and 4 " spacers ". There are also variations in the support method of the cones. I prefer the central Nylon rod. Others prefer spacers between all the cones around the periphery of adjacent cones and an agricultural pipe up the middle of the cones (see Barry's book).

As mentioned previously, unless you are after a vast quantity of charged water or have scum problems, you will not need it.

D2. Construction of 4 cylinder test cell.

You can have the outer container made from glass or acrylic (Perspex), but in all cases, make sure it is clear. The other variation is in the method of extracting the negative, either with a stainless steel strap out the top, or with a stainless steel bolt out the bottom. Again, it is up to you. The bolt out the bottom is a pain, as the container now has to be supported by a suitable stand. Also, the bolt method introduces further costs. For a test cell, it is not mandatory to use a bolt entry from the bottom of the cell.

D3. Construction of 4 cylinder car cell.

See notes for 5 cylinder car cell.

D4. Construction of 5 cylinder test cell.

See notes for 4 cylinder test cell.

D5. Construction of 5 cylinder car cell.

The variations are quite numerous. The obvious ones are the composition of the spacers and insulators. This I have covered and will not repeat.

We have a choice in the way that we " join " the outer cylinder with the cones or domes or plates .

We have a choice in the support mechanism for the inner cylinders.

We have a choice in the geometric shape of our top and bottom " covers ".

We have a choice in the way that we attach the ½ inch bolt to the 1 inch tube.

We have a choice in the outlet fitting type.

E. Assembly.

E1. Charging vat.

There are several versions of the charging vat. There is a thorough coverage by Barry Hilton in his book. I suggest that the reader has a look and then they can decide which version they want to build.

Either way, apart from size and some minor details, the vats are very similar. The one that I am about to describe is my version and matches the previous part list. I will keep this section brief, on the assumption that you have seen Barry's book. As you can see, the photos make the construction quite clear.

E1a.

I will mention a few pointers that may be not clear from the photographs:

- Remove the metal mandrel head out of the pop rivets as the remanent head is not stainless steel and will be magnetic and will rust.
- The stainless steel strap from the two negative cones must not be cut, and thus is one continuous length (as described in Barry's book).
- The function of the O rings, is to allow the gasses liberated by electrolysis to pass via the irregularly cut central holes of the cones. You place one O-ring on each side of the Nylon spacers. So the order would be, one cone, one O-ring, one Nylon spacer, one O-ring and finally the next cone and so on with the next O-ring, etc. until you complete the cone stack.

As you can see, I have left this section very brief on the assumption that most readers will not build a charging vat, or if they did, there is sufficient information above if you study the photos.

E2. 4 cylinder test cell.

I will not cover this test cell, as it is the same as the 5 cylinder test cell, minus one cylinder.

E3 4 cylinder car cell.

I will not cover this car cell, as it is the same as the 5 cylinder car cell, minus one cylinder.

I have however, provided ample photographic views of the construction.

E4. 5 cylinder test cell.

E4a.

The 5 cylinder test cell is similar to the 5 cylinder car cell as described in E5 below. When you complete you 5 cylinder sub-assembly as per E5c, palace it to one side and proceed with next step.

E4b.

Have somebody drill the appropriate size hole in the bottom of the jar to match the stepped washer as per **E5e**. I drill my own hole in the glass, using the right size outer diameter copper tube. I attach this copper tube in a slowly rotating vertical drill and lubricate the copper cutting edge with a mixture of kerosene and fine valve grinding compound. The grinding compound can be obtained from any motor accessory shop. Go nice and easy, and frequently add new cutting paste. Haste means a broken jar, so do not say I did not warn you. When finished, dispose of the ground glass, paste, etc. in a safe way.

E4c. Assemble cylinder sub-assembly to glass jar as per car cell assembly. Do not over-tighten the nut! Fill with juvenile water, test for leaks, etc.

E5. 5 cylinder car cell.**E5a.**

Rather than covering the construction of Mark 1, Mark 2, mark 3, etc. types of cell, I will cover the construction of a 5 cylinder that I consider as the " best " of the simple type of Orgone accumulators that we have called the Joe cell. I cannot see any value in covering the other variants of simple type of 5 cylinder cells, only to tell you at the end to build the one I am about to describe.

E5b.

Make sure that you hands are not oily and re-check that all cylinders are clean. Obtain a kitchen cutting board or a piece of MDF or chip-board or any smooth and level surface will do. We will assemble the cell upside down on this flat surface, as this will ensure that the finished cell will be flat across the tops of the cylinders, ie. the side that is on the flat surface (as this is the critical area!). As your cylinders will not be perfectly identical in length, this method will also place the irregularities towards the bottom of the cell, where it is not as important.

The first step is to prepare our ½ bolt, so that the hexagon head is a tight press fit into one end of the 1 inch cylinder. A minimum amount is ground or turned to off from the hexagon head so that the bolt head is a tight interference fit inside the tube. I have seen bolts with unaltered heads hammered into the pipe. Depending on the bolt, this caused the tube to assume a hexagonal appearance where the bolt head was forced into the tube. It still works okay, but it is not aesthetically pleasing. If you perform the task correctly, there will be a minimum of distortion to the outside of the tube and the water will be able to flow easily in and out the tube via the hexagonal flats of the bolt head, as they are not touching the inside walls of the tube.

The head of the bolt is pressed into the tube until the bottom of the head is in the tube by ¼ of an inch or 6 mm. See diagram and picture. If you

look through the tube you must see adequate clearance for water flow. On the bolts I use, when I finish the lathe work, all the hexagon shape is removed and I have to grind 3 slots in the head with my angle grinder to provide channels for water flow. When you roll the 1 inch tube on a flat surface the bolt shaft should roll with no wobble. This verifies that you have pressed the bolt head squarely into the tube. It is easy to drive some bolts into the tube and not keep it concentric-centric with the tube. The end result is that the whole inner cylinder assembly will be askew and interfere with the proper seeding of the cell.

E5c.

Now take your 1 inch tube and place it upright on your assembly board, with (obviously) the bolt toward your face. Remember that the flat board end of the tube will finish up as the top of the inner cylinder assembly. Take you 2 inch tube, slip it over the 1 inch tube and position it so that there is an equal gap between the 2 inch and the 1 inch tube. As you build up your inner cylinder assembly you will repeat this step with you 3 inch and 4 inch tubes.

- Take 3 of you chosen $\frac{1}{2}$ inch (12 mm.) long insulating spacers and force them into the gap between the tubes at 120 degree spacing. Push your insulating spacers into the tube until they are below the tube edge by $\frac{1}{4}$ of an inch (6 mm.). As I use $\frac{1}{2}$ inch ebonite spacers, I have to file a flat to reduce the overall diameter of the ebonite before I press fit them into the tube. I place this longitudinal flat towards the convex or outer cylinder surface for best friction fit. If you use Teflon or Nylon rod, you will have to machine this tolerance factor into you rod diameter before you cut it up into you $\frac{1}{2}$ inch spacers. Naturally, this problem does not exist with rubber hose or any other malleable material. You will find that if you use a malleable material, with time, your cylinders will sag and you will lose your critical level top line-up from inner cylinder to inner cylinder. In that case, I would suggest that you make a supporting comb assembly under the cylinders to support them. I have made these out of Perspex (acrylic) and they resemble a comb with the teeth facing upwards. The cylinders fit in the roots of these teeth, with the teeth spacing being the gap between adjacent cylinders. Please be wary of the type and quantity of acrylic that you use. Several experimenters have found that some grades of acrylic can short circuit the cylinders if used for separators or support medium. Avoid acrylic and similar materials until you become more proficient with cell characteristics.
- You now reverse your 1 inch tube and do the above, for the top 3 insulators. As the bolt body is obviously in you way when you try to place the tube on your flat surface, you will have to drill a $\frac{1}{2}$ inch hole in your assembly board. I hope that it is not your wife's or girlfriends chopping board or bread board! So now the finished product is a 2 inch cylinder supported by 3 top and 3 bottom spacers with a dead flat relative top surface.

- The above procedure is repeated for your 2 inch to 3 inch tubes, and your 3 inch to 4 inch tubes. I find that for the 3 inch to 4 inch tubes, it is better to use 4 insulators at each end for a total of 8 instead of 6 inter tube spacers. The reason is that the larger diameter of the 4 inch tube now allows considerable flexure and 3 insulators at each end are not enough for a firm fit.
- There is no magic in the alignment of inter tube insulator line-up. Some perfectionists insist in having 3 radial lines (as in three spokes of a bicycle wheel), radiating out from the center, with 120 degree spacing. I have not found this critical. You now have a inner tube cylinder sub-assembly completed. The last step is to put the assembly back on your flat surface with the eventual working top down, and the bolt pointing up towards you. Now with a wooden or rubber mallet, gently tap all the cylinder edges, as to force the eventual top surface to be perfectly flat. Great, put this sub assembly to one side and let's move on.

E5d.

To assemble the outer case of the cell, the following welding and machining operations are required:

- Have your top cone to compression fitting welded together. I would suggest that your compression fitting is designed for 1 inch (24 mm.) outer diameter tube. This way, all club members or larger groups will be able to interchange cells as a help with car conversions. After the above welding, remove any " dags " that resulted from the welding operation. Grind and polish this junction, so that the internal transition from cone to outlet fitting is as smooth as you can achieve, without ridiculous fastidiousness. Check that the joint is water tight.
- Press fit your modified thread to one end of the 5 inch cylinder, making sure that the 5 inch cylinder protrudes slightly below this male thread, so there is metal to metal contact with the lower cap when it is assembled and the 5 inch nut is done up . This step must also allow reasonable compression of the O-ring. See pictures.
- Have the cone welded to the other end of the 5 inch cylinder. As in the step above make sure that the transition from cone to outer cylinder is smooth on the inside. Check that the joint is water tight.
- At this stage, have you outer assembly heat treated to remove the paramagnetism from the welding operation. I do not do this, I use the unit as it ends up after welding and the cell works okay, but to guarantee the success of your cell, I would strongly recommend the heat treatment step. When the unit come back from the heat treatment people, lightly repolish the outside and inside. Also, at this stage, run a bead of 24 hour Araldite, or similar, over the outside only junction of the pressed thread ring and the 5 inch cylinder. This will ensure that you will not have any slight electrolyte weepage from the press fit. This completes the outer case

construction. Place it next to you completed inner cylinder assembly and lets move on.

E5e.

All that is left to do is to complete the lower cap and ½ inch bolt support system. In the middle of the lower cap, you will need a hole that is ½ inch (12 mm.) greater in diameter than the shaft diameter of the bolt. So for example, if your bolt shaft was ½ inch diameter, you would drill a 1 inch hole in the lower cap plate. This allows a ¼ inch (6 mm.) gap that will be filled up by your inner insulating washer.

- You now require a 1 inch (25 mm.) length of thin wall tubing that you push onto the bolt until it touches the lower edge of the bolt head. Make sure that the outer diameter of this sleeve tube is not so large that it blocks the water flow in and out of the 1 inch cylinder.
- The next step is to make 2 washers from Nylon, Teflon, etc. The inner washer will be stepped (see photo). The smaller diameter step will have a 1 inch outer diameter and deep enough to be nearly as thick as the cap material thickness. The outer diameter of this stepped washer is not critical, so about 1.5 inches will do .

The thickness of this larger diameter matches the distance that the bolt is inserted inside the 1 inch tube. So, ¼ inch (6 mm.) is required in our example. This will result in the inner cylinder assembly being 1 inch above the lower cap. This insulator has a central hole drilled through it to exactly match the shaft diameter of the chosen bolt. A tight fit here will minimise and water loss down the bolt and thus out of the cell. The insulator that is on the bolt on the outside of the lower cap is easier to make. Make it about ¼ inch (6 mm.) thick and 1.5 inches wide. The hole in the center is again made to match the shaft diameter of the bolt.

E5f.

Now assemble the inner cylinder assembly to the lower cap plate. With clean hands, place the inner cylinder assembly top down, bolt up, on your flat plate. If not already done, slip your 1 inch long spacer sleeve onto the bolt. Next apply Vaseline (petroleum jelly), liberally all over the bolt shaft and inner washer. Place the inner washer onto the bolt so that the smaller diameter step is facing you and liberally cover this step with more Vaseline. Now place the lower cap onto the bolt the right way round, so that the 1 inch step of the inner insulator fits into the 1 inch hole of the lower cap. Again liberally apply Vaseline on the outer insulator and slip this over the bolt. Next, put you washer, electrical lug and nut on the bolt (see photo). Tighten the nut more than hand tight but not excessively. Check your handiwork, make sure you remove excess Vaseline also ensuring you do not get any on the cylinders or over the inside of the cap plate.

E5g.

Take you outer casing, Vaseline the O-ring and sit it in the groove of the 5 inch male thread. Lower your completed inner assembly and make sure

that the lower cap plate fits snugly into the 5 inch outer tube, without disturbing the O-ring. Take your 5 inch nut and screw it on the thread. Use reasonable force to do the nut up.

E5h.

Fill the cell up right to the top with juvenile water and leave it overnight in an area or surface where you will be able to see any leaks. If there were no leaks, pour out the water and give yourself a pat on the back. Why? Because you are finished. You can now insert fresh juvenile water to the correct level and start your charging operations. Good going!

Chapter 6

" Nature is the embodiment of the simplest conceivable mathematics. "
Albert Einstein.

SEED DIAMETER/HEIGHT RATIO

To calculate the height of the cylinders for maximum efficiency, proceed as follows:

1. As covered in greater detail in the chapter on " Charging the water ", make sure that you have your chosen test current flowing through the cell. I normally adjust my electrolyte to obtain a repeatable current flow of 1 Ampere with 12 Volts across the cell.
2. Place a known voltage across the innermost cylinder and the outermost cylinder. For car use, I suggest 12 Volts from a car battery or equivalent. The negative goes to the inside bottom of the innermost cylinder, (normally 1" diameter), and the positive goes to the outside top of the outermost cylinder, (normally 4" or 5" diameter). Measure this voltage accurately!
3. Now leave one lead of the voltmeter on the inner cylinder, and with the other lead, find the half voltage point radially from the inner cylinder to a point in the water. Do your best to memorise this point. Now place one lead of the meter on the outer cylinder and with the other lead, find the half voltage point radially towards the inner cylinder. Note this point. It will be close to the first measured point, but not necessarily the same point! If there is a difference halve the difference and record.
4. Measure diametrically the distance from the centre of the innermost cylinder to the half voltage point as measured plus the difference, if any. Double this measurement! This is the diameter of the " seed " circumference.

For example on a 4,3,2,1 cylinder cell, the total diameter was 2.24" and for a 5,4,3,2,1 cylinder cell, the total distance was 2.83"

5. By using the natural logarithm of the height of the cylinder, we can interpolate and work out our optimum cylinder heights. The formula is: $h = e \text{ to the power of } d$ (h = height of cylinder, $e = 2.718281\dots$, d = seed diameter). All measurements must be in inches. I have worked out some standard size values for you.

You can easily work out your value from the following table.

Cylinder height	Seed diameter	Cylinder height	Seed diameter
6"	1.79"	13"	2.56"
6.5"	1.87"	13.5"	2.60"
7"	1.95"	14"	2.64"
7.5"	2.01"	14.5"	2.67"
8"	2.08"	15"	2.71"
8.5"	2.14"	15.5"	2.74"
9"	2.20"	16"	2.77"
9.5"	2.25"	16.5"	2.80"
10"	2.30"	17"	2.83"
10.5"	2.35"	17.5"	2.86"
11"	2.40"	18"	2.89"
11.5"	2.44"	18.5"	2.92"
12"	2.48"	19"	2.94"
12.5"	2.53"	19.5"	2.97"
		21"	3.00"

6. So in 4. above, we would use inner cylinders of about 9.4" for the 4 cylinder cell and we would use 17" cylinders for the 5 cylinder cell. If this height is too long for you, you can use the next submultiple for the longer cylinders, ie. 8.5" for the 17" cylinders, etc. There is a corresponding loss in " breeding " output, but as long as your cell is not too leaky and you are not travelling in a strip of low level Orgone you should get away with it.
7. At no stage should you use inner cylinders of a length of less than 7" of cylinder height for the most common cubic capacity car engines. Of course, for test cells, you will be able to get away with lower surface area cylinders. I use 5 inch (125 mm.) high cylinders in my test cell, as this allows me to use less water during experiments.

Final note on the above.

Many many cells have been built without going to, or knowing about, the above table and they all work to a degree, well enough to start the car. As a simple reliable rule that works, use 7 inch long inner cylinders and a 9 inch long outer cylinder for a 4 cylinder cell. Use 8 inch long inner cylinders and a 10 inch long outer cylinder for a 5 cylinder cell.

Chapter 7

" Water is a living substance! "

Viktor Schauberger.

WATER TYPE AND IT'S RELATION TO THE CELL

As seen on the chapter on Orgone polarity, we have the choice of *negative Orgone*, *positive Orgone* or *a combination of both*.

Combined polarity Orgone cells are more suited for use in real Orgone motors and " anti-gravity devices " as used by the people in the know, but the funds, time and permission are out of the realm of the normal back yard experimenter. So as far as these notes are concerned, scratch that option out. A positive cell would require alkalies, different insulators, 316S stainless steel and water with a natural pH of 7 or more. For many reasons, I did not choose to go in that direction.

As I will explain shortly, I choose to make only negative cells, and these notes are based on the construction of negative cells. Do not read negative as not as good as positive. They perform the identical functions, all that we are doing is sitting on the left side of a see-saw and not the right side.

What do I mean by negative or positive cells? Simply stated, a negative cell is based on acidic water and related materials and a positive cell is based on alkaline water and related materials.

Water type

As discovered by many experimenters and holy people, Orgone, or the life force, loves or has a great affinity for water. Just as well, or we and the rest of the planet's " living " creations would not be here. So the first step in our quest to build an accumulator is to provide for whatever we are trying to accumulate, a container or area where we can accomplish this task. Okay, I far as I am concerned, we are trying to accumulate Orgone energy, thus the aim of the game for me, is to provide the most attractive and pleasant area to allow this energy to gather and then I concentrate, focus and utilise the energy before finally releasing it back to where it came from. If we assume for the moment that Orgone will be accumulated by water, the next question is obvious, what type of water, in what type of container, how large? etc.

Here experimenters have gone in all directions and a huge mythology from armchair experts has developed to show the way to the " blind ". Let me state from the start that Reich and others have spent their lives telling us how and what to do. I have compiled a great deal of scientific information, and as such, I am standing on many great shoulders that

have passed before me to give me a better view of the problem, and I claim no credit. The only credit I claim is that I have got up from my backside and have actually done something with this information. So by doing, now I know, like you will, if you ever make a cell.

So, as I am dealing with living energies, it makes absolute sense to me to accumulate these energies in a medium of their choice, ie. in living water! All water is not just plain old water, nor are all pure waters the same, or pure. Unfortunately, the experimenter grasps on the word " pure " and immediately images of " pure " water from the local supermarket or distilled or rain water or his favourite filtered tap water flashes into his head. **No, No, No! I am deliberately belabouring this point as it is critical in the construction of easy seeding, breeding and low leakage cells.** Get your water right or stop reading here and use these notes to light fires.

Okay you say, let's move on, what is this magic water? **Pure water** means that good old mankind did not get a chance to " help " the water to make it better with additives, or the water has not lain around in metal or cement pipes until we want to use it, nor has it been ripped apart by turbines and pumps, nor has it lain stagnant and motionless in the Sun, nor has it flowed next to roads to have all the car combustion heavy metals fall into it, nor has it flowed underneath high tension power lines, nor has it had all the guttering from thousands of houses dump their toxins into it, nor has it had thousands of roads and streets drop its pollutants and waste into it. I mean, you must be getting the drift by now. The water you drink out of your tap is dead, distilled water is dead, tank water from roofs, etc. may be dead and toxic, water you buy from the supermarket is dead, and river and creek water that you may get downstream after it passes through towns and cities is also useless.

I use what I call **juvenile or virgin water**. By that I mean water that I get at the start of rivers or creeks. Juvenile water is like a child looking out for new experiences as it leaps, rolls, swirls and runs in shady, rocky and self selected pathways. It is the life blood of Mother Earth and a living thing. It has the ability to store these " pleasant " memories, or life-beneficial frequencies. I do not have to tell any reader how cold and how invigorating a mountain stream is. That is the right water! We do not want the water after it has experienced the memories and thus the frequencies from mankind's help, unless we can remove these detrimental memories.

I have my favourite water catchment area well outside Melbourne, Australia, where all the above conditions are met. There are no roads, powerlines, dams, pipes or any man made intrusions, the water flows how and where it wants to in natural, twisty downhill paths it has created, the whole area is green all year round and you can feel the vitality and Nature at work. Absolutely beautiful! No wonder that village people in mountain areas live so long.

From " *Living Water* ", a book by Olof Alexandersson:

"...Schauberger did not approve of pumped sub-surface water as drinking water. This water forced artificially from the depth was " immature " - it had not yet passed through the whole of its natural cycle, and therefore in the long term would be injurious to man, animals, and even plants. Only the water that runs out from the soil by itself in the form of springs and streams is suitable as drinking water....Water flowing from a natural source, particularly a mountain spring, acts in quite a different way. Schauburger found that if one drank a litre of this water - thus presumably increasing one's weight by approximately a kilo, - the net increase in weight was in fact only 300-400g. The remaining water must have been converted directly into energy to the body, thereby explaining the enormously enlivening quality that this water gives..."

Again, the above shows the difference in the energy content of different waters. If we relate this energy content to negative entropy that the Orgone energy possesses, we can readily see how it thus combats positive entropy or death that all bodies strive for. Put in another way we live, and so does the Joe cell as a result of taking in Orgone energy in many forms, including water. Also, I would like to distinguish between Schauburger's term " immature " and my term " juvenile ". **Juvenile water** is mature water before it is influenced by the bad memories (frequencies) that good-old-mankind has provided. **Immature water** is water that has not recorded the essential frequencies that Mother Nature provides. As such immature water is not what you should strive for, if you want quick seeding and breeding of your cells.

pH

The water I use in its natural state has a pH of 6.5. That means it is slightly acidic and perfect for the negative cells that I make. I bring this water home making sure that I protect it from excessive sloshing and the heat of the sunlight whilst in the car. At home, I store it in 20 litre Pyrex bottles. Do not store it in plastic containers even if the container is marked " suitable for water ". Earthenware or wood containers would also be very suitable.

So the first thing you need when you find your own magic spot is some 0-14 Litmus paper. This is quite cheap and you can get a small quantity from your nearest swimming pool supplier. There is no use in buying a \$1000.00 pH meter that is accurate to zillions of decimal places. All you want to know is, if the water is alkaline or acid.

The water will be either:

- A. Neutral, ie. pH is approximately 7. In this case the ion level is too low for electrolysis and you will have to add electrolyte. (See Perfect Science note below).
- B. Acid, ie. pH varies from 7 down to 1. As this is what we require for a negative cell, grab some and bring it home.

- C. Alkaline, ie. pH varies from 7 to 14. You may make a positive cell with this, as many people do. I personally am not interested, and therefore, I do not cover a positive cell construction in these notes.

Be wary of any juvenile water with a pH of 5 or less, as the natural water acid level is getting too high due to pollutants or a high concentration of minerals. I personally have not used such water and can offer no guidance.

In the section on cell construction, I cover the stages required to bring this water to the right " working strength ".

Perfect Science water

I will give you a brief summary of a talk by Drunvalo Melchizedek, regarding very wonderful news. The full talk can be found on

(<http://www.transformacomm.com/>)

" ... Some Sufi masters in Turkey have presented to the world with a water that appears to be alive. This water has different effects on different things. It seems to have an optimal effect on whatever it touches.

... This water is called super-ionised water. A company out of Istanbul Turkey, has been started by Ihan Doyuk, and is called Perfect Science. A 48 million-dollar plant has been built in Turkey to produce 100,000 tons of this water a day.

... The only difference is in the number of electrons that are in the outer orbit. ... it has three extra electrons in the outer orbit.... all the scientists and physicists and the chemists of the world have been studying this for the past few years and have been keeping it secret. Not one of them, ... can explain how it is happening. They don't know! ... it appears as though ... it is alive and it knows what it's doing!

... But if you put the wires in super-ionised water, the light bulb comes on. No one has seen that before. That is impossible by everything that we know. And there is a flow of electrical energy through the water, that they are describing as liquid electrons. "

What is so exciting about the above extract is that the water is conductive with a pH of 7! This is exactly what the Joe cell experimenter needs for the electrolysis of the Joe cell without electrolyte. The end result is no more deposits, large ion flow, lower cell maintenance and a far superior cell as an Orgone accumulator. A recent quote from Michel Foisy (michel.foisy@transformacomm.com), is USD\$27.00 for one US gallon and USD\$8.50 for air mail shipping. Worth a thought. I will give at later date, a progress result on the batch that I am testing.

Gojuice

A typical and very suitable mixture is described in United States Patent 5,231,954 by Gene. B. Stowe under the production of a hydrogen/oxygen cell.

For people without Internet I will briefly quote the relevant section;

"...an electrolyte solution can be made by mixing small quantities of phosphoric acid (food grade), sodium perborate (to supply extra oxygen), and acetanilide as a stabiliser, in deionised water or distilled water. The quantities of these chemicals may be varied between rather wide ranges, the object being to provide reasonable flow of current between the two electrodes. "

He goes on (in section 6, 65 onwards), to explain a typical method of making this mixture. I would suggest that if you made the above, you used juvenile water for dilution, and that you leave out the stabiliser as it is expensive and not essential for our needs. The end mixture works extremely well and you will only have to add a couple of spoonful's of Gojuice to achieve 1 Amp of current flow at 12 Volts in you car or test cell.

General notes

It should now be self explanatory that constructors that use water without knowing the pH and then mix it with various chemistry, eg. " caustic soda ", an alkaline that is popular (probably because every house has some) and dubious insulator materials, are doomed to failure. Caustics just loves to chew at insulators. Believe me, stay with mild acids.

You may use vinegar or acetic acid that you use for cleaning the stainless steel and kill two birds with one stone. I personally have made my own mix that I call " Gojuice " as explained above. Acetic acid or vinegar is fine, but, please note that if you use vinegar, as the quantity of vinegar added to the cell is quite large, (by volume) you will have to be careful that the vinegar was made with the " right " water. This would be highly unlikely, so it should be used as a last resort. With acetic acid make sure that it is 90% acetic acid and if you obtain it from a photography chemical supplier, make sure that there is no stabiliser or indicator included in the mixture. It is because of the dubious nature of the water that is used for the vinegar and acetic products that I have taken the far more expensive path of using Gojuice.

In closing let me say, that it would be absolutely stupid to get naturally acidic water then electrolyse it with an alkaline and then complain that you are getting sludge formations and the cell does not work.

Chapter 8

*" When water is agitated and coiled, radio-axially, with light, heat and air excluded,
diamagnetic forces are generated.*

Viktor Schaubberger.

CHARGING THE WATER

You are reading this chapter because, you now have a container of the right water and you are ready to pour it into your test cell, or your car cell.

Preparation

You will need the following:

- A multimeter with an amperage range that can read up to at least 2 Amperes.
- The same multimeter or a meter that can read up to 20 Volts direct current.
- The same multimeter or a meter that can read up to at least 10 Megohms resistance.
- A funnel with a built in filter or a normal funnel into which you can place a paper coffee filter.
- Your chosen electrolyte.
- A battery charger or similar that can supply about 4 Amperes at approximately 12 Volts. Most battery chargers put out much more but, at this stage, it is not critical . You may alternatively want to use a fully charged 12 Volt battery or a power supply. The aim is to have a reproducible voltage with an output current capability of about 2 Amperes.
- A pair of leads that you can clip from the power source to your cell. I would strongly suggest that you identify your leads and clips, so that you will not reverse your polarity to the cell. We want to always place the negative lead to the bottom of the centre cylinder and the positive lead to the top of the outermost cylinder.
- A working area where the cell can be left undisturbed for a period of time, in the worst case, 4 weeks. I know, I know, you are in a hurry! But unfortunately for you, Mother Nature has infinite time and she is in control of this project.
- A top, lid, or some way of sealing of the cell from air. Now, I am not recommending an airtight seal, even a lid loosely sitting on top of your test jar is sufficient. The seeding and breeding process is hampered by having too great an area of the top of the cell being exposed to air. All lids are not the same as regards to being a

obstruction to Orgone. If the lid does not seem to be working, place a layer of aluminium foil (as used in kitchen stoves) underneath the lid and use the foil and lid as one unit.

The charging process

pH The aim is to modify the conductivity of your water by the addition of acid, (in this case) so as to get a suitable and repeatable current flow. If we used de-ionised water with a pH of 7.0, we would have a very low current flow for our electrolysis, and would have to add something to increase the conductivity of the water if we wanted observable results in a short period of time. As we change our pH either higher (alkaline) or lower (acid) away from a pH of 7.0, our current flow and electrolysis process will increase together with the resultant heat increase and the stripping and plating of the metals from the cylinders.

We are trying to achieve electrolysis action with the minimum heat generation and also the minimum metal removal from our cylinders. Also please note as mentioned previously, the propagation of Orgone is reasonably slow, thus there is not much to be achieved with excessive current (and thus electrolysis). Slow and steady does it, just like in Nature. For the patient experimenter or one that is using neat water, ie. water without electrolyte, excellent results are achieved with currents as low as 50 m/Amps.

As we are only interested in acid cells in this manual, our pH will be 7.0 or lower. You will find that to get a current flow of 1 Amp at 12 Volts, your pH will be very close to a pH of 2 to 3. The importance of the pH reading was only relevant during the choosing of the right water as per Chapter 7. In this chapter there is no further use for pH readings during the charging process.

Whilst on the topic of pH, an experimenter has found that with the use of a very expensive digital pH meter, he is able to tell the state of charge of the cell. This theory is not 100% verified at the moment, but is mentioned for the sake of completeness.

Steps

1. Have your cell sitting on a wooden work bench or on a sheet of plastic type material or, as a last resort, on a newspaper. We are trying to insulate the cell from metal paths that may impede the seeding process.
2. Now with you meter set to read resistance, preferably on your highest resistance scale, read the resistance from the inner to the outer cylinder of you cell. It should be in the high Megohm range. If not, your insulators are conductive and you did not follow the previous cell construction recommendations. Remove offending insulators, reassemble carefully, measure and move on.
3. If all is okay in the above step, fill the cell via your funnel with the enclosed filter. Next, and this is critical, fill it only level with

the top of the cylinders and no more! The effect that you want to create is a set of water cells separated by metal cylinders. These are your alternate organic and non-organic chambers. Of course the submerged section of your chambers are flooded, but with this simple cell, the top will be doing all the work. Now you may also realise why the cylinders have to match on the top, as otherwise the meniscus formed by the water would not work and the water would flow from compartment to compartment. This level is only critical during the seeding process, as we require maximum Orgone capture to seed the cell. Naturally, with a charged cell, the water is sloshing all over the place whilst you are driving your car. Joe did say that during charging, the water would find its own level and then use no more. So with long periods of electrolysis, you would find that the above described level is where you would end up with anyway and then the cell would start seeding. With my method, by starting at the right level, you will not waste hours of time creating steam, oxygen, hydrogen and chemical deposits as a result of electrolysis.

4. Turn on the power supply, and if it is adjustable, set it to 12 Volts. Connect the positive end of your power source to the top of the outer cylinder. Connect the negative end of your power source to one end of your meter that is set up to read a minimum of 2 Amperes. Connect the other end of the meter to the bottom of the central cylinder. What we have simply done is set up the meter to read any current flow into your cell from the power source. At this stage, if your water is close to a pH of 7, as previously discussed, the current flow will be zero, or in the low m/Amp region. If you are reading Amps, you are doing something wrong! Contrary to what "experts" tell you, it is impossible to draw huge current from pure water (unless it is Perfect Science water). Think about it. To draw even 1 Amp at 12 Volts, the resistance of the water would have to be, by Ohms law, 12 Ohms! No way! You are doing something wrong. Find the problem and then move on.
5. Presuming that you only read m/Amps, you now want to introduce electrolyte to electrolyse your cell. The aim is to get a standard current flow for your electrolysis. To do this, drip a small amount of your chosen electrolyte into the cell water whilst stirring and watching your Amp meter. Use a glass or Perspex or wood dowel rod for the stirrer, do not use your handy paint-stirring screw driver! Throw away your wood dowel when finished as it will absorb chemistry. Do plenty of gentle stirring of the water as you add the electrolyte, otherwise you will add too much electrolyte! Stop adding electrolyte when the meter indicates 1 Amp. Your water level may rise as a consequence of the addition of electrolyte. Remove some water out of your cell. I use a pipette, so as not to disturb the cell. Remove enough water to again just expose the top of the cylinders. At this stage,

disconnect your meter and power source and have a bit of a clean up as the next stages are observation.

6. The charging process is separated in three distinct stages that I call Stage 1, 2 and 3. These stages have some obvious differences and also some subtle ones. With experience you will know immediately if the cell is charged, but in your early attempts you will have to rely on my photographs and description or visit someone with a working cell. Do not listen to armchair scientists. One look is worth a thousand words.
7. For the rest of your charging process, you will be only connecting your power source to the cell for a maximum of 5 minutes at a time. As Orgone lags electricity by about 30 seconds, you will know the state of the cell in less than a minute. Do not be tempted to leave the power connected to the cell for long periods! Yes, I know that you are in a hurry and more is better, but in this case you only generate heat, steam, waste power and overheat the cell. You can pick the failures by seeing their cells running non-stop for days with 20 or more amps turning the water to steam, etching the cylinders and ending up with a barrel full of scum. What else would you expect? After all, electrolysis is time and current related. If you have had the misfortune of having your cell left on for a long period with high current, you have probably destroyed your cylinders. You cannot polish this etching or plating out. Yes, you throw the cell away and start again. I bet you don't do it next time!

DANGER!

Do not charge any cell that is totally sealed! The cell will explode, with all the related consequences. Always remove the lid or unplug the car cell before doing any charging. I repeat, an airtight seal IS NOT REQUIRED! At no stage do I prescribe any form of airtight container.

Stage 1.

This stage is plain old electrolysis. Due to us passing a direct current through a liquid that contains ions, chemical changes will occur. In our case, you will see small bubbles and a cloud of activity that is greater nearest the outside of the inner negative cylinder. The important observation points are that the activity is greatest nearest the central cylinder and gets progressively less as we move outward via the different chambers formed by the rest of the cylinders. Additionally, within a short period of turning the power off, all activity stops, the water becomes clear and the bubbles disappear.

Summary stage 1. Every fool and his dog gets to this stage. The secret is not to increase the electrolyte and thus the current and/or leaving the cell on for days on end. Be patient, leave the cell on for no longer than 5

minutes, turn the power source off, remove the leads to the cell, and put the top on the test cell, or partially block off the exit of the car cell. It does not have to be airtight! Go and do something else. It is like waiting for a tree to grow from the seed. Do this on a daily basis for days or a week or longer until you get to stage 2. You will find that the more " alive " the water is , the quicker is the seeding of the cell. I have found that the storage, age, and source of the water all affect the seeding speed. I have also found that by changing the structure of the water by various means eg. vortexing, shaking, filtering, etc., you can greatly enhance the water quality to make it more " alive ".

Stage 2.

You will now notice on your initial powering up of the cell, that the bubbles are getting larger and the white cloud of tiny bubbles in the water are much smaller or more transparent. Also in stage 1, you had the action occurring mainly in the proximity of the central cylinder. Now the bubbles form in a regular fashion irrespective of location in the cell. More importantly, on turning the power off from the cell, the bubbles do not go away immediately but stay there for minutes rather than seconds as in stage 1. Also, the top of the water assumes a glazed look and the meniscus is higher due to a change in the surface tension of the water. At this stage you may have some brownish material amongst your bubbles. Don't panic. It is only the impurities being removed from the cell. I find that if I wipe the top surface of the water with a paper towel, the bubbles and the deposit will adhere to the paper and can easily be removed. Top up the cell, if required, after the above cleaning, so that again, only the top edge of the cylinders are just showing.

Note. All topping up of the cell at any stage is done with plain juvenile water only. No more electrolyte is added! In cleaning the top of the cell as described, it has been observed that some people react unfavourably with the cell. If so, keep that person away, or if it is you, try changing you hand ie. use your right instead of your left or vice verse. If the presence of your hand seems to collapse the surface bubbles, I would suggest you have a friend do the work for you.

Summary stage 2. Very similar to stage 1, but now we have a more even bubble distribution and an increase of surface tension and a longer presence of the bubbles when the power is turned off. If you look in the bottom of your glass test cell, you will have no scum and the water will be crystal clear.

At this stage the Orgone force has seeded the cell, but as yet, is not breeding. With the right cell, water and operator, it is possible to go straight to stage 2 on the first turn on of your new cell. I have this occurring every time with modified juvenile water.

Stage 3.

Not many people get to this stage, or what is worse, get here incorrectly. If you get here following the above steps, your water is still crystal clear with no deposits in the sump. If you get here by brute force, you will have stripped appreciable amounts of material from the cylinders and this material will now deposit on the insulators and hang around as a colloid and finally form in the sump as a deposit. The low resistance insulators and the metallic colloid will create a more leaky cell that will cause endless mysterious car stoppages or refusal of the car to start etc. Right, the miracle of Nature is now breeding in your cell. Upon turning your power on to the cell, within 30 seconds copious beautiful white bubbles will rise from all the surface area of the cell. Before these bubbles cover the water surface, you will notice a slowly rotating and pulsing front in all cylinders, that is synchronised and has a regular rhythm of about 2 pulses per second and a clockwise rotation speed of about 1 revolution every 2 seconds. These effects are very hard to observe for a first time viewer that does not know what to look for. I find it easier to watch these effects with the aid of a fluorescent light, as the 100 cycles per second pulsations of the light "strobe" the water surface and help the observation.

The bubbles may overflow the container and show great surface tension. But one of the definite proofs that the cell is breeding is that, on turning the power source off and coming back the next day, most of the bubbles will still be on top of the water as opposed to stage 1 or stage 2 where they disappeared in minutes. Please have a look at my photo sequence.

Summary stage 3. There is no way that you can mistake this stage once you have seen it. Some lucky people can feel the living energy and can react with it, Reich's "Y factor". For the rest of you normal people, the signs are radically different. The bubbles are larger and pure white, the surface tension is greater, the bubbles are pulsating and most **importantly the surface tension remains days after the power has been removed.**

Additional note

Additional note for the desperate electronically inclined individual. Please note. I do not recommend any additional tests or measurements, your eyes and brains should suffice, but if you are in trouble, you may measure the voltage across the cell after it has been left standing with the power off for at least 24 hours. A live cell will have a residual voltage, or more correctly, a self generated voltage of around 1 Volt. A stage 1 cell measured under similar conditions will read .1 to .2 of a Volt. Remember, that unless you know what you are doing, these voltage measurements can be very misleading due to probe materials and battery effects that can easily mask your true measurement. As the cell reaches the maximum density of Orgone that it can hold, the result of the breeding process is the conversion of this excess Orgone into the formation of electricity. As

such, electrical measurement with the correct instruments is a very valuable method in the verification of the efficiency of the cell. If you are conversant with Reich's work, you may care to make an Orgone meter and thus remove all guesswork. This meter is fully described on a few web site as mentioned in my bibliography.

Final comments on charging the cell

I do not recommend any form of circus type of bubble exploding, ear pulling showmanship. As noted elsewhere, noise and vibration are Orgone-negative. Therefore, in a negative Orgone cell like the ones I make, these explosions applied during the delicate seeding period will kill your cell! Apart from a dead cell, the chance of fire igniting other gasses in the workshop and injuries to the ears etc. makes this childish exercise highly unnecessary. I must admit that I too fell for the " go on, ignite it! " feeling. I had a cell that had been at stage 3 for 7 months. It was my favourite test cell. My hands and matches fought my brain and they won. There was a huge " ear-pulling, implosion/ explosion ", and yes, I killed the cell. It went back to stage 2 for 4 days. I will not do it again, just showing you that I am also human. On the plus side, my resident garage brush tail possum has not returned!

Special stage 3 water, (referred to in chapter 11.)

As all water we are using so far has been electrolysed, this water is not suitable for use in non-stainless steel or glass containers due to reaction with the container and the resultant corrosion, but if you have to, or want to, you can use juvenile water with no electrolyzers added and still charge it to stage 3. As the ion count is much lower, the water is not as conductive, ie. you cannot get as much current flow with 12 Volts as you would if you electrolysed the water. However, if you obtain a power supply of approximately 60 to 100 Volts at about 1 Amp, you will be able to charge " plain old ordinary water ".

The down side is the additional waiting, in some cases, over 3 weeks, and the cost of the fairly expensive power supply. The advantage as mentioned in chapter 11, is that you will be able to pour it into the radiator of a car with no increase in corrosion as compared to water containing acids.

Miscellanea

Do not at any stage short circuit, ie. join any of the cell cylinders to each other electrically with your charging leads, wedding ring, etc. If you do, the cell will " die! ". Your only option, if this occurs, is to connect the cell to your power source and see if you are still running in stage 3. If the cell does not revert to running in stage 3 mode within 1 minute, your only option is to completely dismantle the cell and re-polish, re-clean and re-charge. Huh???, you are kidding us, right??? No, I am serious, that is your

only option! So do not do it, do not short out your cell! You will have similar, but not as severe problems if you reverse your leads to the cell. When the cell is running stage 3, you can tip the charged water out of the cell into a glass container and clean, adjust or maintain your now empty cell. Try to keep all cylinders in the same relation they were in before you dismantled the cell, ie. keep all cylinders the same way round and in the same radial alignment. Mainly relevant when dismantling old cells (over 6 months old). This is required as the metal parts develop a working relationship that can be weakened or destroyed by careless re-assembly. When finished, pour the charged water back and you are back in business. Of course you can pour this charged water into other cells, or use it as you see fit, but, remember, do not leave it out of the cell for periods longer than 1 hour at a time as the breeding has now stopped and you are slowly losing charge.

Remember what you are dealing with. You are not making a toaster! You are dealing with the basic life force itself. As it is everywhere and penetrates all things at different speeds, you cannot imprison it or capture it. If it seeds your cell, it is because it has found the " womb " that you have made, a more comfortable place than where it was before. It has entered and remained of its own free choice. Similarly, if it decides to breed for you, again it is it's choice. As you are part of the process, the least that you can do is to positively interact with it. There are many accounts of cell dying due to locations and personalities involved. You have been warned!

Chapter 9

" The essential is to get rid of deeply rooted prejudices we often repeat without examining them "

A. Michel 1959.

CELL CONNECTION TO MOTORS AND MOTOR MODIFICATION

Cell location and mounting

The mounting of the cell is full of compromises, both for the cell and the occupants of the car.

- For least vibration and tilt, the center of the car is the best location.

- For least heat accumulation, low down in the interior of the car is the best location.
- For least electro-magnetic disturbance, the boot is the best (unless there are CD stackers,
- radio gear or electric fuel pumps in the boot area).
- For best Orgone flow, the cell should be as close as possible to the motor, and the outlet should have only a vertical path to the blind plug.
- For cell servicing, it should be in the boot or similar easy access points.
- To keep human interaction to the minimum, the rear bumper bar is the best location.
- To keep interaction with other cars to a minimum, the center of the car is the best location.
- To keep the outlet pipe to a minimum length, right next to the block is the best position.
- To minimise interference with the car electronics, a roof location is best.

As you can see, even in the brief list above, there is no one location that is ideal. The very best compromise is placing the cell in the foot-well on the passenger side, and having a hole through the bulkhead with a short tube run to the blind plug on the block. If you choose this position, please note:

- This may be dangerous in an accident and thus illegal, and you must obtain the approval from the related instrumentalities.
- The hole through the bulkhead must be gas-tight as there is a danger of lethal gasses entering the occupant area. Again, the related permits are mandatory.
- The location of the cell may interfere with any car computer that is located in this area.
- The passenger may interact with the cell.
- It will reduce your resale values due to the holes.
- Your insurance company will have to be notified with a logical explanation for your handwork.

The second, less frowned upon location, is in a cold area of the engine compartment. This is just about impossible in a compact car, unless you have an older 6 or 8 cylinder model.

That is why I have said it is better to choose a car suited to run on a Joe cell, rather than trying to run your modern 4 cylinder front wheel drive compact from it. Your chances of a successful first-up conversion of a fuel injected, variable cam timing, turbo, computer controlled and twin overhead cam compact 4 cylinder car is minimal.

The mounting of the cell, once the position is chosen is not difficult. The simplest and most permanent method is to use the half inch negative bolt as one of the fixtures for the cell. As this bolt is the negative connection, it can be directly bolted through the floor or via a convenient piece of metal plate to a suitable point in the engine compartment. The cell itself should be surrounded by an insulating material similar to a computer mouse mat

or diving suit material. Around this you would have two hose clips to hold the body of the cell against some rigid part of the car. The aim is to stop the cell developing its own vibration that is additional to the vibration generated by the engine and the road conditions. All parts of the cell must be well clear of any metal parts at all times as the cell body has a positive potential on it. If you accidentally touch a charged cell body to any metal parts of the car, you will probably have to recharge the cell, and you know what a pain that can be.

To summarise the above, the cell must be firmly fixed in the best possible location and protected from any accidental contact with any metal parts of the car. Any car modifications must have the approval of the relevant government bodies.

NOTE. I am presuming that you have a reasonably modern car that has the negative end of the car battery connected to the bodywork, ie. a negative earth system. If you have an older positive system car, then to the best of my knowledge, you will have problems, and I suggest that you do not attempt a conversion of a positive earth system car. As most of these have gone to car heaven, there should not be too many around. A good indicator is that the car runs a generator instead of an alternator, but this rule only applies most of the time, and there are exceptions.

Cell electrical connections

Negative connection.

The above section has mentioned that we are dealing with negative earth cars. This means that the negative end of the battery is connected to all the metal work of the car. As the inner one inch cylinder and the included bolt are the negative end of the cell, this bolt may be connected to any substantial metal part of the car. Make sure that you remove any paint or sound-deadening material from the hole that you have drilled for the half inch bolt, and use a star washer on both sides of the hole in the metal work to guarantee a long lasting low resistance connection.

Positive connection.

All parts of the cell and engine tube are at a positive potential. The best point to connect our positive is at the far end of the engine tube. I connect my positive lead under the four inch long section of neoprene hose (between the aluminium tube and the hose), and secure the cell end ONLY of the rubber tube with a stainless steel worm drive clip. This creates a good electrical connection between the lead and the cell-to-engine tube. This positive lead should go via a five amp fuse in series to the " ignition on " power distribution. What this means is that there is only power to the cell when the ignition key is in the normal car running position. As the cell has been made to only pass one Amp, the resultant power consumption of

the cell with the car running will be 12 Watts. This is a fairly conservative cell dissipation, but will eventually heat up the cell on a long trip and a hot day. Please read Regulation section below.

When the car is not in use, and depending on the leakage of the cell, you may require a " trickle charge " current to flow through the cell to maintain a minimal breeding condition. Joe employed a 1.5 Volt battery to accomplish this in his early days. I would suggest a current flow of 0.25 Amps to accomplish this. This is a power dissipation of 3 Watts. If you connect a resistor of about 3 Ohms in series with you positive lead, you will achieve the above. This value will vary from cell to cell and you will have to select on test the actual resistor to be used. In all cases a 4 or 5 Watt wire wound resistor of the appropriate resistance value will be adequate. Make sure that this resistor is suitably mounted as it will get warm and you don't want to start a fire.

Regulation.

As you can see from the above, we already have two values of current flow (a running value and a trickle charge). The simplest way to achieve this would be a changeover switch that introduces a series resistor when the car is not running. But, as most people will forget to operate this switch every time they turn the engine off, an automatic system is far superior and probably essential. This is easily achieved with a relay connected to the " ignition on " distribution. With this method, when the car ignition is off, the relay is released and the appropriate resistor is in series with the positive lead and the cell. The cell now only has the trickle charge current flowing through it. When the ignition is in the run position, the relay now operates, and the resistor is shorted out by the relay contacts. The cell now has the full 1 Amp flowing through it. Obviously, when the ignition is turned off, the cell reverts back to the keep alive current mode.

During the early experimental and development stages, I would recommend a variable 5 Ohm, 5 Watt, wire wound potentiometer and a series 0-5 Amp ammeter. With this system you will be able to optimise you running and trickle charge currents and finally choose the optimum resistors for both modes. Also, you will be able to find exactly how much current you need for optimum cell output to suit the climatic and driving conditions. The reason is, that as the cell heats up it draws more current. Yes, you will have to experiment!

Cell-to-engine tube

Previously, I have mentioned that I use 1 inch (24 mm.) outside diameter aluminium tube. The inside diameter of the tube is $\frac{3}{4}$ " , so the wall thickness is $\frac{1}{8}$ ". I am not telling you that this is the only diameter or material that works. It is the material and diameter that others, including myself have standardised on to allow for ease of interchangeability for fault finding and experimentation. The length of this tube should be as short as possible without using sharp bends. All bends

in the tube must have smooth and progressive direction changes with no distortions. The tube should be covered with insulation similar to what is used on hot water pipes and car roof racks. Reduce any horizontal runs of the tube to a minimum. Similarly, do not use any U-bends that forces the Orgone to change directions from an upward to a downward run. A good example of how not to mount the cell is seen on the amigo web site (http://homepages.tig.com.au/~amigo_s/joe.htm). In the photographs, this cell is mounted above the car with a severe downhill run to the motor. Although aluminium is a good barrier for Orgone, the energy is still leaking out the tube. As you now know, Orgone has a upward vertical tendency and therefore the best position for the Joe cell is as low as possible, so the Orgone can flow upwards to the blind plug and thus the motor. In most engine installations, you will need some " downward run " of the tube. It will still work, but keep any of these runs to a minimum. The inside edges of the cell end of the aluminium tube must have a radius that reduces gradually from 20 mm. inside diameter to the outside 24 mm. diameter of the tube. So if we are looking up the inside of the cone towards the compression fitting and the aluminium tube, there should be no sudden change of diameter to upset the flow of the Orgone. This area, where we are forcing the Orgone to create a beam that goes down the aluminium tube, is critical. Keep all inside surfaces polished and do not have any obstructions whatsoever in the flow path.

The engine end of the tube has a section of about 4 inches of neoprene rubber hose pushed over the aluminium tube and the blind plug. If you have 1 inch length of tube on the blind plug and 1 inch length of tube over the aluminium tube, you end up with a non metallic gap length of 2 inches. This gap is vital as the motor is at negative potential and the aluminium tube is at positive potential. We must never let any portion of the cell or tube touch any part of the car or motor. That is why I have suggested that you should insulate your cell and tube.

I have mentioned previously that our positive lead is under the 4 inch rubber sleeve and is held secure to the aluminium tube by means of a worm drive clip. The blind plug end of the 4 inch tube must not have any form of clip on it! This end of the rubber sleeve performs the function of a one way valve for the Joe cell. When you push the rubber sleeve over the blind plug, please make sure that you cover the inside of the sleeve and the outside of the blind plug with Vaseline (Petroleum jelly). The following will now occur. As a result of electrolysis in the cell, every now and then, the excess cell pressure will vent to the atmosphere via the loose coupling between the rubber sleeve and the blind plug. But when the pressure drops, air will not be sucked back into the cell. I have found that this valve enhances the duration of the breeding process. I repeat, the blind plug end of the neoprene 4 inch sleeve must be free to allow the release of excessive pressure build-up. If you keep your cell electrolysis to 1 Amp or less, this venting is minimal. All the same, the gasses are explosive, so take the appropriate safeguards. Imagine what would happen if the cell could not vent excessive pressure. The pressure in the cell will keep building up until the

weakest point lets go. This, in all probability, would be the rubber sleeve. If you were super stupid and really clamped and glued the hose down at each end, the tube will sustain over 100 psi before letting go. This would release a high pressure stream of **HIGHLY EXPLOSIVE GASSES!** This could be ignited by the distributor points, cigarettes, static electricity, exhaust system, etc. **PEOPLE COULD BE KILLED OR SERIOUSLY INJURED!!!** Please, if you are not competent, don't do it, or seek a professional. Read my disclaimer!

The optimum and smart solution, is to use a 1 psi blow-off-valve that vents the waste gas into the air intake after the air cleaner. The waste gas will now be drawn into the motor and the air cleaner will act as a flame arrester. That is the smart, safe and logical solution. I use a low pressure electrical switch/pressure assembly as used on washing machines to monitor the quantity of water in the wash bowl. I set this switch to operate at 2 psi. When the pressure switch operates, it electrically operates an air solenoid that allows the excess pressure from the cell to be vented into the intake manifold between the air cleaner and carburettor.

The only other danger is that you did not follow my instructions, or you have decided that you know best, or more is better, and you boosted up the electrolysis action. As such, you will have excessive venting, and sooner or later, you and your experiment will part, suddenly and violently. Please, please, put your brain into gear before playing around with explosive mixtures, or better still, leave it to professionals

Blind plug location

First and foremost, the 1 inch long section of the blind plug that the neoprene tube slips on, **must have the same outside diameter as the inside diameter of the neoprene tube**. Therefore, if you are using 24 mm. outside diameter tubing and the inside diameter of the tube is 20 mm., then the outside diameter of the blind plug must be also 24 mm. The neoprene sleeve (24 mm. inside diameter) must not be a force fit onto the blind plug. Do not economise or compromise this fit. Your life and the life of others may be on the line! The sleeve must be an easy push fit over the blind plug. The blind plug should be made out of aluminium and the final shape will be determined on the mounting location on the motor. The aim is to introduce the Orgone " beam " of energy as centrally as possible on the motor and as close as possible to the water that is circulated around the cylinders. There have been many locations employed, and they all work to a degree, ie. a blind plug on the intake manifold, a blind plug on the back of the head, a blind plug on the block, etc. My suggestion for 4 and 6 cylinder motors is to place the blind plug on the block near the head gasket line and as central as possible (midway between the cylinders). The V8 cylinder motor design is ideal as the blind plug can be centrally located on the water heated part of the intake manifold. Be careful with older 4 and 6 cylinder motors as one side may have the push rods, tappets and cam shaft located inside the block. As

such, you will not be placing your blind plug against the water jacket. Sometimes you may be able to remove the Welsh plug from the optimum location and machine one end of the blind plug to fit this circular opening. Make sure that you do a professional job of this, as a plug that falls out means a loss of all water and probably the motor! Some individuals claim that they have placed the blind plug on the carburettor or even the air cleaner. I have my doubts, but as I have not verified these claims, they may be adequate, but in my view far from optimised. There is a story of a professor that made a Joe cell as a replacement for the air cleaner and it worked for a while until it collapsed due to the stainless steel being too thin. Again, I cannot verify this story, but it would be an ideal method of eliminating the engine pipe and blind plug entirely. Just some more ideas for the fertile brains that may be reading this manual.

I suggest that you secure your blind plug via two Allen bolts and suitable tapped holes on your chosen location. Make sure that the mounting surface of the blind plug matches the contour of the block or head or manifold at the chosen fixing point.

The blind plug must be mounted on the opposite side of the exhaust system on cross-flow-head motors. This is another reason why the V8 motor or a horizontally opposed motor is so superior in its conversion to Orgone energy. We want to stay as far away from the hot and exit side of the motor as possible. If you have a siamesed exhaust and intake manifold motor, you are really making it difficult for yourself. Unless you know exactly what you are doing and have performed a previous conversion to give you faith in yourself, I honestly think that you will not have any success.

You can again see from the above why Joe's Rover started first up on the cell, yet other motors took weeks to condition before any results were achieved.

Ignition timing

Volumes have been written about this topic by arm chair scientist who try to explain their pet theories on implosion, explosion, both implosion and explosion, or any other pet combination you may care to think of, and therefore have to shift the timing anywhere in the 720 degree engine cycle to make the motor run on their theoretical mind projections.

I will again repeat, forget the theories and JUST DO IT! It is really simple. I will again tell you how I do it. Preferably have a car that has an electrical fuel pump and a switch that you can turn the pump off with. If you have a mechanical pump, fit some type of adjustable clamp on the neoprene line that goes from the tank to the fuel pump input. Or you may want to suck the fuel into the fuel pump from a 5 litre metal petrol container.

NOTE, this method is dangerous as you are working with exposed petrol. Whatever system you adopt, all you are trying to do is to control the flow of petrol to the motor.

Next, loosen the clamp that holds the distributor, but do not as yet shift the distributor body.

Start the car on petrol and let it warm up. Make sure that your Joe cell is electrolysing.

Let the engine warm up and make sure that it is hot enough so that the choke has gone to the normal running position

Remove the fuel flow to the engine by your chosen method.

Within a short period of time the car will start to run erratically.

Rotate the distributor to advance the spark plug firing until you get the best possible idle

speed.

Keep doing this with progressively smaller and smaller to and fro rotations of the distributor body over the next few minutes. The last adjustment will be very precise as the engine will falter either side of the optimum adjustment.

You will find that the distributor will roughly end up at between 35 and 40 degrees before top dead center (BTDC), which converts to 70 to 80 degrees advance on the crankshaft.

If your cell has taken over, your engine will keep running. If the cell has not taken over, the engine will stop as it will run out of fuel and that is it. Go to the fault finding section. If the cell has taken over, tighten the distributor at its new location. When the excitement wears off and if you are still sober, take the car to a garage with a wheel dynamometer and optimise the engine timing for maximum power. Do not let the mechanic anywhere near your exhaust system with a gas analyser, as there will be no reading on his gas analyser and you will really have to do some fancy explaining.

Standard ignition timing

I would now like to clarify a few points on ignition timing for non-mechanical individuals.

* In all spark ignition engines, it is necessary to arrange for the spark to occur a little before the piston has reached the upper limit of its travel of the compression stroke. It is usual to express this ignition advance requirement in terms of degrees of crank angle before top dead center. (BTDC).

The danger of this term is that it can be measured at either the crankshaft or at the distributor. As the distributor runs off the cam shaft and thus at half engine speed, the distributor measurement will be exactly half the crankshaft measurement. So when we talk of 10 degrees BTDC at the distributor, we really mean 20 degrees BTDC at the crankshaft. This misunderstanding has caused huge confusions for the casual non-informed reader. For example, when Joe states that the Escort runs the best at 85 degrees of advance, what is he talking about?

As mentioned at the start of this sub-section, a spark plug ignites once every 720 crankshaft degrees or more simply, every two revolutions. At idle, most motors are set to fire the spark plug at between 5 and 15 degrees BTDC at the crank shaft. As the revolutions or the motor increase, the distributor mechanical advance section or the car computer, advances the timing (or makes it fire sooner) until we reach an advance of about 35 degrees BTDC at the crankshaft for normal motors and normal

fuels. With 100 octane aviation type fuels, this advance on racing cars can be as great as 60 degrees BTDC.

So really, when Joe states that 85 degrees of advance is required for an Escort motor running on a Joe cell, it is no big deal as it is very close to a setting required for an engine that is running a high octane, slower burning fuel. It does not even remotely hint at implosion or the like.

To conclude, as we do not know exactly how and what powers the motor, all academic armchair rubbish is exactly that; rubbish. Make your cell, connect it as I recommend, time it as I recommend, get the car running, and then start your analysis and arm chair battles.

Motor modifications

For the initial start up from the Joe cell, an aluminium V8 motor will not require any modifications apart from a change in timing as described in the previous sub-section. Other motors will require a varying time of "conditioning" before being finally ready to run on the Joe cell. Then you will have to change the ignition timing as described.

As the Orgone energy is primarily attracted to the water jacket around the motor, most of the energy will be "stored" in a latent state in this area. That is not to say that there will not be a varying density of Orgone in other sections of the motor or in the nearby vicinity of the cell and of the car.

Joe does make quite a few references to what he call a "sealed engine", as is the case with the Rover motor and most modern motors as well. Basically if you remove the oil filler cap, you should notice that the idle revolutions of the motor will change, as you have disturbed the positive crankcase ventilation (PCV) path. In older motors, the blow-by gasses that passed the rings and ended up in the crankcase were dumped via a breather pipe directly into the atmosphere. These type of motors were not "sealed". As the pollution laws slowly changed around the world, these type of blow-by products were frowned upon and the car manufacturers had to come up with an alternative method for their disposal. The modern solution is to collect these blow-by products, and re-introduce them into the inlet manifold via a PCV valve, for their subsequent mixing with the fuel mixture and resultant combustion. If, for example, you remove the dip stick or the oil filler cap, you have effectively opened this system which is under atmospheric pressure, and you thus change the idle speed, as you have introduced an air leak on the engine side of the carburettor or fuel injection butterfly throttle control. You have also interfered with the Orgone density and its relationship with the air! Remember how I have been harping on for you to keep the top on the test cell when it is not in use? Well, the engine is just a larger more complex test cell. We do not want to introduce our Orgone energy to external air until we are ready! And we are only ready, when the piston goes down the bore creating a depression and thus causing an external flow of air to come in via the intake valve.

If you are having trouble in getting the motor to run on a Joe cell and have exhausted all other possible areas of problems, please also consider the internal crankcase ventilation system as explained. You will only have

problems in this area with a fairly old motor, or a motor that has been modified or that has developed a fault with the PCV system. Simply try the "remove the oil filler cap trick".

Beyond the initial short term test running of the motor on the Joe cell, each motor and car will develop its own type of idiosyncrasies. As my personal list of converted cars is very small, I have very limited guidance for you in this area. I will mention the little that I know in this area and at least start a list that can be added to when YOU and others give me feedback on your own conversions that I can use for the update of this manual. Sadly, I have found that most converted car owners prefer to guard their knowledge and hope to keep it secret and thus have a longer run on the free energy before the mighty hand of bureaucracy places a ban on such work. So be it, we are all different and they are entitled to their view. I do sometimes wonder why I am giving thousands of hours and thousands of dollars of my personal time and money to such people. Anyway, on with the list of long term modifications:

The engine runs cooler. As such, a winter oil and antifreeze seems to be the logical fix.

The top-end runs hot and dry. The normal petrol motor utilises the incoming petrol/air charge to perform considerable cooling of the intake valve and seat. Similarly a leaded petrol engine uses the lead or its equivalent as a lubricant for the intake valve guide, valve and seat. With modern unleaded or gas motors this problem is taken care of with harder valves and seats and a different type of valve guide. If you are using an older type of motor, it may be beneficial for the long term life of the motor to use one of the many types of upper lubrication kits that are readily available from various auto accessory outlets.

Instruments and sensors burn out. I do not know of a fix for this, as it is very difficult to shield

a breeding cell. Remember that as a result of reaching Orgone saturation in the water, the

excess Orgone is converted to electricity. These potential's can be quite high under favourable

conditions and will happily destroy electrical equipment. One possible fix is to place Zenner

diodes or similar voltage sensitive "trip" circuits across voltage sensitive components to by-pass all voltages greater than 15 Volts. It may work, I have not tried it as yet.

The cell interacts with the car occupants. Apart from making the cell non-leaky, I cannot

think of even a possible solution to this one.

The cell runs hot after hours of use, eg. a taxi. The cure is to control the electrolysis current

to the minimum possible without noticing a performance change. As the cell heats up, you

have a thermal runaway effect. So as the cell gets hotter, it flows more current, that heats it up some more, that flows more current, etc. As

previously mentioned, a variable electrolysis control with an ampmeter would be ideal

There is no reports to hand that I know of, that goes into the long term wear and tear of the motor running on the cell. The highest km's that I personally know of on a cell, is less then 10,000 km's and as such is still far too early for any form of appraisal.

Chapter 10

*Do not over analyse or overexperiment.
This will destroy the experiment and it's creative Orgonomic force.*
Dr. Wilhelm Reich

WHEN THINGS GO WRONG

Well, my dear reader, you are reading this section for any of a number of reasons, some are:

- A. You always read a book or notes from cover to cover before you start a construction project. Great, good idea, read on.
- B. You are an armchair scientist and you are reading this information to see how it fits in with your own pet opinions on the subject. Good luck and I hope, if you find something to contribute, you will do so freely and in brotherly love.
- C. You are reading this chapter because you have made a cell by other methods and are looking for a quick fix. I would strongly recommend that you read and absorb all the previous chapters, as you may have a borderline cell and it may be better to construct a new cell.
- D. You are here because you have followed exactly, all my suggestions, and your car will not run on the cell.

In the above, I am only interested in reader D.

Approach to the problem

All problems, irrespective of complexity, can be solved in a methodical, rational fashion. If it looks insurmountable, break it down into convenient smaller sections that you can cope with. Have this smaller section cover one topic only. Make sure that you have a working knowledge of the topic. Take your time, and have somebody else to talk with regarding your chosen solution and approach.

It is important that you change one variable at a time only! If you change variables in a haphazard method or without recording your observations, at the end of the day, you will be worse off than when you started. I would suggest that you break up your problem into the following topics.

Fault finding topics

- 1) The water.
 - a) Cell maintenance.
- 2) The cell construction.
- 3) The charging operation.
- 4) Cell-to-car interface.
- 5) Car modifications.
- 6) Geographic location.

7) The Y factor.

1. The water

The single most common problem that you will encounter is the water. As Joe remarked on many occasions, the " water goes bad ". Not a scientific explanation, but well said. So, what are some of the problems with the water?

- A. Is the water dead or polluted right from the start? If you collected, transported and stored the water personally, you should know its history. Re-read Chapter 8. If you still doubt your water, try the following. Orgone accumulates in water, and as such, when you transfer the water out of the cell, you take the charge with it. Therefore, if you, or an acquaintance has a good, ie. stage 3 cell, the water can now be substituted into the suspect cell. On now powering up the suspect cell, within 1 minute you cell should be at stage 3. If the suspect cell does not come up to stage 3, the water is not at fault! The above is by far the easiest way to test a suspect cell. Unfortunately, you will need another cell or external help. That is why I suggest that a group can keep a test cell at stage 3 indefinitely for the use of the members. All it requires is that the " cell keeper " gives the cell a daily 1 minute " feed ". You could even have an automatic timer that applies 12 Volts to the cell for 1 minute every 24 hours and just leave it alone in a suitable location. I have kept a test cell at stage 3, on the above principles for over a year, and the idea works fine.

Note. Do not leave the charged water outside its cell for longer than 1 hour as it is not breeding.

I have found that when I use water that I have stored for longer than about 6 months, on using it to fill new cells, I get a very light off-white residue in the sump of the cell. All else works okay, ie., a normally breeding stage 3 cell. My 20 litre Pyrex flasks are stored in the garage and are exposed to cars, noise, fluorescent lights, music, etc. I have now modified the flask caps so that the water can breathe. Also the flasks have been made " light tight ", with a jacket made of purple 100% wool felt. This may help.

I have found that the " old " juvenile water can be reactivated by various forms of water modifiers. I use a special water vortex device and have found that a cell that did not want to go stage 2 for over a week, went stage 3 in 2 days! This is great news for people who have to travel considerable distances to obtain their water. Of course, the bad news is you need a " gismo " like I use, or you may want to try various commercial structured waters to find one that works. I will again say, that it is far easier to let Mother Nature do the work for you, rather than you outlaying hundreds of dollars with no guarantees. I mentioned the above in case you were already using a water " modifier " for health reasons. If so, give it a try, you have nothing to lose.

- B. Has the pH of your water changed? Simply run your pH test on the cell water. The reading should be the same. If not either the cylinders or the insulators are breaking down and reacting with the water and electrolyte. Make sure that you followed charging, insulator and cylinder material type recommendations in previous Chapters.
- C. Is the water clear? As in B., the cylinders or insulators are breaking down. Or the cell has gone into a base matter creation mode. As this topic is highly controversial and not pertinent to this subject, your only option is to completely dismantle, polish and clean the cell and/or replace the insulators. Fill with fresh juvenile water. Go through charge stages as per Chapter 9.
- D. Is there any residue in the sump? As in B. and C. above.
- E. Are the stage 3 breeding indicators behaving the same? Read chapter 9 and make sure that the behaviour of the bubbles and meniscus are the same, especially the long term bubble retention. Again, if all else fails try the voltage check.
- F. Have you changed locations and the cell is now sitting in a low density Orgone strip? Make sure that the cell is at stage 3. Read Chapter 9.
- G. Have you accidentally shorted out the cell or reversed polarity to it? See if it goes back to stage 3 if you apply power to it for 1 minute. If not dismantle, polish and clean all components. Fill with fresh juvenile water. Go through charge stages in Chapter 9.
- H. Have you allowed the seed to die? Read Chapter 9. Go through stage 1, stage 2 and stage 3 processes. The cell may go to stage 2 or even stage 3 within 3 minutes.
- I. Has the cell fallen over at any stage? Try a 1 minute charge and see if the cell goes to stage 3. If not, dismantle, polish and clean all components. Fill with fresh juvenile water. Go through charge stages in Chapter 9.

1a. Cell maintenance.

I have found after a cell has been in operation for about 6 months, although there is no external indications of malfunction, ie. the cell is happily breeding, it is a good idea to do the equivalent of an oil change and grease. You may find one or more of the following:

- There is a light deposit on the cylinders particularly the outside of the 1 inch and 2 inch.
- The cylinders may have sagged from the vibration, ie. they are not flat on the top horizontal alignment..
- If rubber insulators are used, you will find that they may have developed a set or a conductive path.
- Some of the insulators, particularly the inner top ones, may have a light white or grey deposit on them.
- There may be a slight suspension or colloid towards the bottom of the cell.

- There may be slight indications of a brown sediment on top of the water.
- The cell metal parts may have become magnetised.
- The lower insulators for the bolt may have shrunk and could be weeping.
- The electrical connections to the cell may be loose or corroded.
- The compression fitting for the aluminium pipe may be loose.
- The short piece of rubber or neoprene hose to the blanking plug may have aged.

The cures for the above are self explanatory. The only difficult one is if the cell has become magnetised. You may be able to degauss the cell, or at worst, you may have to have the offending cylinder replaced or heat treated. After you demagnetise your cell, find a better location for it, or it will only happen again!

I do a regular 6 month service on my cells. The steps I perform are as follows:

I pour out the charged water into a 5 litre glass container and put it in a cool dark area. Obviously the glass cylinder is clean and only used for your Joe cell work! Remember you have approximately 1 hour to replace the charged water back into a seeding and breeding cell. I next dismantle the cell and clean all surfaces with mild acetic acid. I find that it is not necessary to repolish the cylinders, but you may do so if it makes you feel better. I rotate any rubber insulators 180 degrees so as to use a fresh surface with no set. I lubricate my bolt and associated insulators with Vaseline and reassemble the cell. By this time, the charged water has been sitting for about half an hour in the glass cylinder and most of the sediment has settled to the bottom of the temporary glass container. I now pour the charged water back into the cell using a paper coffee filter to catch any sediment. I stop pouring the charged water into the cell when the first drops of water with the sediments starts to leave the glass container. This water I discard or have analysed to amuse myself. I now top up the cell with fresh juvenile water and connect the cell to the power supply. Within seconds you will see a fine white cloud develop on top of the water. This is the residue of the acetic acid that you used to clean the cell with. I remove this simply by wiping the top of the water surface with a paper towel. Within 1 minute your cell will be back at stage 3. That's it, you have just completed your 6 month service.

Note. I will repeat again in case you have forgotten, that all water, containers, funnel, etc. must have only juvenile water used in the cleaning or transferring of water for the cell maintenance. It requires a very small quantity of tap water that has been "enhanced" by good old mankind to kill the cell. Don't blame me if you have to start at stage 1 again by being lazy.

2. The cell construction

Needless to say, you should have followed the cell construction Chapters to the letter. If you did not, you obviously know how to make a different type of cell, and these notes will not be 100% relevant, or you have chosen to be creative, frugal, haphazard, or slap happy at the wrong time. I repeat, you are not making a toaster! You are trying to induce the life force to work for you. You cannot capture the life force as in a cage. It will enter and exit as it sees fit. It can penetrate all materials! So to contain it you must use nature's geometry and mathematics, some dimensions are not critical but other dimensions have to be "spot-on".

If the cell was working at stage 3 and now will not work.

A1. A common problem is that the cell cylinders have moved due to rough handling, vibration, or the wrong diameter insulators. The fix is a dismantle and re-alignment. Make sure that your hands are clean!

A2. Another common problem is the covering of the cylinders and insulators with various residues. This can be seen on the dismantled cell, as an easy removable film on the cylinders and insulators. In this case treat as a dead cell and dismantle, polish and clean all components after finding the cause of the problem. The usual causes are wrong welding material or flux, wrong cylinder material type, wrong insulator material type, or water problems as in section 1. above. Fill with fresh juvenile water and start at stage 1.

A3. The cell material has been magnetised by locating the cell near starter cables or other high current-carrying wiring eg. Hi-Fi wiring, fog lamp or other types of ancillary lights' wiring, winch wiring, etc. In this case, find the magnetised component or components with your test magnet and replace, heat treat or de-magnetise the affected components. A hot under bonnet location will cause similar problems. After fixing the cell, relocate the cell or the offending items.

A4. The insulators or the cylinders are eaten away to some degree. You will pick this up in the discolouration of the water. If you followed my instructions, this will not occur. The problem is incompatible steel or insulators with the water electrolyte combination. In any case, treat the cell as dead, replace faulty components, etc. as in A2. If the cell never worked at stage 3.

B1. The cylinder material type. As mentioned in Chapter 6, the material that you use is critical in your early learning stages. All 316L is not the same! Re-read Chapter 6.

B2. The cell cylinder dimension is wrong. Re-read Chapter 6 and 7. The cylinders must be level at the critical chamber separation area which are formed by the tops of the internal cylindrical tubes. Re-check that the

cylinders are level. You should see no light when measuring with a straight edge.

B3. The cylinder finish. As the top and bottom cuts are finished in a lathe, they should be absolutely smooth, ie. no file or cutting marks. Similarly, there should not be any heat bands where the cylinders were cut. The surface of the rest of the cylinder does not have to be mirror smooth, but make sure that there are no longitudinal marks or scratches. If you followed Chapter 6, they will be okay.

B4. Make sure that the welding is done as per Chapter 6. Make sure that all internal irregularities caused by the welding process are removed, without causing excessive localised hot spots.

B5. Make sure that all threaded couplings from the cell to the engine is metal to metal joints and the threads are not covered in sealants or Teflon tape, etc.

B7. Make sure that the cell is airtight. If you apply your power source for a minute or two to the cell and block the outlet of the aluminium pipe with you finger only, you will feel the release of pressure on removal of your finger. Do not do this near flames and/or explosive gasses! This will also check that your cell is not open circuit or shorted and that it is electrolysing.

B8. In B7 above, the most common electrical problems are the push fit of the ½ inch bolt into the 1 inch tube, and the insulators between the 1 inch bolt and the lower cell exit point.

3. The charging operation

The failures can be sub divided into 3 sections:

A. Failure to get to stage 1.

If you cannot get the water to electrolyse at all, you have not read Chapter 9. Even blind Freddie and his dog can do this. Hang you head in shame and take up another interest! Seriously, not many things can go wrong. If your power source is putting out about 12 Volts and if you have added the electrolyte as described, then you must have some bubble activity (even tiny ones that look like a white mist,) in the water. If there are still no bubbles in the water, connect a 12 Volt car globe of any wattage or type to the very ends of the leads that you are connecting to the cell. The lamp will light if your power source and your leads are okay. Now remove the lamp and put the positive lead to the outside surface of the cell and the negative lead to the ½ inch bolt that connects to the 1 inch cylinder. If you still have no bubbles, the ½ inch bolt connection to the 1 inch tube is faulty, but highly unlikely. Re-check the insulators that insulate the 1/2 inch bolt from the outer container. As there is now water

in the cell you will not be able to do your insulation test but you should still read more than 10 Ohms resistance from the bolt to the case. Be careful of misleading readings if the cell is acting as a battery, as your Ohm measurement will be useless.

B. Failure to get to stage 2.

By this I mean that the cell has not seeded and remains at the electrolysis stage. This is a very common stumbling block! As explained, if the cell will not seed, the indication is there is no change in bubble size or surface tension. Boy, oh boy, I have been here many a time myself and I suggest the following:

B1. The first and most common is the covering of the cylinders with a coating of various chemicals. In my early days, when I took the lazy way out and brazed or silver soldered my casing joints, this compound ended up all over the rest of the cell due to electrolysis. As the positive is the donor surface and in our case the outer casing including welds, sealants, etc., this fact aggravated the plating process.

B2. Another failure and resulting contamination, was the use of the wrong type of sealant on the central insulator for the sealing of the ½ inch bolt where it passes out through the bottom of the cell.

B3. Likewise, when I decided to press fit my outer cell components, I used an automotive silicon gasket cement on the joints. This also ended up plating the whole cell.

B4. If the water smells unhealthy or there is scum floating around, the water has gone bad. Replace with fresh juvenile water and go back to stage 1.

B5. Check that your insulators have retained the original manufactured colours. That is, if red rubber, make sure they are still red, if silicone tubing, make sure it is still clear, etc. The insulators may be fine for stage 1 electrolysis, but may be very leaky to Orgone.

B6. Your working area or you may be detrimental to the seeding of the cell. See 6. and 7.

B7. You are not covering the cell overnight and/or between experiments. As previously explained, we want to keep a very mild air seal on the cell. This is easily done by placing a lid on the test cell or by having a spare aluminium plug in the end of the hose where it fits onto the engine blanking plug fitting. Again, I must repeat, DO NOT use worm drive clips on both ends of the rubber coupling sleeve. The rubber sleeve must act as a one way exit valve for any pressure in the cell. The internal cell pressure must remain very close to atmospheric during operation.

B8. You are just too impatient! It may take 4 weeks to seed the cell! Just spend a few minutes a day with it and go and do something else.

B9. You have used the wrong materials. This has already been covered. Please read 2.

B10. You have used the wrong water. Ditto. Please read 1.

B11. You are using the wrong charging method. Ditto. Please read 3.

B12. You are the wrong potential. See " Y factor " Sect. 7 and chapter 13.

Note. For all problems in this section due to contamination of the cell by deposits, water or materials, dismantle the cell, polish, clean and refill with juvenile water.

C. Failure to get to stage 3.

This is the failure of the cell to breed. Again, to repeat, this is the failure of the cell to keep increasing the initial seed density to a greater, but still finite, Orgone energy limit. Indicators will be a lack of long term bubble and surface tension retention and an obvious non-operation or marginal operation. Usually you will get to stage 3 very soon, ie. within days of stage 2. Another way of describing the failure of running at stage 3, is that the cell is leaky to such an extent that the Orgone force cannot accumulate sufficient density in its present location for your needs.

C1. The most common fault of the cell's in not breeding, or insufficient breeding, is caused by marginal water, construction dimensions and materials. Please make sure that you have followed these notes to the letter. If you have modified or substituted components, etc., you obviously know something that I do not know and if your cell had worked, I would love to hear from you, but as you are reading this and if your cell is not working, I suggest you follow my instructions to the letter, or try somebody else's, " how to build a Joe cell " manual.

C2. You, or your working area, may be detrimental to the cell's operation. Read 6. and 7.

4. Cell to car interface.

If you are looking for faults in this area, you know that you cell is at stage 3, but the engine refuses to run from the cell.

A1. Outlet pipe from cell.

A lot of different diameters and materials will work. I would suggest, like Joe that you use 1 inch outer diameter, 1/8 " tube thickness aluminium pipe. Due to electrolytic action, copper will either pollute the cell, or pollute itself. The short piece of rubber or neoprene must not have any clips on the end that attaches over the blind aluminium plug. The idea is to let any pressure " burp " out, but not to let any air in. The fitting should act as a one way valve to pressure from the cell caused by the electrolytic action. The engine end of the aluminium pipe should have you positive electrical connection secured to the pipe by means of the same short piece of hose being slipped over it. This end should have a clip to squeeze the hose and the electrical fitting to the pipe. What you are doing is providing your positive connection at the very end of the outlet pipe. Your negative as previously described, will go to the cars body, (we are presuming a modern car that has a negative earth system). The pipe fitting to the top of the cell must be air tight without the use of sealants or Teflon tape, etc. The compression or threaded fitting will do a good job of this. Try to twist the aluminium pipe out of the compression fitting. If tight, you will not be able to budge it. Your pipe should also have some form of insulation around it to prevent contacts to the rest of the metallic parts of the car.

Ideally, the cell should be similarly protected. Remember, just one short circuit and the cell is dead!

A2. Electrical connections.

The positive wire coming from the end of the aluminium pipe should go via a 5 Amp fuse to your " ignition on " wiring. By this, I mean that the cell should only have the car power connected to it when the ignition is on. Some people prefer to run this wire via an off/on switch that is located in the car. When you connect your negative to the car, it is preferable to connect it directly to the block if your earth straps from the motor or gearbox are suspect. Either way, with the ignition on, you should measure 12 Volts positive on the cell body and 12 Volts negative on the central bolt fitting. If not, check your wiring, fuse, any switches, etc. The most probable cause of no voltage is a blown fuse because you have shorted the cell. Find your short, replace the fuse and make sure that the cell goes to stage 3. If not, pull the cell out, clean, polish, new water, etc. ie. start again. The other most common problems are the use of sealants on the compression fitting. This is easy to find and fix. If you have 12 Volts across the cell, that does not mean necessarily that you have your 1 Amp current flow. To check this, temporally disconnect the negative end of your cell from the car body or motor and put your Amp meter in series with the central bolt and the car connection. You should read your 1 Amp current flow. If not you have some high resistance connections or wiring, or the cell is faulty. As you are reading this because you know your cell is not faulty, the problem is either your aluminium pipe connection or your wiring. Locate the problem step by step, making sure that you do not short out or apply reverse polarity to the cell. As mentioned in Chapter 10, the 1 Amp is a nominal figure. At 1 Amp the cell is dissipating about 13 Watts and the cell may eventually heat up on an extended journey and a hot day. Check Chapter 10 for recommendations.

A3. Cell design.

If you have made a cell with the wrong taper to your cone, the Orgone will focus before it gets to the motor and the cell will work brilliantly on the bench, but it will not run the car. The only reason this has occurred is that you did not build a cell as described in these notes. To quickly summarise cone angles, any apex cone angle of less than 45 degrees is highly suspect.

A4. Cell location.

Check as previously explained, that the cell is located in a favourable location in the car. Is it in a cool place? Is it level? Is it located as far as possible from high current wiring? Is it located in a low vibration area? Not like some rocket scientist who strapped it to his engine!!! As Orgone has a vertical preference once it leaves the cell, reduce horizontal and " down hill " pipe runs to a minimum. A cell located in the boot, with a 4 meter run to the engine is not a great idea. Again, a non-leaky cell can run 60 meters or more into a horizontal tube, but why tempt fate? As far as the

cell (but not the passenger) is concerned, for you first cell's temporary location, the passenger foot well, with a pipe through the bulk head and a short, (less than a meter) pipe to the blind plug located at the rear of the engine (non V8) works well. Please note ! A cell in the passenger foot area will be illegal in some areas!, so you are obviously using this car on private land until you have it legally approved.

Note. At this point of the trouble shooting list, you know that you cell is at stage 3 and that it is connected correctly to the car. So if things are still not working, leave this area alone! Do not undo what you know is working, ie. don't dismantle your cell or associated connections to the car, they are okay! Leave them alone and look for problems in the only remaining areas you have not covered, ie. Section 5, 6, and 7. Unless you keep a systematic approach to the installation and troubleshooting procedures, you will never get the cell to run the car.

5. Car modifications.

For a start, I will again state the obvious, some cars will be easier to modify than others, or more importantly, not all persons will be able to modify all cars! So unless you are masochistic and want to make your friend's life a misery, choose an easy car! This, of course, may not be old faithful that is sitting in your garage. You should also have followed Chapter 10. before you read this.

You are reading this because you KNOW that your cell is still breeding, ie. running at stage 3, your car connections are okay and you electrical connections are okay. You have started your car on petrol and after it has warmed up, you either have turned off the electrical fuel pump, or you have turned off the fuel to, or from, the mechanical pump. Now as the fuel is used up in the fuel bowl, or bowls, the engine falters and stops, (at this stage, I am not talking about fuel injected motors). That is how I would expect you to test the change over phase. You are really pushing your luck, if you walk up to a stone cold car, remove the fuel to the engine and start cranking! I hope you have plenty of fully charged batteries!

The car will either run, run erratically or not at all.

A1. Car shows no sign of running from the cell. By this I mean that as soon as the motor runs out of fuel, the car stops. A lot of people get here, but blame the wrong components. As stated above, you are here because you know all sections up to here are working okay. This only leaves this Section 6 and 7. So let's presume that the car is at fault as that is the present topic. I can tell you for a fact, that a 1971 V8 Rover will start first shot and run like a dream. On the other hand, a 1100cc Mini Minor will not even think of starting first time. Why? There are a lot of pet theories floating around, but as these are my notes I will give you my theory based, on logic.

Note. The following is a theory and eventually may be proven wrong. but the way I see it is that the water and the cylinder bores in the motor act as a single layer Orgone accumulator, ie. an organic material (water) surrounding a non-organic cylinder (the bore). As such, an engine with a bore that is fully surrounded with water will be far superior than an engine that uses siamesed bores or casting methods, without the benefit of the totally water-surrounding cylinder. Now as most aluminium blocks have metal sleeve cylinders pressed into the aluminium block for bores, this feature allows for a full water circulation and completes our single layer Orgone accumulator. It also makes it less leaky and more conducive to conversion to a Joe cell system. Remember, Orgone loves water. This is also (in my opinion), the reason why a person that chooses an air cooled motor will have more problems than one that uses a water cooled motor. The above gives me a reason why some motors start first shot and others may take weeks to kick in. Two other effects hinder or help the above. The first is, that Orgone seems to " like " to travel in aluminium or it finds aluminium more difficult to penetrate, so it would have a tendency, on leaving our aluminium pipe to either prefer the aluminium block, or once it was inside the block, it may have a greater difficulty in " leaking " out. I would be the first to admit that I do not understand this effect, but it is definitely there. As more information comes to hand, I will update these notes. The second is the easier conversion of V8 motors. As our blanking entry plug is located in the vee formed by the two banks of 4 cylinders, the Orgone distribution from the cell is ideal, ie. it is a central entry, nearly equidistant and close to all cylinders. Another important feature is that the entry point it is on the cold side of the motor, ie. the exhaust system is on the " other side " of the cylinders. This also give a cross-flow motor an advantage.

So what is to be made from the above? I would suggest, like Joe, to start on an easy conversion until you build up your own confidence and hence the " Y factor ". Either go and see a converted car so you can believe, or convert an old Rover or Leyland V8 as a group effort. I cannot see why the different clubs and interest groups cannot pool together and purchase an old wreck.

If you insist in converting your cast iron, or air cooled whatever, be prepared to wait for the molecular changes that seems to occur to cast iron, siamesed bore and manifold type motors. As Joe stated, this may take 3 or 4 weeks. I have personally installed cells that are stage 3 and left them " running " on the car. The car was driven normally on petrol or gas, until the idle or engine operation noticeably changed. This was the indicator that the " molecular " changes have occurred and the car was ready. What you also may want to try is to replace the normal radiator water with SPECIAL, charged stage 3 water (see Chapter 9 regarding the special stage 3 water). This should speed up the acclimatisation process. As most modern motors run some form of inhibitors and anti freeze additives in the water, you will have to consider the consequences of playing around with this mixture. The down side of dumping the additives may be increased corrosion on alloy components, ie. head, manifold,

water pump, etc. Due to the tendency of the motor to run much cooler on the Joe cell, I would recommend that you leave the Glycol in the water. Obviously, you throw all new car warranties out the window the moment that you add the Joe cell and its related conversions to your car.

A2. Fuel injection cars.

The simplest way to treat these cars is to perform a full conversion to gas. In this way you have a dual fuel system, ie. Joe cell or gas. Plus you pick up the advantages of a longer life span for your engine as per Chapter 10. Section summary. So really, all that I can suggest in this section, is that if the car will not start at ALL and all other sections have been covered, you should give the conversion a maximum of 4 weeks for the cell to take over. If the cell does not kick in that period, the chances are indeed slim that it will ever work. You have only a few chances left. A few people have surfaced in Australia that can tune your car and cell by the application of correctly located specifically made crystal packs. This has emerged as a new and not well understood science, but it just about guarantees that the cell will run in some form or other on the car.

A recent discovery by an avid alternative energy experimenter from Adelaide, (Aust.) was that the car only ran on his cell after the car was up to a road speed of 80 kph. Obviously if he only tried to run the car on the cell in a start-up, stationary situation, he would not have discovered that the cell was partially working. So, as he is a great lateral thinker, he took the car for a drive on petrol and then turned off the electrical fuel pump when the car was up to speed. As the car would not idle on the cell, he simply turned on the fuel pump before the engine returned to idle speed. I would guess and say that his cell was very leaky or the Orgone transfer to the engine was poor and thus marginal for engine requirements, and that the forward motion of the car caused a charging effect from the Orgone that the car was travelling through.

With the above example, I am saying that you should not give up too easily and that with a bit of experimentation and patience, your car will also run on Orgone.

All cars, including fork lifts, dragsters and diesel motors that Joe converted eventually ran! If your car will not run, consult your favourite " expert ", or drop me or the publisher a line, only as a last resort when you have exhausted all other avenues. Please be reasonable, realise that I am only one person, I have a life and family, I do not get paid for my time by you or the hundreds of others requiring help. Irrespective, I will do my best to help.

A3. Car runs erratically, or does not reach maximum power, or starts and then stops.

This could be caused by many things and you will have to logically fault trace, by elimination of one suspect cause at a time. Some causes (not in any specific order);

- The cell is marginal. Check that it is still at stage 3.
- The cell contains too much water. Rectify.

- The air flow into the motor is " wrong " at that particular engine operating range. We are working on this problem, but as a temporary cure, some cell operators have modified the fuel system to supply a slight petrol flow into the engine at the troublesome operating range.
- The cell is marginal due to bad design. Read Chapter 6.
- The cell is too small. Read Chapter 6.
- The cell to motor tube is the wrong shape, material, or diameter. Read Chapter 10.
- The blind plug is location is not optimised on the motor. Read Chapter 10.
- The cell has become magnetised. See previous section.
- The day is hot, or the cell is too hot. Feel the cell!
- The cell is too hot from excessive electrolysis current. Wait for the cell to cool down and then readjust current.
- The cell is mounted in a bad location in the car. Read Chapter 10.
- The day is wet or humid. See section 6.
- You, your passengers, or animals, or location, are interacting with a marginal cell. See section 7.
- Your ignition timing is not optimised. Adjust!
- Your water has gone " off ", or your water level has gone down. Rectify!
- Your cell cylinders are polluted. Dismantle and clean.
- You are in a high DOR area with a marginal cell. Hopefully you can drive out of to before the cell dies.
- You are in a strip of low or reversed Orgone. As above.
- Sun or planetary activity is detrimental to cell output. Change over to " normal " fuel and wait for more favourable times.
- Your electrolysis rate is down or not sufficient to run the motor.
- Your wiring or the cell have gone high resistance. Check with an Amp meter to make sure that you chosen " running current " is still okay.
- The air flow into the motor is wrong at that particular engine operating range. We are working on this problem, but as a temporary cure, some cell operators have modified the fuel system to supply a slight petrol flow into the engine at the troublesome operating range.
-

A4. The car runs.

Great! Good for you, but please remember that it will not run all the time and will stop unexpectedly and with no warning signs, so always have a dual fuel system set up and ready to " kick in ". It would be highly embarrassing to be thousands of kilometres from home and having to ask the local mechanic to fix your Joe cell conversion! You should see an interesting look on his face.

The performance of your car will be determined by the reserve of Orgone density you have on demand. A leaky or under-capacity cell will not give you maximum power. A good cell will give you at least the same and

usually a greater power range with a sweeter running and more tractable motor.

A5. To return the car back to normal fuel.

If for some reason you have now decided that you want to convert the car back to normal for reasons best known to yourself, you should perform the following steps:

Remove the cell, wiring, brackets, etc.

Seal, in a professional manner ALL holes that you have made in the floor or bulkhead. If the holes are left, moisture may enter the vehicle and thus cause rust. More importantly, some holes may allow the entry of gasses that may kill you or some other occupier!!!

Return ignition timing to normal manufacturers recommendation.

Replace all special oil and water that was used to run the car on the cell.

Remove any vortex air cleaners or mufflers unless you still want these for fuel saving reasons.

Now the fun will start. As there may be a residual of Orgone charge in the motor/car bodywork, the motor may refuse to run at the normal ignition timing. It may return to normal running after weeks, but during the intervening time the engine will run rough, refuse to idle at the normal idle speed and be a real pain to drive. A suggested solution is to use a thick lead, (a jump-start lead is perfect) and connect one end to the positive end of the battery and flash the other end very briefly against the engine at or near where you placed the blanking plug for the transfer tube from the cell. This will cause a momentary massive current to flow through the motor and back to earth (metal parts of car) and finally back to the negative end of the battery and thus reverse (hopefully) the charge from the Orgone and thus clear the motor. Make sure that you first disconnect any cables that are on the positive terminal of the battery before attempting the above!

NOTE! The above operation is a last ditch effort by competent mechanics. This is due to the very expensive and lethal damage that can occur to you and the car ie:

You may destroy your car computer/s, alternator, regulator and/or diodes, car radio, gauge's, and any other electronic device on the car.

As you are creating massive currents, you have a fair chance of melting any thin cables connected between the motor and earth.

Also as you are creating sparks near the car battery, (if it is located under the bonnet) you have a fair chance of igniting the hydrogen gas in the battery thus causing a large explosion with a liberal spray of sulphuric acid. This may MAIM OR EVEN KILL YOU or the onlookers and of course destroy the front end of the car.

Again, I do not recommend the above unless you know exactly what you are doing. I merely mention this method for completeness as it is employed by some individuals.

6. Geographic location.

As mentioned, Orgone is not a constant, or even density cover on this planet. Some of the resulting problems are:

- The density varies seasonally.
- The density varies with the time of day.
- The density varies with planetary motions.
- The density varies with the Sun's cycle.
- The density varies with altitude.
- The density varies with geographic location.
- The density varies with the " users " of the Orgone energy eg. a nearby car.
- The density varies with the weather.
- The density varies with the introduction of pollutants.
- the density varies with the Earth's and cosmic magnetism.

As you can see from the above, it is a wonder that we can use it at all, with our crude knowledge and even cruder cell. The main solution is to have a cell that is not too leaky. This means that the cell is always over-producing thus giving you some valuable time to drive out of the unfavourable locality. This is why I have suggested that you should have a dual fuel system and at no stage rely on the cell alone. It is one thing to have it fail on your garage bench, and a completely different thing to have it fail in the outback. Orgone has a very big disliking for any form of man-made electromagnetic radiation. So any large high voltage power line, transmitters, airport radar, military installations or radioactive sources will set up a reaction with the Orgone to create DOR. This may be so severe, that as Joe says, " the water has gone bad ". Unfortunately, as you are probably already anticipating what I am going to write, this requires a clean of the cylinders and insulators , fresh water, etc. That's right, back to stage 1.

7. The Y factor.

For the rational, proof only, and died-in-the-wool scientific types, you are going to hate this one! Normally anything that cannot be explained in the framework of existing theories that are known as " facts ", are place under the category of, " experimentally observed phenomena ". The following fits that category. Basically, as Reich discovered, the Y factor simply stands for you. Yes, unfortunately when you get to the grey areas where known science merges into the unknown, you enter areas that will stretch your belief system if you so allow it. I could have very easily left the so-called non-scientific mumbo jumbo out of this book and so given myself at least a little " scientific credibility ", whatever that means. Luckily, as I am self-funded and do not live on grants by writing " selected " papers, no multi national can conveniently shut me up or rephrase the above to suit their needs. In actuality, it is immaterial if you believe or do not believe in the Y factor, either way it exists and you really should consider the concept of all creation being intimately linked permanently and instantly.

The Y factor will make your Joe cell either not seed at all, or not breed, or breed poorly, or behave in an intermittent fashion, depending on the living energies around it at any one time. This is not a fable coming out of my demented brain, but an observed fact, recorded from all over the world for countless centuries.

I, with many others have had individuals walk up to our cells and watch our cell suddenly breed, (Stage 3) or worst, watch with dismay as our cell drops back to Stage 1 (die). My favourite test cell was a Stage 3 cell for over 10 months and I was stupid enough to let it be observed by all and sundry. One day it was observed by an individual who by his own admission was out of energy and run down . Within seconds of this guy looking at my cell, it dropped out of Stage 3 to a weak Stage 2. Next morning it was absolutely dead. I pulled it apart and cleaned all metal parts hoping that this would fix it as the charge is in the water. No Joy! I then completely rebuilt the cell, added fresh water and I am still waiting for it to go to Stage 2! As in Chapter 8, you have been warned, keep your living cell to yourself. A friend reported to me a similar experience, namely that a cell that would not go to Stage 2 sprang to life (Stage 3) when a friend of his was 20 meters away from the cell, and then the cell went into a frenzy as he approached it. When his friend left, the cell died again! True stories.

The best procedure with the cell, or for that matter any endeavour is to treat it with an open mind. You do not have to believe that it will work, but similarly, you should not doubt that it can work. Do not analyse too much or apply blinkers to your thinking process by presuming that you have learned all that there is to know and with your " vast knowledge " can categorically say that, this Joe cell concept could never work. Unless you are the Almighty himself, you will learn new things every day for the rest of your life. I have talked to many, many intelligent individuals that simply refuse to believe that a car can run on what they see as nothing, nor how this nothing can get into a " solid metal " engine through no openings operate the motor and produce no measurable pollution. Yet, these same individuals who consider themselves sane (with reservations for my sanity), are quite happy to spend large sums of money or follow some outlandish new age fad in medicines or self-healing techniques with even less proof or science!

CLOSING COMMENT.

" They call me deranged. The hope is that they are right.

*It is of no greater or lesser import for another fool
to wander the earth, But if I am right and science is
wrong - then may the Lord God have mercy on mankind.*

Victor Schuaberg

My dear patient reader. At no stage have I said that the Joe cell is similar to making a bread toaster. As you are dealing with a little known, mass-less life force, you are behind the 8 ball right from the start, your battle is uphill and lonely, with jeering and laughing " experts " on both sides

waiting for you to fall. Similarly, at no stage have I said that all people can convert all cars. Likewise, once you have converted your chosen car, there is no guarantee as to how long it will run before the breeding stops and/or the seed dies.

With the right mindset, all the above are minor problems and enjoyable challenges, but if you approach this conversion in a rush, not really believing in your heart that it can work, or with the intention of making lots of quick money, the Y factor is going to bite you! Don't even start, you are wasting your time and money. Think about it! If it was so easy and if all and sundry could exploit the life force, why is it not in mass production out in the real world? The answer is simple. It is exactly the mind set of these type of individuals that prevents them from utilising Mother Nature's secrets.

My aim has been to show you a method of cell construction that works for me. Obviously, there are many different ways to encourage the life force to enter an accumulator, storing it, increasing the stored density and finally utilising the force as you make it work on its release, similar to a dam wall and a water turbine. I have read all materials available to me relating to the life force and its utilisation. Over 6 years, I have compiled, analysed and experimented with the combinations that showed the greatest potential. I am not infallible, nor do I claim I make the best cells. I only claim that I make cells that work! You are reading some of this work. As I give you this information freely, I hope that you will also distribute it freely. What you do with this knowledge is your decision. Hopefully, as a result of your efforts you will share any new knowledge or short cuts with the rest of us, so we can all grow together as a brotherhood.

Chapter 11

" Begin by forgetting what you have learned."

Armand Barbault

MISCELLANEOUS THOUGHTS

This section is optional reading. It is here for the reader who wants a better overview of Orgone, accumulator theory and miscellaneous supporting works including more of my rambling's.

Emerald Tablet.

This is Hermes work relating to the Cosmic force, that he calls Sol, as translated by R. Steele and Mrs. D. W. Singer.

" Emerald Tablet "

" True it is , without falsehood, certain and most true.

That which is above is like to that which is below, and
that which is below is like to that which is above, to
accomplish the miracles of one thing.

And as all things were by the contemplation of one, so
all things arose from this one thing by a single act of adaption.

The father thereof is the Sun the mother the Moon.

The Wind carried it in its womb, the Earth is the nurse thereof.

It is the father of all works of wonder throughout the whole world.

The power thereof is perfect.

It is to be cast on the Earth, it will separate the element
of Earth from that of Fire, the Subtle from the gross.

With great sagacity it does ascend gently from Earth To Heaven.

Again it does descend to Earth and untieth in itself
the force from things superior and things inferior.

Thus thou wilt possess the glory of the brightness of the
whole world, and all obscurity will fly far from thee.

This thing is the strong fortitude of all strength, for it
overcometh every subtle thing and doth penetrate every solid substance.

Thus was this world created.

Hence will there be marvellous adaptions achieved,
of which manner is this.

For this reason, I am called Hermes Trismegistus,
because I hold three parts of the wisdom of the whole world.

That which I had to say about the operation of Sol is completed."

Cone angle calculations.

I must warn the reader that this section is, like Chapter 7, a creation of my brain , mind, or imagination. As such, treat it with caution, Prove all things; hold fast to the truth!

The cone has to perform a very difficult task. As Orgone cannot be held captive against its will, somehow we have to execute an impedance transformation from the containing cylinder assembly, to the restriction of the outlet fitting and then to the Aluminium cell-to-car tube. The scientific problems are challenging; firstly, because conventional science, in general, denies the existence of Orgone. Secondly, this mass-less, hard to measure and invisible force does not lend itself to easy analysis.

So some "loony" must be prepared to at least make an effort to explain the unexplainable, and stick his reputation on the line, with at least some form of a theory that may be eventually corrected and built upon, and thus finally producing concrete facts. So here goes:

As we are ultimately dealing with frequencies and the resultant harmonics, all atoms and molecules must have an individual signature. Thus the cone material harmonics can play a large part in containing and guiding the dual pulsating Organic vortex field.

This calculation of complex harmonics of frequencies is very difficult. So I have chosen to take the easier path of working from a known parameter and thus obtaining the unknown details. As there is a relationship between the frequencies and the atomic weights, and as we have a fair tabulation of these, I will base my cone angle calculation on the atomic weights of the elements concerned. At all stages I am referring to the angle formed inside the apex of the cone.

- You may readily look up for yourself the related atomic weights, but to save you some work, I will list some of the ones that are related to my explanation.

Element	Atomic weight	Element	Atomic weight
Hydrogen	100.794	Carbon	12.011
Magnesium	24.305	Aluminium	2.698.154
Silicon	280.855	Phosphorous	3.097.376
Sulphur	32.06	Titanium	47.88
Vanadium	509.415	Chromium	51.996
Manganese	549.380	Iron	55.847
Cobalt	589.332	Nickel	58.69
Copper	63.546	Zinc	65.38
Molybdenum	95.94	Silver	1.078.682
Tin	118.69	Gold	1.969.665

- Now let us analyse the chief constituents of 316L stainless steel.

Element	weight %
Iron	72%
Chromium	16%
Nickel	10%
Molybdenum	2%

As the rest of the elements are 1% or less, I will leave them out of our calculations. Similarly the above percentages are variable and I am using the minimum values that can carry the 316L name. If you want a more

precise cone angle calculation, use my methodology and tighten up your own figures. You will find that the final manufacturing tolerance will absorb you numerical perfection.

The next step is to add up the related element based on the percentage existing in the final product, thus;

Element	% in 316L	Atomic weight	Total % in 316L
Iron	72	55.84	40.21
Chromium	14	52	07.28
Nickel	10	58.7	05.87
Molybdenum	3	95.94	02.88
Manganese	1	54.94	0.55
		Total	56.79

So let us round of to 57 and now call this our cones internal apex angle in degrees.

Okay, you say, a great play with numbers where, at one moment we are dealing with apples, and the next moment you are calling them oranges! Yes, I agree, but let us see if empirical data gives the same result.

- Remember from Chapter 7, as to how we derived the outer casing height from two methods. One was my theory and the other one was the dimensions of working cells, both Joe's and my own. We will do the same here. Now, I suggested that for a 5 cylinder cell, an inner length of 8 inches and an outer length of 10 inches worked very well.
- I have also previously explained, that the seed centre is in the center of the vertical height of the cylinder assembly, as dictated by the magnetic and electric forces. As the height is 10 inches for the outer cylinder casing, half this height is obviously 5 inches. So the nodal points would be at 5 inch intervals. Therefore, the perfect cone would have a vertical (not diagonal) height of 5 inches. If we do some basic geometry, you will find that this works out at about 54 degrees. and a cone height of 4.5 inches would give us 58 degrees. In passing, a perfect (isosceles) triangle has 60 degrees internal angles.
- Remembering that we are trying to capture the vortex at the nodal point, thus the 4.5 inches would bring the apex of the vortical crossover nicely into the outlet fitting. Bear in mind that the actual apex of the cone is missing and that instead we have a 1 inch hole . This 1 inch hole is at the 4 inch vertical height of the cone, so you want a 5 inch to 1 inch 316L reducer with a 4 inch base-to-hole vertical height. The 57 degrees falls very close to the 4.5 inch vertical height, which is midway inside the compression outlet fitting. Exactly where you want it.
- Okay, what about the 4 cylinder cell, how does this fit in with the theory? Lets have a look at it. As an average inner cylinder length is 7 inches, the outer casing cylinder would be 9 inches. As before, the nodal points are half of this, thus a vertical height of 4.5 inches. At a

vertical height of 4.5 inches, the cone angle would be 48 degrees, 9 degrees short of what we want for 316L stainless steel.

- So unless we used a 7 inch outer casing and recalculated the seed diameter and the inner cylinder lengths, the 316L cone would not be optimum.
- But what is to stop us using a cone made from a different material? For example a Titanium cone at an atomic weight of 47.88 or 48 would be perfect, and perfectly expensive. So forget that one. A lot of experimenters world wide have had good results with Aluminium cones. From the above table, the atomic weight for Aluminium is 26.98154, or for my calculation, an angle of about 27. degrees. As we are dealing with harmonics, the next upper harmonic is 54 degrees (close to 57 degrees as in the 5 cylinder cell) and thus only a fraction higher than the 4 inches vertical cone height. The end result is that an Aluminium cone would work better than the same cone in stainless steel of the same aspect ratio. The 1 inch outlet hole is on the 3 inch vertical height of the cone, so you want a 4 inch to 1 inch Aluminium reducer that has a base-to-hole vertical height of 3 inches.
- The 54 degree falls on about the 4 inch vertical cone height, which will be fair way inside your compression fitting. As this cone cannot be welded to the stainless steel casing by many welders, a press fit is required. Also, remember that we want a seamless interior transition and finish. It has been done and it works very well, but for the general experimenter, it is far easier to use a stainless steel cone and suffer the extra leakage.

The above two examples may help you with your experiments on cone angles. There are many number games that you may play with Nature's mathematics and the above is only one. For example, you could use the Fibonacci series, ie. 1, 2, 3, 5, 8, 13, etc. and use it for your cell design, thus inner cylinders diameters are, 1 inch, 2 inch and 3 inch, an outer diameter of 5 inches, an inner length of 8 inches and a outer casing length of 13 inches, with a cone vertical height of 6.5 inches, or half again, ie. 3.25 inches. I have not tried this as yet, but I am very tempted to do so when time permits.

Note. Most cones work to some degree or other, what I am trying to do is to optimise the ideal shape and its related dimensions. From a person who could actually " see " the Orgone flame, (Verne Cameron) the following broad guidelines are worth their value in gold:

- " If the cone is less than 90 degrees, the beam is shortened and brought to a focus."
- You may use these angles at you discretion, taking overall tube length into consideration.
- " If the cone angle is 90 degrees, you will have a concentrated 1 inch beam, which will travel great distances."

- A 90 degree cone for the 5 inch cell is 2.5 inches high to the apex and 2 inches high to the 1 inch outlet. A 90 degree cone for the 4 inch cell is 2 inches high to the apex and 1.5 inches high to the inch outlet. I find these angles too " flat " for cones and prefer a focussed beam cone construction. Of course, a dome in some geometric shape would favour this flat layout but, with the added complication of tuning the dome shape, ie, elliptical, parabola, circular, etc.
- " If the cone angle is more than 90 degrees, the beam will tend to disperse."
- Do not use these angles. They will tend to reflect the Orgone energy back into the cell and thus make the cell a great table-top model, but they will not run a car.
- From the above, it can be seen, as to why some experimental cell perform brilliantly on the bench, but will not run a car; namely the cone angle is too small and the Orgone beam reaches a focus point before reaching the water jacket of the motor. Again, you have been warned! If the cell is a stage 3 cell, and the motor will not run, the cone angle is one of the primary suspects.

How does it work ?

The inspiration, for this section belongs to Walter Russell a truly amazing being. I have used his great brain to allow me to explain to you how I think the Joe cell functions.

From Beyond the Atom .

There is a neutral ether consisting of countless myriads of inconceivably small particles per cubic centimeter having no electric charge and no mass. Universal mind places electrostatic charges on these particles when there is a suitable magnetic field so that they become charged particles. The complexity of the charge determines the type of charged particle and its behaviour.

The above nicely explains several points to the average reader;

- As ether, (Orgone) has no mass or electric charge it makes it very difficult to measure. If you read about the efforts that science has gone to, to measure gravity waves and neutrinos, you will more fully comprehend the problems of measuring these forces . Suffice to say that just because scientists cannot measure Orgone energies does not mean that Orgone does not exist.
- As our Joe cell geometry, chemistry, electrolysis, location, materials and experimenters vary from cell to cell, the Joe cell will thus produce a whole series of different effects for different experimenters. The cell can lose weight, cause rain, heal people, make people sick, create various elements and even do what you want it to do ie. power an internal combustion motor.

So, how does a Joe cell run a car? Again I will stick my neck out and suggest an answer that makes sense to me. Obviously it is a theory and is only in place until a reader suggests a better theory, in which case I will remove mine and insert his with full credits.

Have you ever considered exactly what occurs when you use a battery for your radio, torch, etc. I mean what is in the battery that makes your device work and why does it go flat?

There is many chemical and electrical ways of explaining the process, but I would like to explain it to you from a slightly different perspective. Lets set the stage:

1. Every unbalanced action must eventually be balanced no matter how long it takes. Remember that I have mentioned in another section of this book the great clue, Rhythmic balanced interchange. All things in creation including our battery and the Joe cell obey this fundamental rule.
2. Electricity is dividing a pressureless condition into two opposite pressures which desire release and thus a return to a state of balance. So our 1.5 Volt battery for example, does not want to have a positive and negative pole and is trying to return to a state of balance ie. eventually the battery will go flat the duration depending on how much work we ask it to do.
3. Work is the result of unbalanced matter seeking a rest in balance. Notice how we make our battery work for us by letting it return to a state of balance. JUST AS IN THE JOE CELL!!!
4. So the charge of the battery, (or the Joe cell) is a pressureless condition separated into two opposite pressures.
5. A charged battery is dually unbalanced by the opposite pressures which desire release, exactly as in the Joe cell. Opposites oppose, they never perform any other function than to oppose. Opposites are not things; they are conditions.

Okay, if we look at the above clues and using the car battery as an example, we can readily see that the electrolysis that occurred in the battery when we charged it via the car alternator has created an unbalance that is frantically trying to return to a state of balance. If you do not believe me and if you are foolish enough, just put a spanner across the terminals of a charged battery and watch it melt and disappear. Please don't do it, take it as fact. In like manner, when we charged the Joe cell, (which is also acting as an accumulator) we have created an unbalanced condition that is also frantically trying to return to a state of balance.

A car battery reaches a state of balance by finding an electrical path either in the battery (self discharge) or outside the battery in a resistive load ie. turning your lights on. The Joe cell reaches a state of balance if you accidentally short the cell when it is charged, or in the combustion chamber of the car by using the timed spark plug spark or a similar electronic trigger to allow it to drop to a lower or balanced density (the state it was in before you forced it to do work).

The result of the Joe cell working is translated into an expansion of the intake air charge and thus the forcing of the piston down the bore to turn the crankshaft etc.

Now a few words of mine should fall into place for you. A stage 3 cell is charged ie has sufficient unbalance to do work. A leaky cell is a self discharging cell. A balanced or stage 1 cell cannot perform work. To make the cell work, we must have an efficient transfer to the point where the work is required, ie. we must contain the unbalanced condition until it is in combustion chambers by using the right type of cone, tube, blind plug, motor and electrical connection.

The Joe cell accumulator is constantly trying to return to a state of balance and given the slightest excuse will return to balance and thus be useless to you. As you build up your familiarity with your cell, you will find that the cell is constantly giving you small clues as to what it is doing. As such working with the Joe cell is an interactive exercise and developing the skills of a good observer will be highly beneficial.

Two Alternatives

Blacklight Power Inc

<http://www.blacklightpower.com>

Myion hydrogen

<http://www.triumf.ca/muh/doc/annrep/annrep94.ps>

Electrolysis process.

A lot of experimenters have tried in different ways to electrolyse water, and thus as a result of electrolysis, utilise the liberated hydrogen and oxygen as a fuel to run a car. This was the original intention of Joe when he planned to run his car on " steam ". This was, and is, also the intentions of individuals right up to the present time. They have all forgotten, or never knew, the fundamental principles of electrolysis, as formulated by Faraday. His first law is:

The quantity of any element (or radical, ie., group of elements) liberated at either anode or cathode during electrolysis is proportional to the quantity of electricity that passes through the solution.

This simply states that you cannot get something for nothing! All around the world, different groups and individuals are constantly claiming that you can run a conventional car motor from water with basic electrolysis

and still have power left over (over-unity). Well is you believe that, pigs might fly.

Think about it! Let's say that one horse power is 750 Watts. Let's also say that you require ten horsepower to propel a vehicle at a reasonable rate. So we require 7,500 Watts. Now, by Ohms law, 7,500 Watts divided by 12 Volts, (our conventional car power source voltage) is equal to 625 Amps. As a normal car alternator produces a maximum of 50 Amps, you may start to realise the magnitude of the problem.

1. For an ideal case, to cause current to pass through a solution, no minimum potential difference is required. Irrespective of the liquid in the Joe cell, a certain (although at times, small) current, will flow through the solution in the cell if any potential difference, however small, is maintained between the anode and cathode. This current that passes corresponds to Ohm's law. So if you connect the Joe cell across a 12 Volt car battery, a current will flow that is determined by the resistance of the electrolyte. Now if you connect two car batteries in series (24 Volts) across the Joe cell, you would expect it to obey Ohm's law and that twice the current would flow. But as the Joe cell is a liquid and highly complex resistance and potential source, what actually occurs is that the current nearly triples. This has been verified with extensive experiments by Barry Hilton. Conversely, if you reduce the voltage across the cell, the current will be reduced. Using this fact, you can adjust the cell electrolysis current from minimum, as when the car is not in use, to maximum during use, as required. This is simply done with one resistor, or as previously mentioned, you can have a fancy system that is constantly adjustable. I optimise my cell as I said, by the addition of electrolyte, until a cell is flowing 1 Amp at 12 Volts for a running engine and $\frac{1}{4}$ of an Amp (250 mA) for a breeding idle cell, ie. not running an engine.
2. The above conditions only apply if there is no appreciable polarisation at either anode or cathode plates. By polarisation I mean the change in potential at the actual electrode surface that occurs as a result of the current flow and thus chemical action. In our case, as we use 316L stainless steel, (the anode is thus considered insoluble), this is not a major problem. A test for polarisation with other materials is to check the voltage across the cell on turning off the power. If there is polarisation, you will read a reverse voltage to the normal potential polarity. The magnitude of this reverse voltage is the amount of polarisation. This voltage falls off quite rapidly and should be measured with a high impedance volt-meter.
3. The conductivity of a solution depends upon the ionic concentration, rather than the total or molecular concentration, as the undissociated molecules do not conduct current. In our case, with acids, the degree of ionisation increases with dilution. This explains why, for example, dilute sulphuric acid has a higher electrical

conductivity than a more concentrated form. So greater concentration is not better for you electrolyte in the Joe cell.

4. The pH of a solution, is a convenient way of expressing the free hydrogen ion concentration and thus the acidity or alkalinity of a solution. The normal scale is from pH 1 for completely hydrated strongly acid solutions, to a pH 14 for a strongly alkaline solution. A pH value of 7 is considered neutral. In neutral solutions, the hydrogen and hydroxyl ion concentrations are present in equal amounts. Acid solutions cause an excess of hydrogen ions and alkaline solutions a deficiency of hydrogen ions, ie. an excess of hydroxyl ions. For example, pH 4 = 0.0001 gramme ions per litre, and a pH 5 = 0.00001 gramme ions per litre, etc.

It is important to realise, that the pH is a measure of the free or active acidity or alkalinity of a solution, and not of the actual acid or alkali concentration.

More on pH

More on pH if the above is too simple (Courtesy ETI magazine).

All acids have at least one hydrogen atom that tends to break away from the molecule when the acid is dissolved in water. In doing so it leaves behind an electron and becomes a positively charged hydrogen ion. It is these free hydrogen ions that are responsible for the chemical properties of acids, and their relative numbers determine the strength of the acid in question.

Alkalis are extreme examples of a class of substances known as bases. Bases are like converses of acids. When they are dissolved in water they tend to break up in a negatively charged hydroxyl ion and a positively charged residue.

Bases and acids in the same solution tend to neutralise each other. The free hydrogen ions from the acid combine with the free hydroxyl ions from the base to form molecules of water.

The reaction between hydrogen and hydroxyl ions can also proceed in the other direction. That is, water molecules can break up again into free hydrogen and hydroxyl ions. There is only a slight tendency for this to happen, however. In pure water at room temperature only about one water molecule in ten million dissociates into ions. In other words, the concentration of free hydrogen ions in pure water is one part in ten million. This concentration of hydrogen ions is known as a neutral solution.

If an acid is dissolved in water, the solution will no longer be neutral, there will be more hydrogen ions because of the dissociation of the acid. Dissolved bases will initially result in a solution that has more hydroxyl ions than neutral water, but these hydroxyl ions will tend to combine with any free hydrogen ions to form water molecules. The net result is that the

number of free hydrogen ions in a basic solution is lower than neutral water.

Clearly if we can measure the number of free hydrogen ions in a solution we can find out if it is acidic or basic, and to what extent. Actually what we will be interested in is not the absolute number of hydrogen ions, but their relative numbers ie. their concentration.

For reason of mathematical convenience and logical purity, chemists prefer to work with a quantity known as the activity of hydrogen ions. Since the activity is generally proportional to the concentration, the exact distinction between the two terms need not concern us here.

The range of possible values for hydrogen activity is very wide, from 10 for the strongest acid solution to 10 to the minus 14 for the strongest alkali. This leads to numbers that are awkward to write and even more awkward to speak.

The pH notation which was introduced in 1909 by the Danish chemist S.P.L. Sorensen, makes things a bit easier. It defines pH as the negative logarithm of the hydrogen ion activity ie. $\text{pH} = -\log A$.

As mentioned above, low values of pH indicates acidity, high values alkalinity. Neutral water is pH 7.

Rotating fields.

Over countless years, various experimenters, professional and otherwise, repeatedly reported the discovery of unusual phenomena that could not be explained, or that did not fit in with the known laws and theories that existed at the time of the discoveries. The easiest method employed was to shelve the idea until more became known while scientists "came up to speed" on the subject. In Chapter 3 is a list of the different names given to one of these mysterious group of forces.

Although all the various scientists were working on the same type of force, due to a lack of formulated and written characteristics of this force, each scientist re-discovered the same force and gave it a new name. Well, nothing has changed. Orgone as a name, is not the flavour of the month, but torsion and axial fields are. It really does not matter what name you give a rose; it still smells the same. Similarly, our cosmic life force behaves the same, no matter what some scientist decides to call it. I am only belabouring the point to make you aware that torsion and axial fields are not a new discovery, but the same old force with a different coat.

Some properties of torsion fields, as presented recently by Yu. V. Nachalov and A. N. Sokolov: (Try web site www.amasci.com/freenrg/tors/doc17.html):

- They exhibit phenomena associated with the fifth force.
- They cannot be shielded with metal screens.
- They have velocities billions of times greater than the speed of light.
- They can affect the weight of objects.
- They can propagate in the future as well as in the past.
- They can transmit information without transmitting energy.

- They propagate through physical media without interacting with the media.
- They cannot be shielded by most materials.
- They can be shielded by materials with a certain spin structure.
- Any nuclear spin-polarised object is a source of torsion fields.
- The interaction of a spin polarised particle with a spin polarised object, results in the appearance of anomalous forces which depend on mutual spin orientation of the particle and object.
- Each physical objects, in LIVING or NON-LIVING Nature, possesses its own characteristic torsion field.
- They can be observed by Kirlian methods.
- Any permanent magnet possesses its own torsion field.
- Pyramids, cones, cylinders, flat objects, triangles, etc. are torsion field generators.
- Aluminium is an effective shield for torsion fields.
- Aluminium mirrors will reflect torsion fields.
- A combination of geometrical shape and high voltage will cause a reduction in gravitation.
- Many effects remain up to four days after the torsion field is removed.
- They are identical to the transverse spin-polarisation of the physical vacuum.
- They are shielded by artificial materials possessing orthonormal topology of structure.
- Torsion field has a cone shaped spatial configuration.
- They significantly alter the oscillation of quartz crystals.
- Torsion fields can alter the process of radioactive decay.
- The charged object must not be subject to any shocks, otherwise the torsion field charge will disappear, as torsion fields are closely coupled to inertial forces.
- They can be generated as the result of the distortion of the geometry of the physical vacuum.

Torsion field references amount to over 10,000 articles belonging to about 100 authors. Over half of these work in Russia. So dear reader, if you want to track down the properties in detail. you have more than enough to keep you busy for a long time.

To summarise the above, all these so-called new torsion and axial field properties match exactly the properties as given to you in this book and that were known for hundreds of years. At such, apart from a change in name, we have additional irrefutable and current verification that the Joe cell is a simple Orgone (or life force) accumulator.

For the astute reader, I am sure that you can think, (with the use of some of the above newly mentioned effects) of methods of improving your basic cell to make it less leaky, thus acting as a better container of Orgone.

The past.

A.

A very old warning states that Cosmic fire can consume the unready; man is warned that to tamper with the energies of the Universe is forbidden until he is prepared through inner transformation.

As this transformation is far from completion in the majority of mankind, we have a sorry state, where critical information on Cosmic energy and its utilisation have to be carefully guarded. As all energies can be used both for good and bad, the end result is that a few have used these powers for the control of the majority. As such, information on the Cosmic forces is very hard to come by at the grass root level, where we, the minions reside.

Throughout history, various scraps of information have been published that has given the inquiring researcher enough data to enable him to piece together at least the rudiments of the power source and the related construction.

As Walter Russell said, " Everything which seems at rest depends upon violent motion to make believe it is at rest. " So, this seeming stillness that surrounds us is a seething sea of violent motion. By unbalancing this rest and balance, we have endless power at our fingertips.

Also, as quoted by Walter Russell from The Divine Iliad,

" Great art is simple. My universe is great
art, for it is simple.

Great art is balanced. My universe is
consummate art, for it is balanced simplicity.

I have but one law for all My opposed
pairs of creating things; and that law needs
but one word to spell it out, so hear Me
when I say that the one word of My law is
BALANCE

And if man needs two words to aid
him in his knowing of the workings of that
law, those two words are
BALANCED INTERCHANGE

If man still needs more words to aid
him knowing of My law, give him
another one, and let those three words be
RHYTHMIC BALANCED INTERCHANGE

So, dear reader, as you can see in the above, the energy is a rhythmic, balanced interchange of two streams as is our Orgone force, a pulsating, dual expanding and contracting vortex. All expressions of energy seek a point of rest, and return to a condition of rest. Our Joe cell concentrates this rest energy and in this concentrated, unnatural state, the energy is desperately trying to return to its base or rest state. We allow this to

occur in the combustion chambers of our motor, and the resultant return to rest of the Orgone energy creates the work that powers the motor.

I will now mention other quotes regarding the Cosmic force, from far less authoritative individuals than the Almighty.

B.

The following is a communication received and written by Carlos Zelaya in 1971:

" In Cosmic Energy, or the energetic action of Cosmic Rays, we find it is in itself an undrainable energy source within the reach of all the Universe. To take advantage of it at any experience we must use as departure point some elemental concepts based upon Cosmic laws.

This energy moves itself within certain fields or strips, both at infinite space as within the geomagnetism of heavily bodies. To achieve tapping and concentrating it, it is necessary to make geomagnetical study of the planetary area, as a deep study of astral or astrological motions, according to your language.Considering that these rays move and behave in a given way according to solar and lunar motions, and with the combination of both and of planet Mars, which is the main reflector of this solar system for Cosmic rays, they are the most fitting for the experiences of exiting the atomic nuclei. "

Additionally, the following was received by Carlos, also in 1971.

" To condense cosmic energy it is needed a device somewhat different to the ones presently used on Earth.

It is not only different but its variations lies upon concepts and principles related to its construction, on Earth are taken as principles physico-chemical phenomena, etc.. We take as principle the ELECTROCOSMIC phenomenon, which is the energetic manifestation of the WHOLE's Elemental Laws.

Therefore, for energy-accumulation, we take into consideration that; Any directed energy within an inert space tends to form a field because of the seeking an equidistant balance with respect to the field's axis properly. "

Also, the following was received by Carlos in 1971.

" The phenomenon because of which cosmic energy is condensed is:

1. Because its natural atoms are ACTIVE MATTER.
2. Because it is " active matter ", it is possible to condense and fix it.

To fix its condensation it is necessary that the energy levels be active enough, for the later, with the polarisation " shock ", be formed the layers of matter, which only through their atom's excitation it is active and generates, by reaction of impulses, a given wavelength.

With this simple principle, but highly positive, it is attained the concentration of (cosmic) energy into layers of NATURAL matter and its generation of regulable fields according to the excitation it is made to undergo, for the natural matter of the Cosmos is an energy source. "

I have left the translations as received, you may want to manipulate it into more " correct " English.

C.

You may want to read an article by Rick Anderson and his explanation on the Poynting vector and the Lorentz force. See his article at (<http://www.tricountyi.net/~randerse/lgf.htm>). This article will explain to you the reason for the rotation of a suspended magnet that is placed near a charging vat. Also, it will partially explain to you the reason for the concentric, cylinder within cylinder design of the basic Joe cell. In brief, if you do not have Internet access, I will quote the main paragraph:

" The third vector (Lorentz/Poynting force), then , must appear at right angles to BOTH the electric and magnetic vectors, at all points around the perimeter of the subject; and so it manifests as a CIRCULAR ORBIT OF FORCE AROUND THE SUBJECT WITH A PREFERRED DIRECTION, similar to a rotating energy field or vortex. The direction of this circular Lorentz can be switched between clockwise and counter-clockwise simply by reversing the polarity (or physical connections to the coils) of the amplified signal driving the coils. A North pole at the top, with a South at the bottom, will cause the Lorentz force to circle counter-clockwise, and a S-N clockwise. "

This has been explained in earlier chapters, of this work.

D.

You may want to read " An Analysis of the Joe cell from a Biodynamic Perspective ", By Guy McCarthy. Although I disagree with a fair portion of his conclusions, nevertheless, there is a lot of good background information for the Joe cell experimenter. It is available on web site: (<http://www.twelvestar.com/Sourceworks/JoeCell.html>).

E.

Orgone in relation to some other energies. By Lawrence Barth.

" In the late 1950's, Gaston Burridge published an article on " cone " energy. He discovered a form of energy which, he states, his and others' experiments show come in a beam from the apex of a cone or pyramid made purely of metal, or cardboard or wood covered on the outside with metal foil, especially brightly polished foil. Here one is reminded of the orgone accumulator, especially the funnel accumulator, but we must notice that the metal is on the outside of the organic material, not the reverse; nor need there be any opening at the apex, as is the case with the funnel. To the best of my knowledge, the radiation comes in a beam from the apex rather than equally from every surface of the metal. The beam is as intense at night as at daytime, this seems to eliminate sunlight as the direct source of the energy. "

F.

The research of Karl Von Reichenbach. By Kenneth Strarz, (quoted in selected parts).

" Baron Karl Von Reichenbach was a nineteenth century scientist whose amazing researches have been almost totally forgotten. He discovered the fundamental new energy, odyle, the same in major respects to Reich's orgone. in support of his discovery he performed literally thousands of

controlled experiments, publishing the results over a twenty year period. Reichenbach did not reckon with the terror and hatred that the human being feels when confronted by life specific energies.

Reichenbach was born in 1788 in Stuttgart. In chemical research he discovered creosote, paraffin, eupion and pittarcal. from 1845 until his death, he tried fruitlessly to convince his colleagues of his discoveries. he did a huge amount of research in the unseen properties of magnets and crystals. Crystals and magnets observed in the dark showed flames rising three inches from the ends, shaped like a tulip. They were very beautiful and moved constantly. He named the new energy odyle.

In addition to magnets and crystals, Reichenbach described eight other sources of odic energy: living organisms, the sun, moon and stars, heat, friction, artificial light, chemical reactions, electrical charges, and the material world in general. He discovered that the odic processes in the human body interacted with other sources of odic energy. Reichenbach discovered that a strongly charged body could alter the natural charge of another substance by contact.

His final conclusion isthat the odic force is a universal adjunct of all matter in variable and unequal distribution and that this force is one which extends over the entire universe. "

As stated above, there is a vast amount of recorded data, but unfortunately not easily available, as most of his work has been out of print for over one hundred years. His work is vital to any reader that attempts a thorough understanding of the Orgone force.

G.

The work of Georges Lakhovsky.

Lakhovsky states that every living being emits radiations. If you read his book " The secret of Life ", you will easily see that the experimental results obtained with various shaped spirals is a direct tie-in with our Orgone energy topic. Similarly, you will see how the " Y factor " ties in to the body's emitted radiation. Again, good reading for the researcher.

H.

Some very interesting comments from the great Erwin Schrodinger one of the founders of quantum mechanics and well respected by his peers. The comments nicely tie in with the Orgone force and living organisms:

"...Today it is believed that living organisms feed on energy and various kinds of foods have different energetic values. This is an absurdity. ...in any point of the universe entropy increases and the living organism continuously produces positive entropy, too, and so everyone is drawn towards a state of maximum entropy, ie., to death. To avoid this state and so to be alive, the living organism decreases his entropy continuously extracting the negative entropy from the environment, including food..."

What a lovely way of stating that we require Orgone (which has negative entropy) and thus by logic we will interact with any Orgone source, including a Joe cell! Again, the Y-factor.

I.

To finish this very brief section on past information, I will mention some important research information from Reich.

The effect of Deadly Orgone Radiation. (1961) Compiled by Charles R. Kelley in Radix institute bulletins.

"Dor is an abnormal life-inimical form of orgone energy. it is present recurrently throughout the Earth's atmosphere, is present chronically in large regions of it, and is increasing.

Dor is an immobilised stagnant energy that seriously interferes with normal orgone energy metabolism, both of atmospheric and of living orgone systems.

Whereas orgone energy normally gives the sky a light blue or blue grey appearance, DOR-infested regions of the atmosphere appear dark, sometimes blackish or purplish black. Normal orgone energy is in constant motion, flowing, flimmering, or pulsating, while DOR is still and oppressive.

The stillness of DOR-infested atmosphere makes them especially subject to pollution of all kinds. Urban smog appears principally and most seriously in atmospheres immobilised by DOR.

Animals or plants exposed to heavy or chronic dor concentration are seriously disturbed in their orgone energy metabolism, which is dependent on the external orgone energy field in which they live. Continued exposure can result in grave disorders and eventually, even death for plant and animal alike.

A tree exposed to a DOR infested atmosphere dies in a particular way. DOR is attracted down onto the tree from above. The top of the tree therefore is usually affected first. the leaves curl and die, and the bark disintegrates and peels. The tops of outstretched branches, usually near the top of the tree, are next affected. The bark on the tops of the branches turns dark and disintegrates. The tree dies from the top down and from the outside in.

In areas of extremely high DOR concentration, exposed rocks begin to turn black. The black usually begins in small spots, and expands to cover more and more rock surface.

When DOR is removed by the use of the Reich apparatus, it becomes concentrated around the equipment. This concentration can become so serious as to be a hazard to life."

The Core men.

I have no intentions of boring you with any conspiracy theories or my phobias. I will quote Reich directly:

" 1. The CORE men (Core = Cosmic Orgone Engineering), as I came to call them, apparently were thoroughly conversant with the laws of functioning in the cosmic Or energy ocean, especially with gravity as a function of superimposition.

2. They use cosmic Or energy in propelling their machines.

5. The CORE men were obviously riding their space ships on the main Or energy streams of the Universe."

There is much more on the above in the Orop Galactic Stream publication. The Orgone Energy motor.

I will mention in brief, some references from Dr. Reich's work, in relation to a method of utilising Orgone energy to power a motor. The full details were published in 1948 and 1949, and the reader may refer to these for full details.

For his radioactivity work, Reich used a Geiger Muller counter. As a result of many experiments, he noticed reading anomalies with some of his experiments. Basically, he noticed increased reading with the counter dependent on Orgone concentrations. This eventuated in Reich eliminating the normal Geiger Muller tube and replacing it with his own specially made tubes. He named these Vacor tubes.

These tubes were evacuated to .5 of a micron, which is below the level that normal ionisation would occur. As a result of charging these Vacor tubes with Orgone energy, he discovered that they would produce a high pulse rate on the GM counter. This led Reich to further experimentation, resulting in the modification of the standard counter circuit in such a way that a small motor could be made to rotate directly from the Orgone energy.

This motor was a small AC type made by Western Electric, with a type number of KS-9154. It would run when Reich connected an antenna and/or earth to the modified GM counter. It would also rotate whilst under the influence of a field emanating from a living creature. The rotation of the motor was quite unusual as it could reverse direction spontaneously without significantly slowing down and speeding up again as if the motor had no inertia. The rotational speed also varied unexpectedly and could be made to run faster or slower, depending on the person that had his hand near it.

Reich explained the above idiosyncrasies, by referring to a force he called the " Y factor." He refused to divulge what the Y factor was, and mankind will have to wait till the year 2007 AD, when his sealed archives will be opened. As already mentioned, I am very confident that the Y factor simply stand for YOU, meaning that the individuals Orgone field interacts with the experiment. This has occurred over and over with experimenters interacting with the Joe cell.

For the more dubious reader, I will quote directly some of the comments of witnesses that were present, when Reich was demonstrating the Orgone motor:

Myron Sharaf.

"it involved the use of an accumulator attached to a motor; concentrated Orgone energy was triggered by a small amount of electricity, an amount insufficient to rotate the motor without the accumulator.....When powered by the combination of Orgonotic and electrical energy, it ran smoothly and quietly; but the speed varied depending upon the weather....more rapidly on dry, clear days, more slowly when the humidity was high. "

Elsworth Baker.

" Reich first used vacor tubes in series attached to a small accumulator and connected to a transformer to build up an electric charge to excite the Orgone energy. He used four or five vacor tubes. All were connected to a 25 Volt electric motor.....Reich took away one vacor tube after another until all were taken away, and still the motor ran. The important ingredient was the so-called Y factor which Reich did not divulge.On Orgone energy , the motor was practically noiseless and ran smoother and faster. At times, it would change direction. In damp weather, it would not run. "

Lois Wyvell.

" The one I saw was about the size of a large orange.....It was hooked up to a special Orgone accumulator with the Y factor that Reich did not divulge as he felt mankind was not ready to use such a potentially boundless power rationally.....But the motor ran on atmospheric orgone energy fed to it through the accumulator and also from the human energy field.....It ran erratically, as no motor with a mechanical energy source does: It slowed down and speeded up without any interference. Also, if one curved his hands over the motor, it picked up speed, and with one's hand over it, it speeded up and slowed down....It reversed itself every once in a while without slowing down, even without a jolt. "

As you can see, there is a large and undeniable link between the atmosphere, living organisms and the Orgone motor. In a movie sequence that Reich made, there is a demonstration of the motor not turning until Reich placed his hand in the vicinity of the motor. The motor then ran until Reich removed his hand. So if we are not dealing with a living force, I would challenge the reader to offer me a logical, scientific reason to the contrary. Please, don't bother replying with references to tricks with mirrors, RF transmitters or any other circus act type explanation.

Again, let me state that the above is a very, very small sample of the vast amount of recorded data in our historical archives.

The present.

The present lies with you. There are many teams spread all over the world, that are experimenting with Orgone accumulators. These teams are working with the Cosmic energy for many and varied applications. The Joe cell and its application, is a very small section of the overall research work. The majority of the effort is in four main areas:

1. Weather control. There has been a vast amount of knowledge gathered in this application. Reich himself has written hundreds of pages on his cloudbusting operations. A more recent individual is Trevor Constable. The book, " Loom of the Future ", by Thomas J. Brown from Borderland Science Research Foundation, is a fair overview of the present state of the art.
2. Water modification. This area has a smaller following, but is amply covered on the Internet. Basically, it involves the use of either egg

shapes or vortexes or both, (after Viktor Schauberger's work), to modify the water structure and the enclosed Orgone energy. The end result is a living water more suited for all living organisms. There is a lot of literature on this. Check the Internet.

3. Health uses. This is the one that caused the demise of Reich and his works. He, and many others that have since copied him, have discovered that the Orgone accumulator can have wondrous curing abilities, with many claims of cancer cures. A lot of literature on this. Check the Internet.
4. Covert uses. Since recorded history began, secretive groups have exploited the majority by withholding huge advances in technology. This has not changed, and will not change in the near future. It is indeed very frustrating experimenting with your pieces of stainless steel tubes and your Joe cell, when the chosen few are laughing their heads off, watching you trying to recreate the wheel. So, as far as the present is concerned, we have basically two groups, one covert and way beyond any technology that the average person can imagine, and the other a huge team of back yard and academic experimenters, stumbling and bumbling their way through the fog.

The future.

To quote Walter Russell directly, regarding a future new source of power (written 1957):

" The first stage to be transmutation of the atmosphere into free hydrogen, then, generations later, by transforming solar radiation into solar generation as man's ultimate fuel. This would not only free him from dependence upon earth's resources, but give him complete power to cause rains wherever he desires, on desert or meadow, and to dissipate cyclones while forming. "

A chief source of Orgone, is solar radiation.

The future depends on us all. If we interchange our research for the good of all, (which is so easy now with e-mail and the Internet) we will be able to make quantum leaps in our knowledge. thus the gap between covert and freely available information will close. The end result is a better world for the majority and not just for the chosen few.

Chapter 12

„the love that you hold back is the pain that you carry“

READER'S CONTRIBUTIONS

"Y FACTOR" POLARIZATION/MODIFICATION

From Joe via Brett:

" The heart of the wise inclines to the right,
but the heart of the fool to the left. "

Ecclesiastes 10:2 (TLB)

Background

Joe has said that everyone has his or her own "polarization" (Y Factor). Some of these polarizations are:

- North Pole - forward (good for getting cells working)
- South Pole - reversed (good for getting cells working)
- North Pole - reversed (not good for getting cells working)
- South Pole - forward (not good for getting cells working)

Now you may be getting concerned that you are one of the "polarizations" that are "not good for getting cells working", and therefore will be or have been unable to get your Joe Cell to go beyond stage 1. The purpose of this chapter is to describe one process of how to temporally resolve this "polarization" situation.

Overview and Equipment

This process is similar to showering, bathing or sleeping - only in that it is not permanent! Therefore as often as you need to work on your Joe Cell to get it beyond Stage 1, you may need to follow this process. There is minimal equipment required, only the following:

- 1 x compass or analogue watch/clock
- 1 x 12 V battery, fully charged with clean terminals
- 1 x chair (non magnetic)
- 1 x four sided table (non magnetic)

Process

As with working with the Joe Cell, ensure that you hands are clean. The steps for this simple process are:

- Step 1 Use the compass or watch to determine the direction of North.
- Step 2 Align the sides of the table to each of the cardinal compass directions.
- Step 3 Place the chair on the North side of the table so that when you are sitting in it you are looking South over the table.

- Step 4 Place the battery on the table with the + (positive) terminal to the West and the - (negative) terminal to the East.
- Step 5 Sit in the chair facing the table.
- Step 6 Lick your Thumb, Index and Middle fingers of your right hand.
- Step 7 With your right hand reach across your body and using the digits moistened with your saliva grip the - (negative) terminal.
- Step 8 Keep your left arm in your lap or by your left side and wait in that position for 30 seconds.
- Step 9 Lick your Thumb, Index and Middle fingers of your left hand.
- Step 10 With your left hand reach across your body under your right arm, without touching it or your clothes and using the digits moistened with your saliva grip the + (positive) terminal.
- Step 11 If you feel any "buzzing" in your fingers or thumbs, then with one digit at a time, break contact with the terminal (ie lift it off but leave the rest in contact) and circle/move/rotate it in an anticlockwise direction seven times, then put it back on the terminal. Repeat this process as many times as necessary for each digit until you feel no "buzzing".
- Step 12 Once all "buzzing" has been eliminated then maintain your grip for at least five minutes, but no more than seven minutes. Ensure that you keep an air gap between your arms during the whole time.
- Step 13 Release your grip of the + (positive) terminal and move your left hand back across your body under your right arm, without touching it or your clothes to the position it was in at Step 8.
- Step 14 Release your grip of the - (negative) terminal and move your right hand back across your body. You should now be temporally "polarized" in a form that is "good for getting cells working" and be ready to work on getting your Joe Cell beyond stage 1.

From Bruce:

The following is a report from Bruce, an avid and long standing experimenter from Adelaide (Aust.). Bruce has spent years researching Orgone and the Joe cell. I thank you Bruce for sharing with us your many experiments.

RESULTS USING SMALL CONES AND DE-IONISED WATER (April 1997)

The following experiments were done using small cones, de-ionised water in a glass container and a D.C. power supply capable of 48 Volts at 20 Amps.

VITA HEALTH POWDER - KAL 5..

Test 1: Monday 28/04/97. De-ionised water with no additives - Current = 0.5 A, very few bubbles, no precipitation.

Test 2: Monday 28/04/97.(10.00 AM) Added 2 teaspoons full of Vita Health powder containing Calcium, Magnesium, Potassium and Sodium salts. Current began at 2.5A and slowly rose to 3 A with more bubbles than Test 1 but all hydrogen (yellow flame, etc)

Test 3: Monday 28/04/97.(16.15 PM) Bubbles had remained on cones from the morning's experiment. Turned power on and current = 4 A with lots of hydrogen bubbles. Water became warm after 15 mins. and white deposits were floating on top.

MAGNESIUM SULPHATE.

Test 1: Tuesday 29/04/97. Began with fresh water and added 2 teaspoons of Epsom Salts (magnesium sulphate) Current began at 11 A and climbed to 16 A. Turned off and diluted mixture by half.

Test 2: Wednesday 30/04/97. Current draw began at 8A on switch on, then climbed to 13 A. Producing lots of gas - very large bubbles on the surface (lots of surface tension) and lots of very fine bubbles in the water itself. Very little deposits floating on the water with what was there being white in colour. Both explosive and implosive gas when lit.

Test 3: Thursday 01/05/97. Left 24 hours and turned on again. Drew 10 A current and produced both implosive and explosive gasses. Lots of brown gunk floating on the surface. (scooped off)

Test 4: Friday 02/05/97. Turned on and current draw was 7 A which then rose to 11.5 A. Mainly implosive gas with lots of brown gunk floating on the surface. (scooped off)

POTASSIUM HYDROXIDE.

Test 1: Friday 02/05/97. Started with fresh water and added 0.25 teaspoon of caustic soda. (potassium hydroxide) Current was 13 A with pure white bubbles with lots of clumping together (high surface tension) on the surface, a vapour appearing above that and lots of very small bubbles causing the water to look white about in the top half of the glass container. When lit, bubbles were definitely hydrogen. Deposits on top of the water were mainly white with a faint tinge of brown. There was not enough to warrant scraping off.

Test 2: Friday 02/05/97. Diluted mixture by half, current now 8 A, still producing lots of hydrogen gas. Very loud when lit. Deposits on top of the water were mainly white with a faint tinge of brown, but still not enough to warrant scraping off.

Test 3: Saturday 03/05/97. Current had dropped slightly to 6 A with gas exploding very loud, much louder than the previous day. Bubbles were very white with a small amount of white deposits floating on the water.

Test 4: Sunday 04/05/97. Current had dropped again to 5.5 A with the gas definitely hydrogen when lit producing a very loud explosion but with yellow flame. Reversed the polarity on the cones and immediately there was a great mass of bubbles which collected together in a clump. (lots of surface tension) Put the supply back the right way and the clumping effect remained. When lit, gas was definitely implosive. No visible flame, water splashed out of the container and my ears were ringing. No deposits on water.

Test 5: Tuesday 06/05/97. Current now down to 4 A but still lots of bubbles. Very loud when lit but back to hydrogen. Did the reverse polarity and back again trick and gas became implosive again. No deposits on water.

Test 6: Wednesday 07/05/97. Current stabilised at 4 A. Gas when lit extra loud, first hydrogen and then implosive without any power supply fiddling. No deposits on water.

Test 7: Thursday 08/05/97. Current still at 4 A with very loud implosive gas straight off. Bubbles appear really white. No deposits on water.

Test 8: Friday 09/05/97. Same as Test 6.

OBSERVATIONS.

From what we have been told by Joe, the things to look for in charging the water are:

- Bubbles that have lots of surface tension so that they gather together in clumps around the centre tube
- Bubbles that are implosive (no yellow flame and very loud)
- Bubbles that are very white
- Bubbles remain on the surface of the cones after the unit is switched off
- Magnetism evident around the keg
- Lots of gunk coming to the surface while the unit is running
- Water rotates anti-clockwise when charged

The KAL 5 VITA HEALTH powder was the least productive of the materials tested, I think not worth pursuing. The MAGNESIUM SULPHATE was the only material which enabled the bubbles to remain on the cones after the unit was switched off, however the gas coming off was no where near as explosive/implosive as the POTASSIUM HYDROXIDE. The KOH gave very little deposits on the water's surface but it did give extremely powerful "bangs" when lit. It was interesting to note a lot of action occurring under the surface with lots of small bubbles which travelled down from the surface, mixed with bubbles coming up from the bottom and went back up to the surface. This sort of effect was also mentioned by Joe. The other interesting observation was that the current reduced from 8A down to 4A even though no material was removed from the container.

MARK 1 JOE CELL TESTS (JUNE 1997)

First test done with a perspex outer tube instead of the 4" stainless steel one. Charged water (as good as we can charge it) was put in the cell on the car and the current was found to be 165mA. Test drive to Goolwa gave fuel economy of 58MPG, while the return trip to home averaged 52MPG. The next day cracks were found in the perspex and the unit was drawing air so I removed it. The fuel economy stayed at over 50MPG for the next two days (lots of city driving) and then returned to "normal" for winter running of 46MPG. The unit was then repaired and reinstalled but a backfire destroyed it before any more tests were undertaken.

I then rebuilt the unit with a stainless steel outer tube (4 inch) as per the Mark 1 drawing, and reinstalled it in the car. This time I could not get the water in the keg set-up to "charge" properly and was not happy with it. However I still put it in the car and found the current to be 50mA this time. This was accounted for by the fact that I was now using the outer tube as the positive and so this meant there was an additional neutral plate inside the unit. I could not get any effect at all on the running of the vehicle with this set-up. On removing the water from the unit after three weeks, it was full of brown deposits, similar to what you get on top of the water during the keg treatment.

I washed the unit out and refilled it with de-ionised water with caustic soda added to it until a current of 5A at 12V was obtained. I refitted the unit to the car and started it. The vacuum gauge on the unit followed the manifold vacuum for about one minute and then went to zero, indicating a positive pressure in the cell. The engine began to run on three cylinders and copious quantities of steam began coming out of the exhaust. Thinking that I had overfilled the container, I syphoned the liquid off until it was about two thirds of the height of the container. I repeated the test with the same results. I drove to Tailem Bend and back to Murray Bridge where I attempted to demonstrate this effect to Roger. However, this time there was no pressure evident by the vacuum gauge reading and the car kept running, although it sounded like it was running rich as if the choke was out. After a couple of minutes the engine went back onto three cylinders and during this whole process there was lots of steam out the exhaust.

The next day I rechecked the water level (not a lot of change) and tested the current. To my surprise the current had increased to 10A. I topped up the water so it covered the tubes in the cell and rechecked the current draw which was now 12A. I installed a tap in the delivery line and retested the unit. If pressure is allowed to build up in the unit and the tap cracked open slowly, the engine revs will increase for 15 seconds or so and then die back to normal. If the tap is opened any more, the engine begins to run rough and steam comes out the exhaust.

From what Joe has said on all this, and which these experiments seem to verify, is that as soon as anything is added to the water, you have electrolysis and thus it does not produce enough gas to run a vehicle. I am not sure why there is the excess of steam out of the exhaust when the

tap is wide open. If there was an air leak in the cell, this could cause excess water to be drawn into the engine, however I can build up gas pressure in the cell by having the delivery tap off and the pressure remains constant on the gauge, indicating that the cell does have an airtight seal..

I have now removed this unit off the car - end of MARK 1 tests!

JOE CELL TESTS

The following is a summary of unusual effects that I obtained from a very early design Joe Cell. I reported these effects at the February ASTRO meeting but decided to submit this article to the newsletter for those who were not at the meeting.

The cell was first built in 1993 using 2", 2.5", 3" & 3.5" tubes, made from flat 316 stainless and rolled into tubes. These were then tack welded at three points. The only alteration from the original design is that a small SS cone was fitted above the tubes to direct the energy into the 0.5" aluminium delivery pipe on top of the unit.

SUNDAY 31/01/99: The unit was filled with water charged by P & U and fitted to the car in the passenger compartment. The aluminium delivery pipe goes through the firewall and connects to the manifold initially via a brass fitting. The fitting was "blind" so no actual vacuum was present on the cell.

THURSDAY 4/02/99: There was no effect so I changed the brass fitting and made an aluminium one. I also drilled this out so that manifold vacuum was present on the cell this time. On starting the car it ran slightly rough as excess water was sucked out of the cell and into the engine, then it ran smoothly. I drove approximately 0.5 Km when the engine revs would not come down below 2000. I drove back to the garage and switched the engine off when it "ran on", momentarily stopped and then ran in reverse up to about 2000 revs while I stood and watched it. It only ran for about 5 seconds and stopped.

I switched it on again and once again the revs would not go below 2000. This time when I turned off the ignition, it stopped OK. I rechecked the work I had done and made sure there were no air leaks into the manifold which could be giving me this effect. I found nothing, reassembled everything and started the engine again. Once again, 2000 revs. I disconnected the aluminium delivery tube from the manifold and plugged the rubber hose from the manifold but the engine still would not run under 2000. Having made an appointment with an accountant and booked the car in for a wheel alignment, I now began to get into panic mode. I then physically removed the cell from the car, started the engine and found the revs had dropped to just over 1000. By screwing in the idle mixture adjustment screw I could get it to idle at about 800. The idle revs seem to be a bit variable and continually ranged from 600 to 1000 and back again.

The cell was off for two days as I needed the car reliable but I found that the effects stayed (e.g. Idle speed varying) I found I could disconnect the anti-dieseling solenoid and the engine would still idle, although at lower revs (about 500) and roughly. (normally this instantly kills the engine)

SATURDAY 6/02/99: I reinstalled the cell and connected it up the same as before but did not find any difference. I have played with the timing at various times during testing and found that on petrol I can go in excess of 50 degrees advance with no appreciable difference in engine running. I normally run 7 degrees advance for best performance/economy but can experience pinging problems. The timing was set at 10 degrees advance since the cell was originally fitted and I could almost stall the car in third gear, put my foot down and the engine would pull with no pinging. I did one test where I drove the car with 20 degrees advance and it ran OK, no pinging, just a slight dead spot at low revs.

SUNDAY 7/02/99: It appeared that the cell had died and that the car although behaving similarly to the previous day was losing the effects of the cell. The engine now stalled when the anti-dieseling solenoid was disconnected but would still run at 10 degrees advance with no pinging. I also found that during the day I had to make the idle mixture slightly richer to obtain a smooth idle. One thing I had noticed (since Thursday) was that the engine was extremely hard to start when left overnight. It acted as if flooded and would only start by leaving the accelerator pedal flat while cranking over. Once started however, the engine idled smoothly straight away and would start at the first flick of the key for the rest of the day.

MONDAY 8/02/99: The car was once again difficult to start first off, but then idled smoothly straight away once again. I disconnected the cell and plugged the rubber hose from the manifold and the engine appears to be almost back to normal with a smooth idle of 800.

TUESDAY 9/02/99: Car totally back to normal, started OK this morning, ran normally and engine stops immediately when anti-dieseling solenoid is deactivated. I removed the cell from the car and applied 24 volts to it from two car batteries in series. There was some bubbling but nothing appeared out of the top of the unit. I emptied the water into a glass bottle and the water was quite brown. This settled to the bottom of the bottle during the day. I washed the cell out with normal rain water, emptied it and filled it with more charged water from the original batch. I then applied 24 volts to the cell and immediately water and bubbles flowed out the top and over the edge of the cell. I lit these (hydrogen) and then masses of pure white bubbles came out which I lit. (very loud implosive - good stuff!) I then turned off the power and reinstalled the unit in the car. This all occurred within 1-2 minutes as I did not want to gunk up the cell by leaving the power on too long. I decided to repeat the circumstances of the original test i.e. no vacuum to the cell initially, so I machined up an aluminium plug which I then fitted into the aluminium fitting on the manifold. (This plug is a tight fit in the hose) I started the car and drove it for about 5Km. All appeared normal at this stage.

The cell is still fitted to the car at this time (9th March) but there has not been any further effects. I have also not had the time to make any adjustments or changes. In conclusion, the most interesting aspect of this event was that the engine revs did not reduce until the cell was physically removed from the vehicle and the effects as described above reduced over a few days. It is my opinion that this demonstrates proof that we are dealing with an energy, not a gas or some chemical reaction as some believe. What is this energy? My bet is that it is orgone, but who knows for sure until someone comes up with a repeatable working unit that can be tested.

JOE CELL UPDATE (May 10th 1999)

Since my last report, the cell has been sitting in the car connected by the aluminium pipe and rubber hose to the manifold. The hose has an aluminium plug fitted to it so that there is no actual vacuum present on the cell. During this period, the car has been acting rather strangely in that the fuel mixture runs rich for several days at a time, increasing the idle revs to about 1,000rpm and necessitating a carburettor adjustment to lean it off again. During this "rich" period I also noticed a drop in engine water temperature. After a few days, the reverse happens and the car begins to stall every time the vehicle tries to idle. Readjusting the mixture once again brings the engine back to normal running. These effects led me to believe that the cell was actually cutting in and out although at a reduced effect than I had experienced before. Overall I have been unable to get the car to run "normally" since the cell caused it to run at 2000 revs several months ago. Also fuel economy has worsened to about 40mpg.

After reading some of the Internet newsgroups and hearing about some experiments in Melbourne, I decided to try placing a circular magnet under the cell. Andrew happened to ring me up on an unrelated matter while I was contemplating this so we discussed the idea and he offered me some suggestions. These were North pole facing upwards towards the cell, trying brass or gyprock (diamagnetic) between the magnet and cell and surrounding the cell with gyprock to eliminate the effects of outside fields. Initially I took the cell out of the car and fed 24Volts into it. Immediately there were masses of the small white bubbles that we have come to know flowing over the top of the cell and down the side. When lit there were extremely potent implosions with one attempt ending in water shooting out of the exit tube and hitting the roof of the shed. I then experimented with the magnet and other compounds as mentioned above but did not notice any difference at all.

I then fitted the unit back in the car and left the circular magnet under the cell just to see if anything would happen. After two weeks.....nothing happened at all! After two weeks and one day, the engine began running roughly (in the Barossa Valley at the time) and by the time we arrived home, it was running VERY roughly. After investigation, I found a head gasket with a piece missing between cylinders 2 and 3. The engine machinist who faced the head commented that this occurrence is usually

caused by the engine pinging over a period of time. I have experienced some pinging in the engine but nothing severe enough to cause this. Then I remembered that the car has not run properly since the 2000 rpm episode, during which time I experimented with some rather radical timing changes (up to 20 degrees advance) in an effort to get the engine to run on the cell itself with no petrol. I am now assuming that as the engine has not been running correctly since then that this may have been when the damage started, having now slowly progressed to a burnout of the gasket. As I am working in Adelaide at the moment and I need the vehicle to be reliable to travel the 450Kms per week, I have decided to suspend any further testing with the cell on the car for a while.

THE JOE CELL SAGA CONTINUES (September 1999)

Wednesday 1/9/99: I fitted a cell given to me to try on my car. This cell is different to any others I have tried before in that the centre electrode (negative) is made of a 2 inch carbon rod while the outer stainless steel tube (positive) is 4 inches in diameter. There are no neutral tubes in this cell and the whole thing sits inside a container of plastic sewer pipe. The bottom is flat and the top cone is made of aluminium. This cell was given to me charged with water.

Monday 6/9/99: Nothing much happened until today when I began the daily 100km round trip associated with getting to work and back. After long down hill runs, on hitting the accelerator, large quantities of oil smoke belched from the exhaust. Also when the engine was restarted after stopping somewhere, the same thing occurred. This is very symptomatic of worn valve stem oil seals of which the engine was suffering to a minor degree, but the problem was now tenfold!

Tuesday 7/9/99: This smoky situation continued today and was getting worse to the point where sitting at traffic lights idling, I was disappearing in a smoke screen. Definitely defectable material.

Wednesday 8/9/99: When I arrived home I removed the cell, and discharged the engine of any residual charge by sparking the positive battery volts on to the block with a piece of wire. (I did this discharge process as from previous experience I have found that any effects from the cell seem to last about three days)

Thursday 9/9/99: The car was back to normal with almost no smoke again.

Monday 27/9/99: Even though the cell had not been in the car for 19 days, the engine began to smoke again.

Tuesday 28/9/99: I left it until the Tuesday night, by which time it was really bad, then discharged the block again. Once again the next morning, no smoke.

It appears that the charge had slowly built up again in the engine, even though the cell had not been near it. This effect is a bit like shorting out a large capacitor which will over time slowly regain some of it's former charge. My next step is to replace the valve stem oil seals and fit the cell

again to see whether there is smoke or no smoke! If there is no smoke then it would appear that if the engine has an oil sealing "weakness" then it could be amplified by the cell. If it still smokes then this would agree with Joe's 1993 reckoning that a plastic outer container on a cell "will cause the motor to pollute".

** The next contributions from Bruce are slightly off topic , but are relevant as a charging method for the water of a Joe cell...**

ORGONE BOX EXPERIMENT (1991)

The following is a brief description of an orgone accumulator that was built by lots of other people and myself as a combined project back in 1991. Firstly for those who have not heard of orgone, it is the energy that gives pyramids their interesting properties of keeping food fresh and sharpening razor blades, etc. There is a lot of information in books by Wilhelm Reich and others on orgone, so go search your library if you want more information.

The basic design of the accumulator that we built came from a book called "The Awesome Life Force" by Joseph Cater. This unit consisted of 6mm plastic sheet cut to size to make a box of the following dimensions: 300mm X 300mm X 450mm. The four sides and the bottom were glued together and the top was left separate so that it was removable. The box was then covered with 40 layers of kitchen type aluminium foil, alternately with 40 layers of newspaper. (Two thicknesses of newspaper were used for each layer) If you are planning to build one of these, we found the easiest way of making the layers was to cut the six sets (top, bottom and four sides) of paper and aluminium, glue them together in their sets and then glue them to the plastic box. The whole device was then wrapped up with packaging tape to give it a bit of protection, with the lid being wrapped up separately. The fact that the layers on each face of the box was not continuous did not seem to affect the operation of the accumulator.

Four experiments were tried in the box, which were carried out during summer (temperature was in the 30's):

1. An open glass of milk was placed in the box with a control glass placed in a normal cardboard box next to the accumulator.
2. A sealed jar of milk was placed in the box.
3. A stainless steel knife was placed in a jar of water in the box.
4. Temperature readings were taken inside and outside the box.

The results were as follows:

1. The milk inside the box was still normal (liquid, smelled fresh) after seven days (end of test), while the control sample was spoiled (lumpy and rancid) after one day.

2. The sealed jar turned into yoghurt. (normal yoghurt consistency and smelled fresh)
3. The stainless steel knife became slightly magnetic and a piece of steel was attracted to it when held close to the knife. The effect was very slight and only lasted about five minutes after removal from the jar of water in the box.
4. There was no appreciable difference in temperature that we could measure inside or outside the box.

None of the test samples were tasted due to concerns of DOR (Deadly Orgone Radiation), and it has been suggested that for foodstuffs, copper foil should be used and not aluminium for this reason. It was also suggested that an internal combustion engine could be run on this energy by passing the air through this accumulator before it went into the engine. We did have an attempt at this but did not have any success. However I feel that this could have worked if the box had been left on the engine for a longer period of time and if we had played around with the engine timing. Maybe we will get back to it one day?

ORGONE WATER TREATMENT (1998)

Having taken an interest in the effects of magnets and vortexes etc. on water, I decided last summer to take a different approach to a common problem of blocked drippers in a watering system that we have on our fruit trees. The water initially comes from two dams that we have on our property. This water is pumped up to a header dam and is gravity fed via a common pipe to a point where it is split into two feeds, one for each orchard.

Having done some previous experiments with orgone generators, I decided to make one and put it on one of the above water feeds so that one half of the orchard was watered with this water and the other half had no treatment. The only constant in the process was that I did know that in previous summers the number of blockages in the drippers was pretty much the same in both orchards.

The orgone generator was constructed from 40 layers of aluminium foil, separated by 40 layers of newspaper wound around the 42mm polypipe. Some people have expressed concerns that for anything food related, copper should be used and not aluminium, however as it was only a short term arrangement and the water was not being directly ingested, I decided to give it a go. As far as I can tell there has not been any harmful side effects from this experiment.

Now, for the results! Over the tested watering period, there were 14 hours of watering. The first two hours showed a reduction of 50% of blockages but during the third hour the number of blockages rose to equal those that had occurred in the unaltered half of the system. From then on the number of blockages dropped dramatically, (does this scenario sound


familiar?) with the final result showing a 52% less blockage rate for the orgone treated side.

This test was done over a short time frame and with a small number of drippers (78) so the results have to be taken with that in mind, however the results for me were quite significant, giving me a lot less work to do. The other interesting aspect of this experiment was that I did several diggings in similar soil types after watering and found that in each case the water in the treated side had soaked to approximately twice the depth of the water in the untreated side.

These results are similar to reports I have read of the effects of placing magnets around waterpipes, both in the reduction of dripper blockages and the effect of soaking into the ground quicker. How the two methods tie in together I am not sure, but it is interesting!

A Joe cell modification

supplied to energy21 by an unknown source

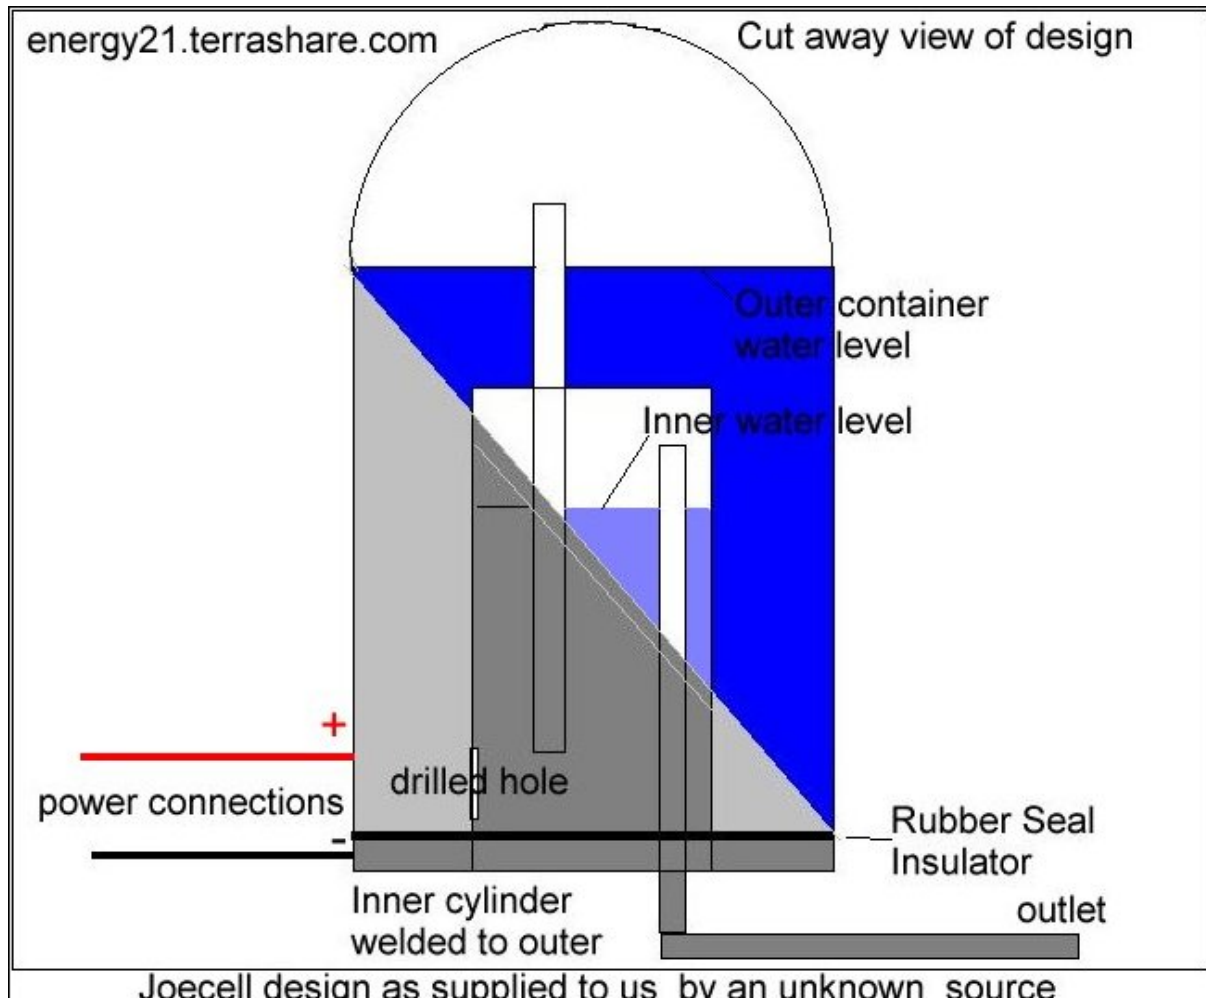

A word of warning

If you fill a closed container with an explosive gas mixture, as an example one (1) part oxygen and two (2) parts hydrogen you will have set the stage for accidental explosion.

Hydrogen and oxygen can and will explode with violent effect.

To know of this, and to teach this, and not carefully warn all parties is to ignore your place as scientific ethical investigator.

[part six of this article please read first](#)

A few weeks ago now, an unnamed source supplied me with the following diagram of what is said to be a Joecell mark 5 version.


I have not seen or handled the actual device and so my knowledge is somewhat limited, but I have made the following assumptions from this diagram reproduced on this web page.

You may find out more if you try some experiments yourself.

My contact says that claims were made, that it was said to produce gold and other metals (something by the way I find hard to believe).

Another source believes that it is a Joe device, but is used only as a flame arrestor, something I personally believe could be done.

It would not need the power, but would need a hydrogen/oxy gas inlet, and if so, I suspect that this gas inlet would be on the outer cylinder (as per the third diagram below) and situated somewhere below the outer container water level.

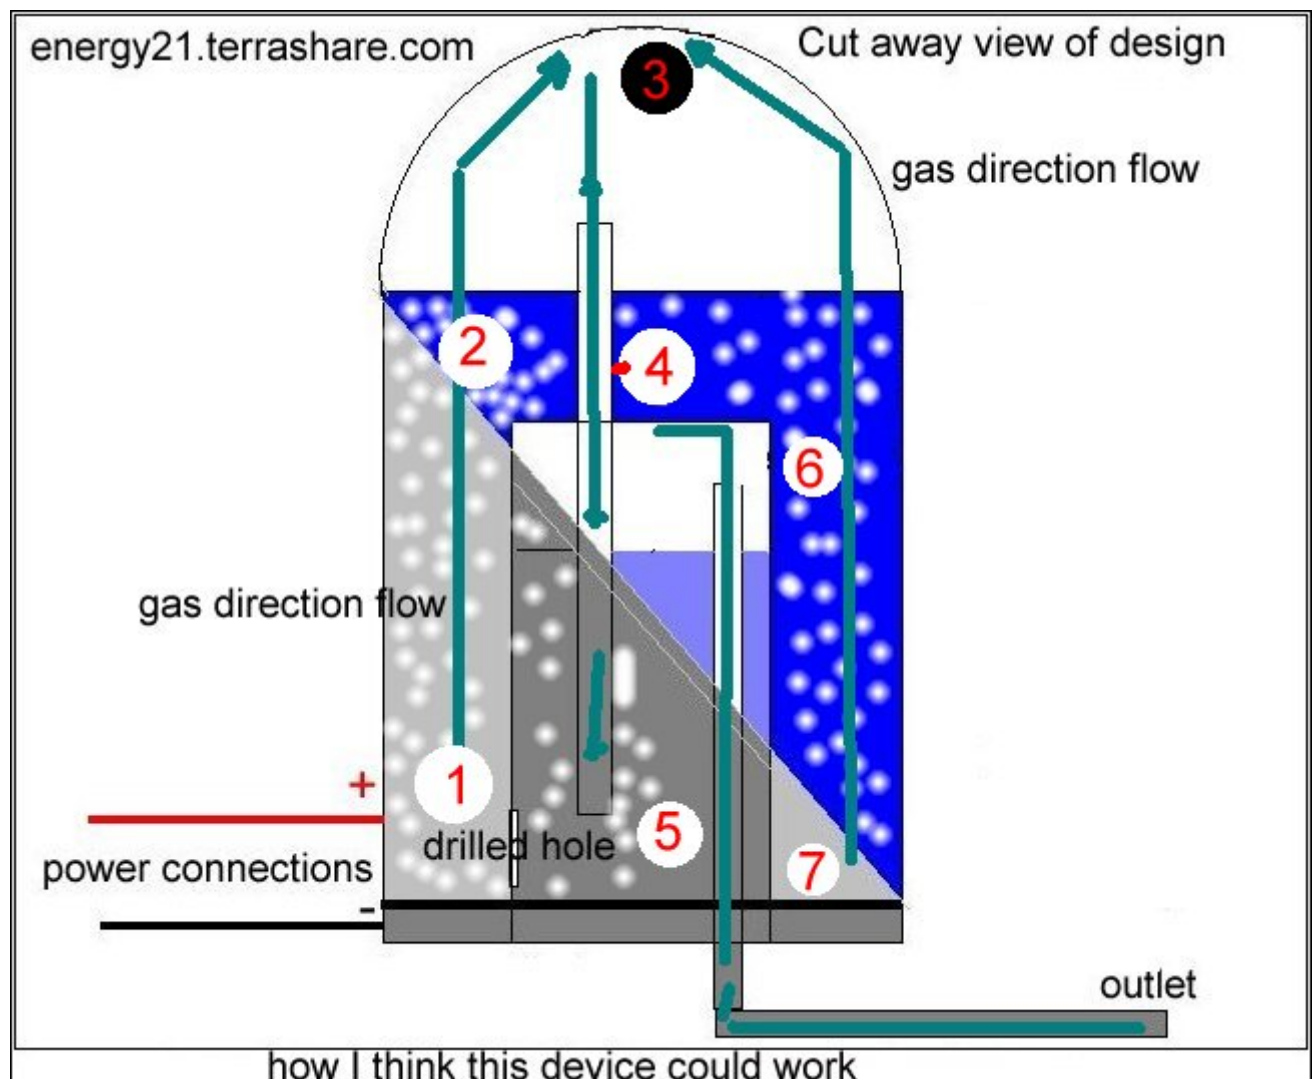

This alleged Joecell mark 5 seems to be one larger metal cylinder into which another closed cylinder has been welded to the bottom portion of the outer enclosure.

A rubber seal or insulation is provided at bottom of unit as per diagram, to allow a negative power connection and a positive power connection to be used to power this unit and not be shorted out through the metal surfaces.

From the diagram recieved the outer container has a positive electrical connection and the bottom portion and the inner metal cylinder is a negative electrical connection.


How it works or at least how I think it would **(1)** Gas is produced my means of electrolysis when a battery is connected to the positive and negative plate terminals.

(2) Gas flows through water to the top area of the outer containment vessel at position **(3)** After the unit has been running for a period the gas pressure would build up and force the water below **(4)** below the inlet pipe by forcing excess water to flow through outlet section.


Gas under pressure is then forced through this pipe until it exits and bubbles out at position **(5)** where again it flows to top of second inner vessel at position **(6)**.

Gas again begins up to build up pressure and then forces the remaining water in the outlet pipe and then allows the resulting gas to flow out through the outlet.

It would seems to me that when gas pressure is exhausted then water would again fill this pipe section and not allow a flame flash back.

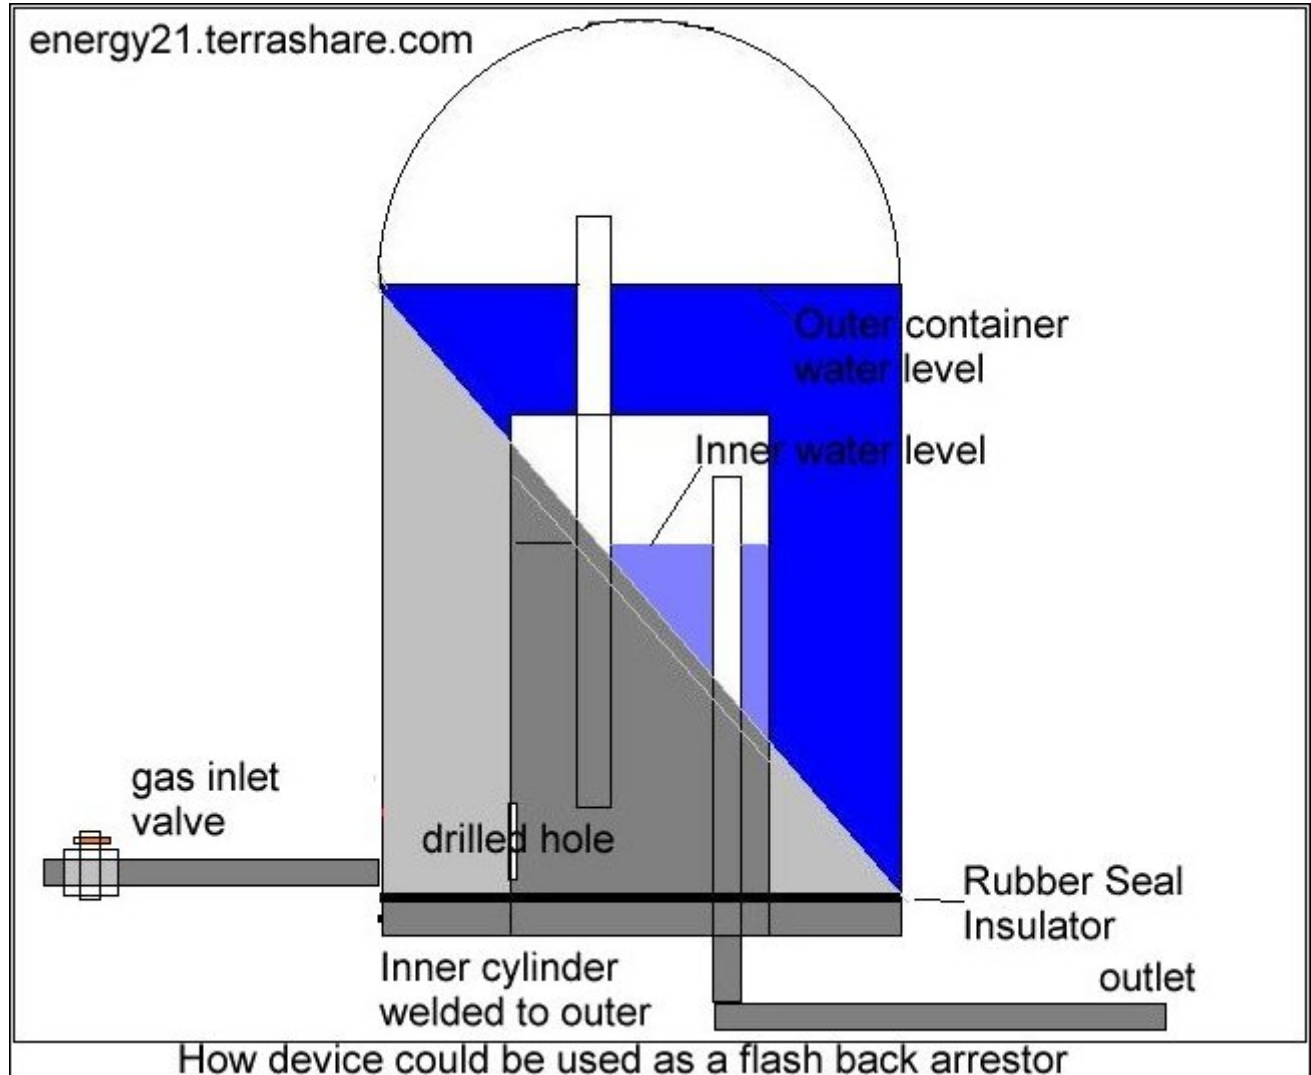

This the set up I assume would be used if the device is only used as a flame flash back arrestor.

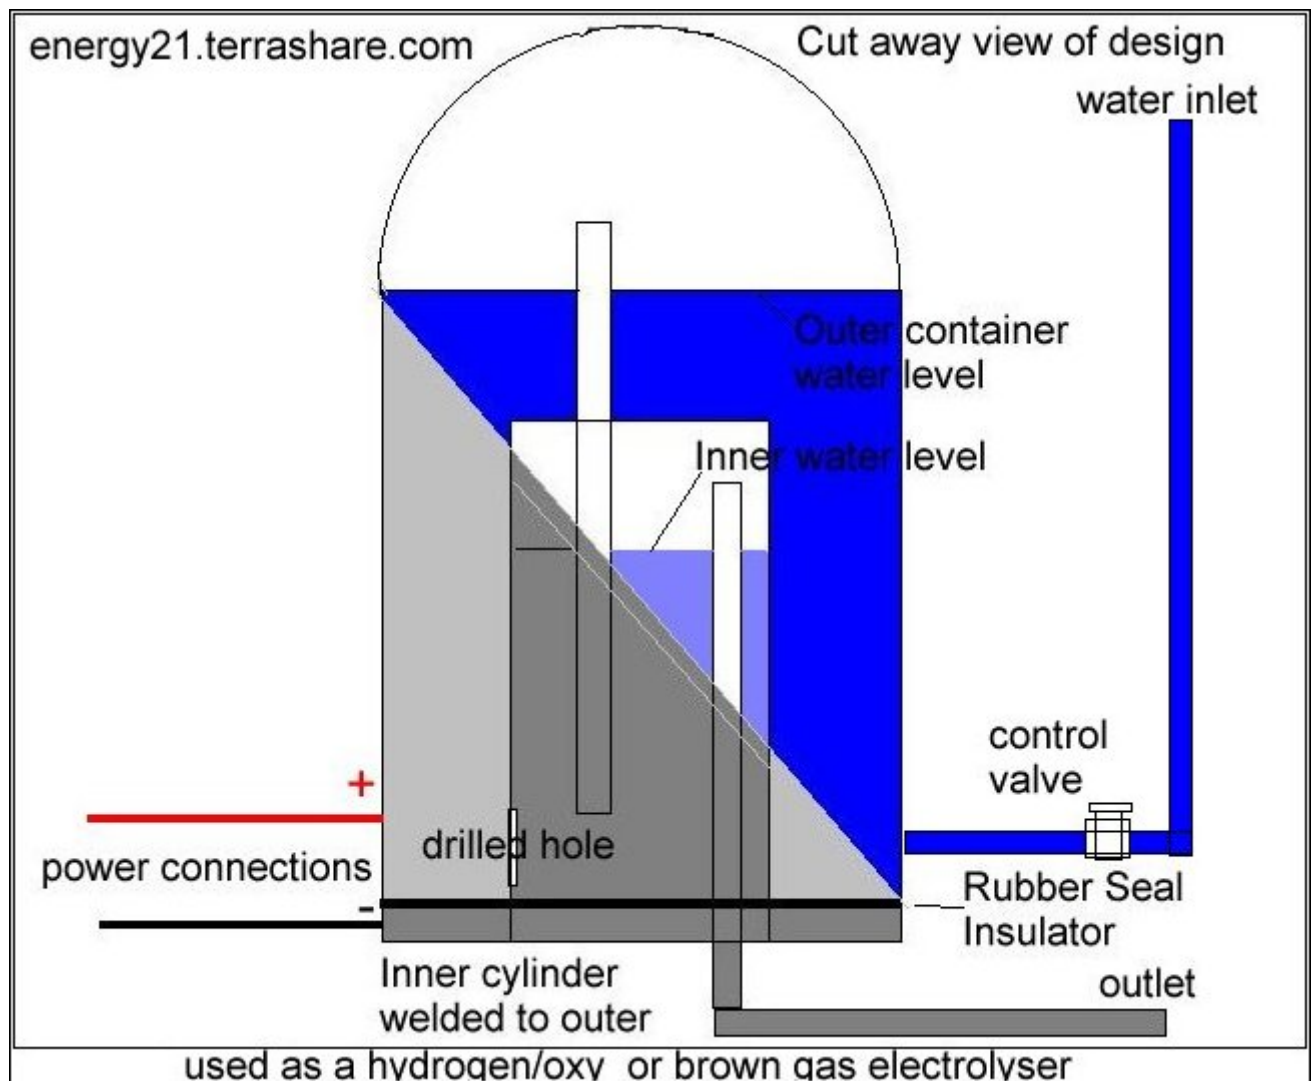

This is the set up if the device is indeed used as a hydrogen/oxygen generator.

Please note the original joe cell was said to have not need addition water input after it began operation, and so my assumption as to how this device as to a water inlet would be incorrect.

If indeed this is the case then top diagram would be totally correct in layout and the 3 following diagrams totally wrong. [more on making a Joecell](#)

This info from a Joe cell constructor

Hi Geoff Thanks for the info . the design as outlined is discussed in the second video and joe blow talks about the flash arrestor design using the centre tube water in isolation to snuff any flash back.

Can I make a few points I'm constructing one of these as we speak and i feel it is a case of due diligence to isolate gas production from any potential source of ignition the cell as described will do this. And do'nt forget we are not going for pressure, only vacuum will be acting on the cell, and removing only production gases (what else can it take?) but under scrutiny i feel any device that has the potential to harm should incorporate some standard or standardized safety feature.

The other point is My Construction. I still use the bolt wedged in the centre tube idea but i have drilled it and welded the inner production tube to it so it acts as my neg electrode and my gas outlet.

Remember any pressure or vacuum will act on all surfaces equally. I'm not making a gas torch just a J cell I use multi tubes these radiate the orgone the water accumulates and I feel the small DC current sets this up and the vacuum pulls it plus some gas into the motor and if all things going as dreamed my petrol bills should start going down.

Oh yes I have a welded base and a removable top on this thing and a bolt plug on the top to add water and to stay with my due diligence I will put a 1-2 psi valve on top and vent it.

Thanks again

Rowley

Artictles

ALEX A. SHIFFER: NEGATIVE ELECTRICITY.

INTRODUCTION.

Before I wade into the subject proper, let me remind you that maybe your concept of electricity as taught in school may be a little suspect. For example, we talk of electric generators. This conjures the image of electricity being made. So if you imagine the normal scenario of a city using a remotely located power ' generator', located at some distance from the city (this may be many miles away), it implies that the ' generated 'electron has to travel to the city to be utilised.

Further, as most power generators now utilise alternating current (AC), that means that the polarity is positive for one ½ cycle and negative for the other ½ cycle. We now have a problem.

We have the ludicrous situation where our poor electron (after being generated), leaves the country and starts it's trip toward the big smoke. But due to distance, it does not get there as the voltage has been reversed (for the other half cycle) and our poor little traveller has to return to the power station! Thus no power gets to the city if the '

generator ' is of a sufficient distance from the load (or consuming device).

Obviously something wrong with the generator theory somewhere.

Let me say from the outset, that electricity cannot be made or used up by man. Electricity is not a substance as such, and you may have to rethink some of the accepted views.

There is a ' magic ' triangle that is made up of electricity, magnetism and gravity.

The Joe cell can tap into this triangle (imagine the cell energy as being in the middle of the triangle) and changing the balance of the ' sides ' can thus have full control of transmutation, gravity and many other effects.

If you imagine the cell ' force ' as a very high frequency AC voltage, (NOT A GAS!) you may realise that a power supply designed to ' fill ' the cell with this type of energy would be a far superior way to go as compared to a conventional power supply or a standard car battery that has a far more meagre contribution of this type of ' electricity'.

Never-the-less, you can make a very good cell indeed without resorting to a special power supply.

Before I forget, let me again remind you that when Joe is talking about a negative field around the outside of the cell, he is not talking about placing your negative lead to the outer container. He is referring to ' true negative ' or negative electricity, NOT to be confused with standard electrical potential's of positive and negative.

Thus after finishing with your start up procedures on the cell (see related paper), ALWAYS finish with the negative lead connected to the central (inner) cylinder.

As said many times, there are no exception to this rule, on this planet at least. <g>

SOME SCIENCE.

Nuclei with a positive charge and electrons with a negative charge has long been regarded as the ' norm ' and is how present science see the world and the matter that it is composed of.

However, as we live in an illusionary world , reality is sometimes the direct opposite of what our far from perfect senses relay to us as concrete facts.

For example, we all ' know ' that the railway lines do not really meet at the distant horizon, and we also ' know ' that a city floating in the air is merely a mirage.

Thus we also ' know ' that there is only one type of electricity, the normal one that we all use and have measured with test equipment ad nauseam. But what if there are in actuality negative nuclei and positive electrons (positrons)? Another parallel so called world, a mirror of all that we see as normal and thus ' fact '. Yes, we would have atoms and the mirror anti-atoms, and these would form anti-molecules and finally anti-life. Exactly the same as we see normality. but simply a mirror image.

Of course this would also apply to electrical charge, magnetism, etc.

Before you say that all this is old news and that I should come up to speed, let me say that I am aware of the particles made by particle

accelerators such as at CERN in Geneva, and yes, I am also aware of the use of positrons as in the technique called PET (positron emission tomography). And I have read the works of P. A. M. Dirac and his famous quantum theory calculations in 1929.

Yes, it was Dirac who postulated that particles and antiparticles have identical masses but opposite charges.

When these little fellows get to meet, they annihilate each other and as a result charges are neutralised and the masses are converted to energy.

Please remember this fact for my theory section at the end of this paper.

This energy can be X-ray photons, gamma rays or mesons.

Whilst on the subject and to put some perspective to the energies involved, let me quote you an example. The rate at which solar energy (solar radiant power or luminosity) reaches the Earth is about one kilowatt on each square meter. This is very useful and useable power indeed, and also goes to show the very poor efficiency of present day solar panels.

Back to the subject. What has all this to do with the cell and who really cares?

Please be patient, a brick wall is erected a brick at a time. <g>

PROOF?

So, what do we know about negative electricity in relation to the Joe cell?

Of course we have Joe's words on the topic as relayed to us by his many visitors, but as this is the talk of the ' inventor ', we really require some other ' proof ' that is independent of possible bias or deliberate inaccuracy.

At this point, let me remind the reader that Joe has not put one word on paper (over a 10 year period), or allowed one photograph to be taken (not from lack of asking by myself and others), that may be used to help resolve the dilemma.

On the contrary, Joe has gone to great lengths to hide his ' secret ', by evading the topic or by giving nonsensical answers to questions and sometimes even laying down deliberate smoke screens to further confuse the issue. He obviously has his reasons and I respect his right not to share his discoveries with us. God bless you Joe.

In passing, the videos that are in circulation are poor quality videos made by amateurs for friends, and that have been circulated without Joe's consent.

As such it has been left to a few to try to convert the crumbs that fall from Joe's table into a loaf of bread that can feed the rest of the world.

As mentioned at the start, positrons are a fact of life in the scientific community, but of course the scientific community will not recognise the Joe cell. In fact talk about the cell in scientific circles will guarantee a belly laugh, scorn or simply result in you being ostracised and treated similar to a person who is reporting on a UFO sighting.

On the other hand, things are very different amongst the clandestine research scientists, but then of course these dudes are not going to come out in public, put their arm around you and declare on national TV that you are on the right track. Sorry, life was not meant to be easy.

Unfortunately I have to resort to various ' proofs ' that result from many experiments performed by ' pseudo scientist '. This is meant to be a derogatory term as used by the ' certified experts ' as a description of thousands of honest and dedicated self taught individuals that devote their whole lives to a radical project, (usually with no help or money) but usually with very noble aims.

My favourite and a very enlightened individual whose work (like Tesla) has not received the accolades that it deserves is:

WALTER RUSSELL.

Born in Boston in May 19, 1871. He started experiencing annual periods of illumination. During a 39 day period of illumination in 1921, he believed he received the secrets of the universe from God, which he was asked to share with the world. In 1948 he married Lao Russell, and together they founded the University of Science and Philosophy for the purpose of spreading these teachings throughout the world.

Russell passed away in 1963 and Lao in 1988.

As we know (if you believe in the subject that is), there has been many avatars walking this earth and spruiking all forms of truths and otherwise. However, there is a great scarcity of individuals that have been told the scientific facts by ' God ' and as such we should pay very careful attention to what they have to say.

That is of course after first proving to the best of our abilities that the individuals are not deluded and merely not taking their medication.

From What Russell has demonstrated by deed and word, I for one am a very serious listener to his scientific views. Russell has written many books on the topic and as far as the cell research is concerned, negative electricity has a very good (and very difficult to comprehend) write up in his book " The Universal One ".

Some of his thoughts on the different types of electricity.

- * Positive electricity is the generative electricity.

Positive electricity is that state of motion in which electricity dominates magnetism.

Positive electricity is that state of motion in which centripetal force dominates centrifugal force.

- * Negative electricity is the radiative energy.

Negative electricity is that state of motion in which magnetism dominates electricity.

Negative electricity is that state of motion in which centrifugal force dominates centripetal force.

- * Electricity and magnetism exist as separate appearances only when opposed. In non-opposition they disappear, they become one.

- * Electricity and magnetism are not two separate forces, nor are they two separate substances. They are merely two different dimensions of motion. They belong solely to motion and not to substance.

- * Neither are positive and negative electricity two kinds of electricity.

Positive and negative electricity are but two differing potential's of the same force which must move in opposite directions.

As I said, Russell has written many books and it would take a life time of very serious reading to fully comprehend what he is trying to pass to us. I am only relaying on to you sufficient to formulate a theory that I hold.
RELATED DEVICES.

If you have been in the ' alternative energy ' scene for a while, you will no doubt be aware of many, many experimenters working on many devices. I will not bore you with a long list of experimenter's and their related research.

You can very easily look up your favourite experimenter by simply using the Web and a suitable search engine. Please realise that all you read is not fact and that there are a lot of grey areas, including in what you are reading now. Sorry, I am doing my best, but I am fallible. <g>

You can use Nikola Tesla, John Bedini, John Searl, Floyd Sweet, Robert Adams and Edwin Gray as representative examples of the inventors that I am talking about.

However, you will notice that some peculiarities as displayed by the cell is common to many of these devices. To name a few, the device goes cold when operating, the device shows magnetic anomalies in the near vicinity of the experiment, the device may be surrounded with a blue or pink glow, the device will build up a very strong ' electric ' charge and the device may display some form of gravity anomalies.

Different cells made by many different experimenter's, and located in various parts of the world, have displayed some or all of the above anomalies.

For the purpose of this short paper, I will stick to the electrical portion of the cell anomalous behaviour.

THEORY.

I will place here some points that you may want to consider. As usual it is early days in this research and as usual I will have the people in the know (like Joe) laughing their heads off at my puny attempts, but at least it is an attempt and it may seed a far better idea that you may have.

Please share it, do not sit on it like Joe and many other selfish individuals.

* A high frequency cell generated or accumulated force will create a magnetic field. This is easily proven with a compass or a magnet on a piece of string. The cell's stainless steel tubes that you did such a good job of testing for magnetism, will now have a very strong North South field in the vertical axis. And this field is not in the steel, for when you pour out the water the cell will go back to ' normal '.

From the above, I assume that the resonant field (and thus this magnetism) is a function of the resonant cavity of which the water forms an integral part, ie. no water, no magnetism.

In simple terms we have what is commonly called a ' tank circuit ' and this tank circuit is generating a unique magnetic field that is DIFFERENT from a magnetic field created by a steady DC (direct current) as may be created by a normal car battery.

Tesla referred to it as a ' hysterical ' magnetic field. As referred to hysteresis and not to somebody that has lost the plot. <g>

* The magnitude of the above hysterical field is the unbalancing of the three force triangle towards the gravitational effects and explains the Joe cell gravitational anomalies (to me at least).

To rephrase the above, if the balance of the two forces (electricity and magnetism) is upset or if you could nearly remove one of them, gravity as we call it would be negated.

Walter Russel stated that the electro-magnetic process of mass formation (centripetal) is balanced by the attractive power of electricity and the dissipating (centrifugal) repelling power of magnetism.

* Please remember that our teacher is Nature. Nature does her tricks with simple elegance and thus is using the proper energy efficient tools. As you can see by the above example we only have to upset the electro-magnetic balance and enormous power is at our disposal.

The Joe cell can do this and you have to respect the logic of some of the individuals are hell bent on keeping the methods secret from the rest of us.

ENGINE EXAMPLE.

As most people are interested in running an engine on the cell, let me show you the balance of the two forces, again with thanks to Walter Russell.

Intake stroke. Compression stroke

Negative, expanding. Positive, contracting

Negative, cooling system Positive, heating system

Negative, increasing volume Positive, lessening volume

Negative, discharging Positive, charging

Negative, opening spirals Positive, closing spirals

Negative, lowering potential's Positive, increasing potential

Negative, radiating Positive, generating

What am I on about? Let me tell you.

When a piston is at the top of the compression stroke, the compressed air molecules are ' charging ' and require an ' increase in potential ' or in other words, they need additional electrical charge or as Joe like to say, more electrons.

These are supplied to a large degree from the cylinder walls. But, let us assume that the Joe cell has somehow removed all ' spare ' electrons from the engine block. What now? Where do you get them from, as surely you must?

Would it be possible for the compressed air to behave differently and maybe contribute some negative (mirror) electricity (as in the science section above)? We know as a scientific fact that the annihilation of the two different particle masses (the normal and the mirror) contribute energy.

This resultant energy may cause an expansion of the captured air charge and thus result in the ' push ' that pushes the piston down. Why not?

On this line, Russell stated that a sudden lowering of potential would cause an explosion, a flame tor a luminous streak. Good enough for me, you of course can make you own assumptions.

Again on the same subject, please remember that Joe stated that a spark plug ignition was not required, only the electro-magnetic pulse at the right time from the car coil (a crude form of a Tesla coil).

Remember my theory (like hundreds of others) is an unproven fact, and you are more than welcome to modify and improve on my humble contribution. That is called science.

CONCLUSION.

This article is here to make you think, comprehend and maybe lead you to some answers.

I feel very comfortable with the notion that the Joe cell (and similar devices) utilises a form of energy that is the same (in many ways) to a mysterious energy that has appeared for many other experimenters and equally baffled them.

In all cases, the energy ' appeared ' due to a manipulation of electricity and magnetism.

I also believe that the source of this energy is present everywhere in abundance, and is the only energy that we should be using, and is our only hope in saving mankind and Mother Earth.

I also think that the Joe cell is the simplest and most elegant way of accumulating and utilising this great gift from our Creator. I have dedicated my life to this quest, and I feel very humble in the Lord allowing me to be a very small player in the experimenting with, and the resultant sharing of my research with my fellow brothers.

My last word on the subject is, that unless we all share the work and thus become a force to be reckoned with, the few but extremely powerful moguls will always keep us in bondage and ignorance

ADD ON'S

(Pictures,...)

HOW TO RUN YOUR CAR ON ZERO-POINT ENERGY

by Barry Hilton © 1998

During 1996 I was given a home-made videotape featuring an Australian researcher who claimed to have run a car without petrol, using a device that appeared to produce either hydrogen or Brown's Gas from water. As I was interested in recent developments in America on point-of-application production of gas as a fuel source (energy cell), I followed up on this interesting phenomenon with a paper summarising what I had seen.

Eventually a copy fell into the hands of the inventor. I then received a call from him, explaining that some of my assumptions had been incorrect. He then offered to visit me in Melbourne to put things right. I was thrilled at the opportunity of gaining some first-hand information about his discoveries and the possibility of filling in the missing blanks. He did not disappoint me.

THE MARK I ENERGY CELL

Joe "X" first became interested in trying to provide an alternative fuel system in about 1991. He got the idea of running his car on steam produced by a closed stainless steel cylinder containing a perforated cylindrical element.

He thought that if he connected a 12-volt battery with one terminal to the outer cylinder (+) and the other terminal to the centre tube (-), the water would boil and he could draw off the steam from an outlet in the

cell and feed it into the inlet manifold to run the car.

The cell was about 4 inches in diameter (100 mm) and about 3 feet long (870 mm), being made out of a stainless steel tube (from an old milking machine) with screw caps on either end. On one end was a clear glass window (for observing the milk flow in the pipe). On the other end, Joe fitted a circular piece of clear perspex (Plexiglas) through which he fitted a terminal for the inside stainless steel perforated element. This element was about 3.5 inches (87 mm) in diameter and about 2 feet long (600 mm). The element was perforated with 8-mm diamond-shaped holes at 12-mm centres. An outlet pipe was already fitted approximately two-thirds of the way along the outer cylinder. He intended to use it to take off the steam.


On 9 October 1991, on the front lawn of his home, Joe set up the entire arrangement on a pair of wooden saw trestles at the front of the car. He connected a half-inch clear plastic hose from the outlet pipe of the cell to the carburettor preheating device on the car, thinking that this device provided a gas supply to the inlet manifold. The car used was a Rover V8 3500 SD1 with a fully sealed all-aluminium motor. The carburettor was a twin Zenith single-barrel arrangement, similar to the SU carby.

On connecting a separate 12-volt battery to the cell, he noticed through the observation windows that the cell was full of white bubbles with a white vapour coming from

the surface of the water, which he assumed was steam. He then started the car on petrol as usual. After running the car on idle for a short time, he disconnected the petrol supply and the car continued to idle even after the float bowl had emptied. However, the engine did not run smoothly so Joe advanced the timing by approx. 80° to bring the motor back to a normal, smooth idle. He let the car run for some time, thinking that it was running on steam, before he disconnected the battery to the cell to stop the engine. To his amazement the car continued to idle, even though he had disconnected the cell from the power supply! Only when he turned off the ignition key was he able to stop the engine. He found that he could start the car via the starter motor without petrol and without connecting the cell to the battery!

Some readers may have realised by now that the preheating device makes no gas connection into the inlet manifold. In fact, it goes nowhere except to the outer casing of the carburettor housing.

What Joe has discovered here sets the mind boggling. This means that no explosive gas is supplied by the fuel cell to the manifold at all. The only gas entering the engine is plain air. Because this engine runs without mixing any conventionally known fuel with the air entering the carburettor, its fuel must be derived from a different source. Either Joe was controlling this engine by mind over matter, or he had unwittingly devised a means of tapping raw

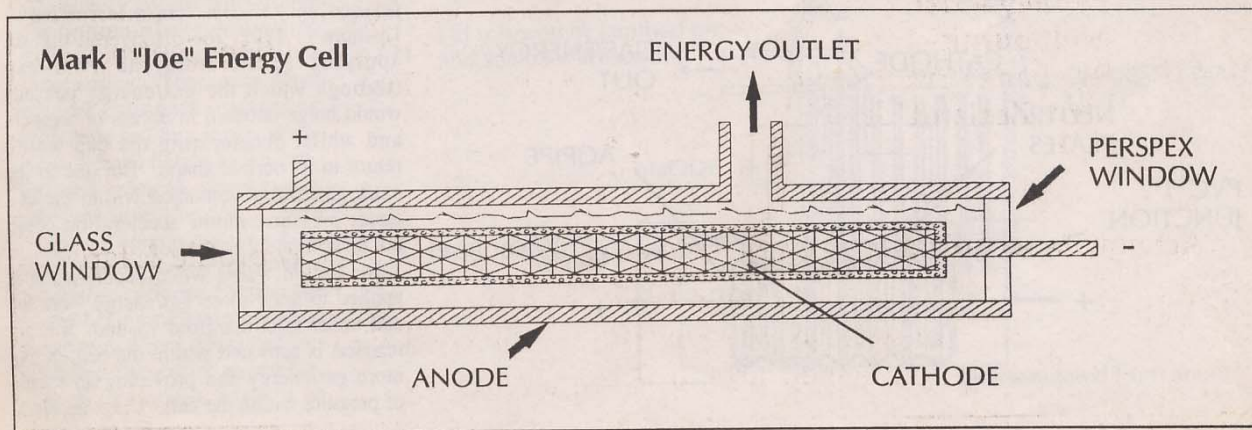

energy to supply the motive power. Joe makes no claims of extrasensory power, and is as baffled by the phenomenon as those who have witnessed it. He has no idea why it works; he only knows that it does.

To date, he has successfully converted at least 14 vehicles (one of them a record-breaking dragster). None of the vehicles had direct fuel-flow connection to the input manifold, with the exception of a Leyland which was fitted with the Mark II cell.

It would seem that Joe has tapped into some form of zero-point energy. (Zero-point energy is created by differences in the "fluoroplastic density" of the energy continuum or ether.) Whether or not the energy or gas transmitted to the engine block via the plastic hose in some way chemically changed the air entering the manifold into an explosive mixture is still uncertain. If this is the case, then nitrogen is probably the most likely element to have been affected in combination with oxygen and carbon residue to form an implosive/explosive mixture similar to nitroglycerine. What appears to occur within the engine cylinders is either implosion, explosion or both. However, this is pure speculation.

Joe later modified his Mark I cell. He found that a smaller unit was just as efficient as the longer one, and was also easier to fit in the car. He reduced its length to approx. 18 inches (435 mm) and fitted it into the Rover, either in the boot or on the floor next to the driver.

He later drove this car, fitted with the cell, from his home in northern New South Wales to Melbourne, Victoria, and back. This is an achievement that is so remarkable it is almost unbelievable. He also

went on a five-day trip to Toowoomba, Queensland, and back to his home in NSW without any trouble driving the car on his water cell. However, there was a small problem, Joe said, that if the cell was left overnight it would discharge and require recharging by connecting the 12-volt battery for approx. three minutes before it could be used to drive the vehicle. Joe also found that the clear plastic hose connecting the cell to the carburettor was unsuitable. This will be discussed in the next section.

The Rover, having an all-aluminium motor, normally has its timing set at 0° before TDC [top dead centre], but when running entirely on the "Joe Cell" it required an advance of 80°. Joe pointed out that each type of motor required different timing settings. It may also be necessary to cut back on the idle screw-settings to prevent over-revving. This engine, Joe said, showed no signs of pollution nor exhaust emissions of any kind. During the entire time the car was used with the cell, the temperature gauge never moved off zero. The motor was cold, the exhaust was cold and the radiator was cold.

With Joe's permission, Prof. Ron Davis (now deceased) of Newcastle University carried out extensive research on the Rover and Joe's cell design. Prof. Davis solved the discharge problem by installing a 1.5-volt DC battery to the cell when not in use (with negative to earth and positive to the cell casing). Joe found that no power was drawn from the battery as a result of the connection. He also recounted that the vehicle received a tremendous boost in power when the 1.5-volt battery was connected for a few seconds across the cell whilst the vehicle was being road-tested.

Joe's latest cell design does not discharge if left overnight, so the small DC battery is no longer needed.

THE MARK II ENERGY CELL


Joe's next cell was radically different from his Mark I cell. In the Mark II cell he used seven flat circular plates in a row. These stainless steel plates, approx. 2 mm thick and 100 mm in diameter, were packed into a short length of black corrugated PVC agpipe. About one-third of its radius was removed to allow the gas to escape from above the plates. The entire assembly was then placed inside a PVC 120-mm-diameter "T" junction, with one plate positioned in each corrugation, giving a plate spacing of approximately 3/8ths of an inch (8 mm). Both ends of the straight through section were sealed off with end caps. The stainless steel plates on both outside positions were positively charged, whilst the centre plate was negatively charged. The two intermediate plates on either side had no electrical connections. Joe calls these "neutral" plates.

By a process of experimentation, Joe showed that less amperage was required to charge a cell with neutral plates than one fitted with only a cathode and anode, yet gas production seemed much improved in the cell with neutral plates. Joe discovered the optimum performance was achieved by a cell with two neutral plates on either side of the cathode, and two anode plates on the outside of the set. Joe explained that he tested this cell in a Leyland P76 V8 which has an all-aluminium motor. Unlike the Rover, this engine is not hemispherically sealed. In this connection, Joe fitted the output hose from the cell directly into the carburettor via the tappet cover vacuum fitting under the carby.

The Mark II cell in this engine performed very badly. On a test drive to Lismore in 1992, Joe discovered that on applying acceleration the PVC cap (through which the gas/energy passed) would bulge outward in excess of an inch, and whilst decelerating the cap would return to its normal shape. But due to the extra gas/energy contained within the cell under pressure, motor acceleration could not be accurately controlled.

Joe assumes that when acceleration is applied to draw more gas/energy from the cell under inlet manifold vacuum, a chain reaction is activated within the cell, giving more gas/energy and providing an excess of pressure within the cell. Upon decelera-

Mark II "Joe" Energy Cell

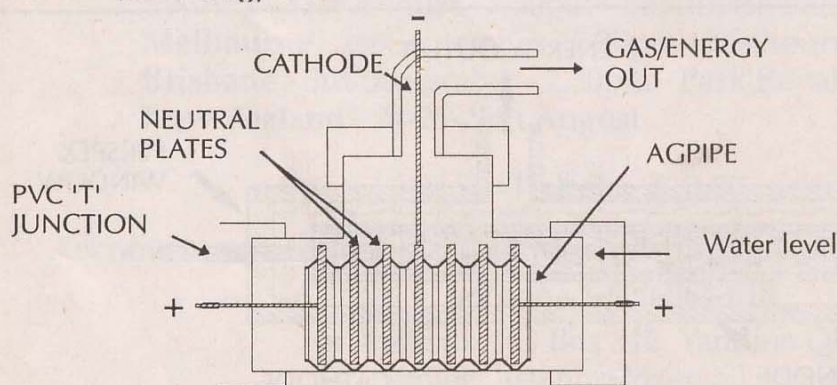

tion, the cell is again subjected to electrostatic surface tension. The excess gas/energy stored within the cell is therefore transferred to the input manifold due to the high buildup of pressure within the cell. As a result, car speeds cannot be regulated efficiently.

Joe also reported that Prof. Davis had constructed a test cell shaped similarly to a car air filter and built with a thin outer casing of stainless steel. When tested on a car, it suffered the same problem as Joe's plastic cell. The gas/energy pressure in this cell changed its shape from a flat disc to almost a complete sphere. It is a wonder these cells did not explode!

Joe concluded that both the casing of the cell and the gas/energy transfer pipe needed to be constructed of rigid, robust material for the cell to operate efficiently without expansion and contraction of the parts. Although this cell provided the necessary energy to drive the V8, it proved too dangerous for further use.

THE MARK III ENERGY CELL

Joe then decided to use concentric cylinders with a thick stainless steel container, based on the same idea as the Mark II cell. This new design would therefore incorporate the advantages of his original Mark I cell with the concept of neutral plates.

Joe also discovered that the cell had more power when the cathode was electrically connected to the bottom of the cell. By this method, the energy field was generated over the entire surface of the cylinders. When the connection was made at the top of the cathode, only the top half of the cell seemed to be active.

So, the Mark III cell consisted of five concentric circular cylinders. The central cylinder, of approx. one-inch diameter, was electrically connected through the bottom of the cell as the cathode, but insulated from the outer casing. Then came three neutral cylinders, measuring two, three and four inches diameter, of equal height to the cathode and arranged concentrically outward from the centre, each providing approximately a half-inch gap between cylinders. The fifth cylinder formed the outer casing of stainless steel (minimum 3 mm thick) and surrounded the entire assembly. The plates inside have to be

machined exactly to the same length, with great care taken to ensure that all the cylinders line up precisely level. The top of the anode outer casing also needs to be either conical or domed in shape in order to direct the energy to the opening at the top. The top and bottom of the inside set of cylinders should not be closer than one inch from the anode casing. However, the gap between the anode and the outer neutral cylinder can be as close as half an inch and maybe as wide as two inches. Joe said this outer gap was not important as long as it was not too close.

Each of the cylinders needs to be separated by the best insulators available that will not react with the energy fields inside the cell. Synthetic insulators, made of plastics, nylon, teflon and the like, appear to be unsuitable because a conductive path soon develops across these insulators, resulting in a dead short between the cylinders and destruction of the energy fields developed in the water between the plates.

I have examined a number of cells used by experimenters trying to duplicate the Joe phenomenon. These cells had been in use for some time, and when dismantled the cylinders showed deep pitting in the area around where the insulators had been located.

In his cells, Joe used the black rubber tubing that is normally laid on the roads for traffic counting. Unfortunately, most of the road authorities have converted to synthetic material, which is not suitable for the cell. As a substitute, I have tried the pure rubber stoppers used in chemical laboratory

experiments and as acid bottle-stoppers. These stoppers are solid rubber (without a hole in the middle to trap conductive elements). They appeared to resist conductive outer growths up to 60 volts DC when tested for five days of continuous charging. No pitting was observed and adjoining plates still showed open circuit readings.


When charging the water in the same cell as to be used in the car, make sure the sediment formed on the surface of the water does not settle on these insulators, as this coating will soon form a conductive path over the rubber. This is one reason why Joe decided to use a separate water-charging vat.

When mounting the rubber stoppers (or pure rubber solid circular rod) between the plates, the round section of the rubber should be fitted horizontally between the plates, with the flat part against the cylinders. This will prevent sediment being trapped between the curved side of the rubber and the plate surface.

Joe uses the minimum number of separators that will maintain correct plate distances: three insulators at the top of the cylinders and three more at the bottom. Each of the rubbers should be mounted in approx. 5 mm from the edge of each cylinder and arranged radially outward in three straight lines at 120-degree intervals. The rubbers, if cut slightly oversize, will hold the assemblies firmly in place to withstand car vibration.

The trick, when assembling, is to mount one rubber on the centre tube first, then squeeze the first two cylinders together

Mark III "Joe" Energy Cell

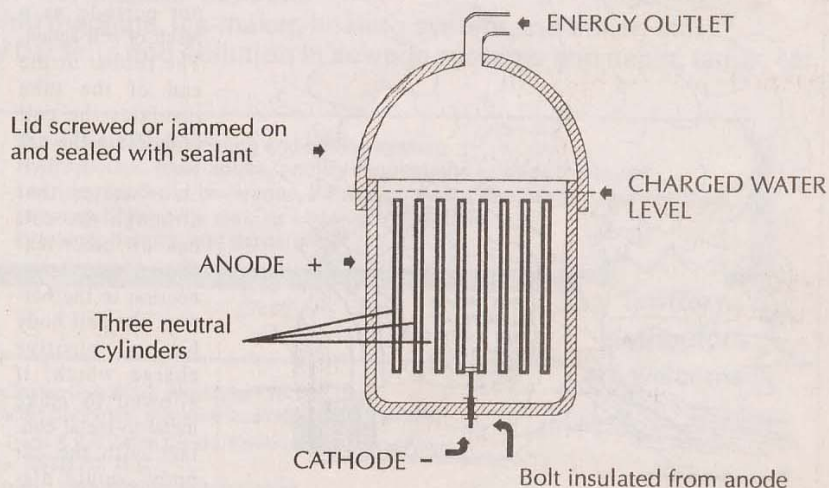

with round-nosed pliers (or multigrips) over the insulator. Then insert the other two rubbers in sequence. The setting need not be perfect as it can be adjusted after the three rubbers are fitted to the opposite end. But do the spacing adjustment, if necessary, before fitting the next outer cylinder. If you don't, you may have to do the job all over again. Make sure that, when finished, all of the cylinders sit flat on a level surface without any one cylinder protruding above the others. If you are not careful about this point, the energy-multiplying factor may miss the lower plates (cylinders) entirely, thus reducing cell efficiency.

If your cathode terminal bolt has been fitted correctly, then the entire assembly can be supported by the locking nuts on the cathode terminal bolt. However, if you feel that your plate assembly requires some additional support, a slot can be cut into the bottom of three more rubber stoppers. These stoppers (correctly spaced) can then be fitted to the bottom of the outer neutral cylinder to act as supporting stand-offs inside the anode casing. An insulating sleeve should be inserted into the hole drilled in the anode through which the bolt passes, and insulating washers also fitted either side of the hole. Seal the hole with white marine-grade Sikaflex.

All metal parts, except for the energy transfer tube, should be made of food-grade stainless steel and must be diamagnetic. Grade 316 is the most appropriate stainless steel to use. Make sure you test it for paramagnetic properties before you buy it. It must not attract a ferrite magnet or deflect a

compass needle even slightly, or you are just wasting your time and money. All stainless grades show some attraction if neodymium magnets are used.

I am uncertain which vehicles the three-neutral-plate system was fitted to, or how each vehicle performed. What I do know from Joe is that over the last few years he has successfully converted a number of common vehicles such as Fords and Holdens. After the Leyland, he experimented with solid supply tubes to transfer the energy from the cell to the carburettor. He also abandoned any further attempts to connect the cell directly to the input manifold, preferring instead to locate the end of the transfer tube on a sealed blank fitting on the carburettor housing. However, as there may still be some danger of pressure building up within the cell, Joe said it is a good idea just to slide the end of the outlet hose over the blank fitting without securing the end of the hose with a pressure clip or sealing compound.

In the early stages Joe replaced the clear plastic tubing from the cell to the carburettor with a length of copper pipe, but discovered that the copper corroded at the cell end. Eventually he settled for an aluminium pipe of approximately 3/4-inch diameter. The pipe is screwed to the top of the cell's outlet connection (metal to metal). The furthest end of the pipe (nearest the carburettor) is cut short about four inches, and a good-quality rubber hose fitted to the end of the pipe to make up the last four inches to the carburettor blank.

According to Joe, aluminium is the best material for conveying the energy to the engine as it does not corrode as a result of cell action. The rubber at the end of the tube insulates the cell body from the car block.

Joe states that although the cell has no electrical (closed circuit) connection to the battery, the cell body has a positive charge which, if allowed to make metal-to-metal contact with the car body, would dis-

charge the cell. It would then have to be cleaned and filled with freshly charged water or recharged from the battery, although just recharging may not suffice. Joe no longer recommends recharging the cell from the battery, as the cell may become contaminated and may not work at all until it has been cleaned and regenerated. The Mark I cell that was recharged by the car battery consists of only the anode and cathode. There are no neutral plates or separators (insulators) to cause problems through contamination or shorts.

As the transfer tube has a positive charge and carries the energy field to the motor, it is most important that the cell *not* be located near any other field generators such as distributor coil, cut-out points, alternator, electronic circuitry or high-tension leads. The transfer tube must also be well insulated from the car body.

Joe recommends that the cell be either located on the floor next to the driver (with the cathode bolt electrically connected to the car chassis) or placed in the boot away from electrical wiring. If the cell is located in the boot, the entire length of the transfer tube should be insulated with a plastic tubing sheath to avoid contact with the negatively charged body. If placed next to the driver, the transfer tube should be passed through a hole in the firewall fitted with a suitable rubber insulating grommet.

By a process of experimentation, Joe found that a two-neutral-plate cell worked just as well in a car as did the three-neutral-plate system, and maybe even better. However, the two-neutral-plate system required that the water first be charged in another charging cell for the system to work effectively. By pre-charging the water in his vat system, he was able to carry out the process much more efficiently than if he used the actual car cell to effect the charging process. It is for this reason that Joe uses only two neutral plates in his most recent car cells. ∞

Editor's Note:

Additional details are covered in Barry Hilton's 40-page book, *The Joe Phenomenon: How to Run Your Car on Zero Point Energy*. Copies are available from the publisher, NuTech 2000, PO Box 255, Ivanhoe, Vic. 3079, Australia; telephone/fax +61 (0)3 9457 2814, e-mail, <nutech@arc.net.au>. Price: AUD\$39.00 ppd in Australia; foreign orders, USD\$41.00 ppd, or payment by credit card.



Abbildungen



Abb.1:
Ansicht des 'Alten Zuverlässigen'. Eine drei Jahre alte Zelle, welche die meisten Regeln des Zelldesigns bricht, aber trotzdem sehr gut funktioniert. Am Zellauslass ist ein Druckmesser montiert, um Lecks zu überwachen.

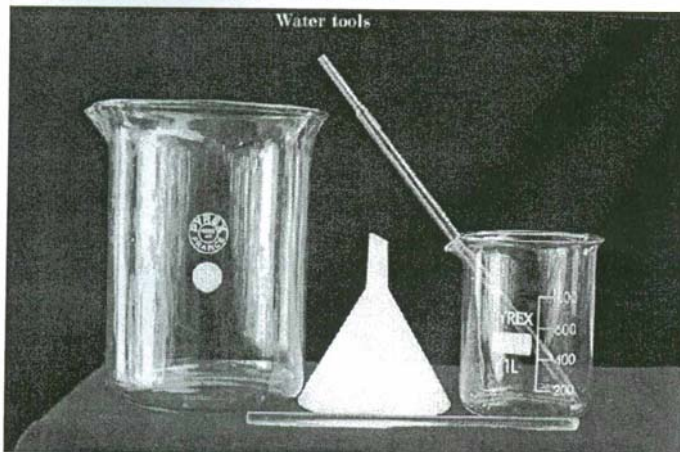


Abb. 2:
Wasserwerkzeuge, im großen Becher wird das geladene Wasser während der Zellreinigung aufbewahrt, Trichter, kleiner Becher zum Nachfüllen der Zelle, Pipette zum Hinzufügen oder Wegnehmen kleiner Wassermengen und gläserner Rührstab.

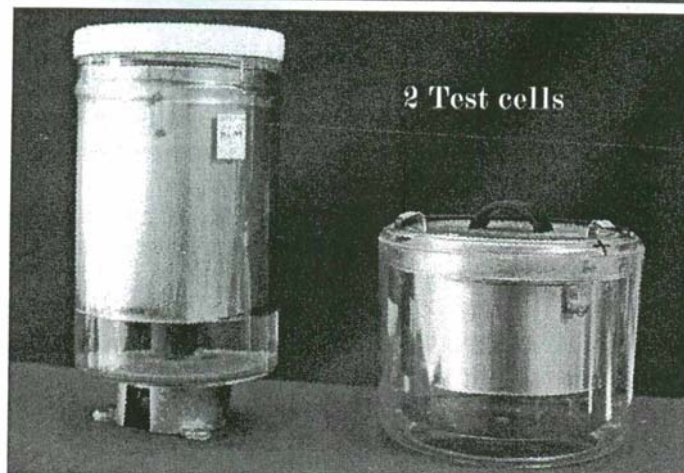


Abb. 3:
Zwei Typen von Testzellen. Zur Linken eine Glaszelle mit negativem Eingang durch ein Loch, das durch den Boden gebohrt wurde. Zur Rechten eine Plastikzelle mit beiden Anschlüssen an der Oberseite.

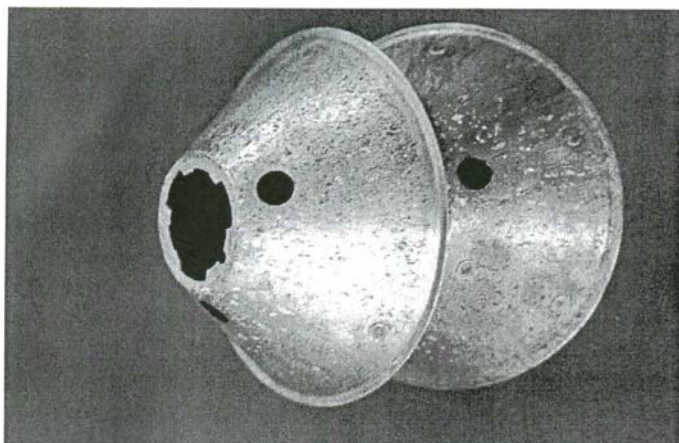


Abb. 4:
Kegel einer Ladezelle. Dies ist das Ergebnis der Verwendung von über 10 Amp. über lange Zeit hinweg. Beachten Sie die schweren Vernarbungen. Diese Kegel sind Schrott!

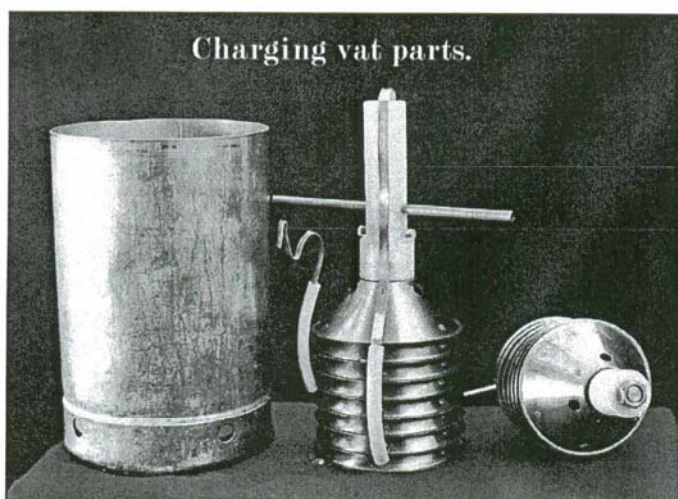


Abb. 5:
Ladebehälter. Ansicht der Hauptkomponenten. Ich zeige hier zwei verschiedene Typen von Kegestapeln. Der Stapel neben dem Behälter ist der in diesem Handbuch beschriebene.

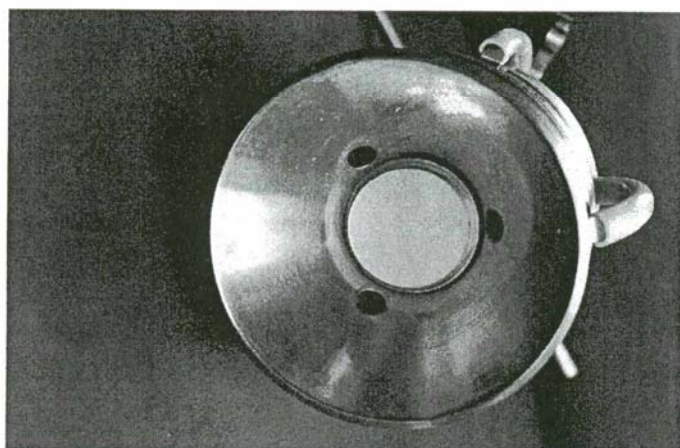


Abb. 6:
Ladebehälter. Die Ansicht von unten zeigt, wie die zentrale Nylomachse leicht vergrößert wurde, um den untersten Kegel zu halten.

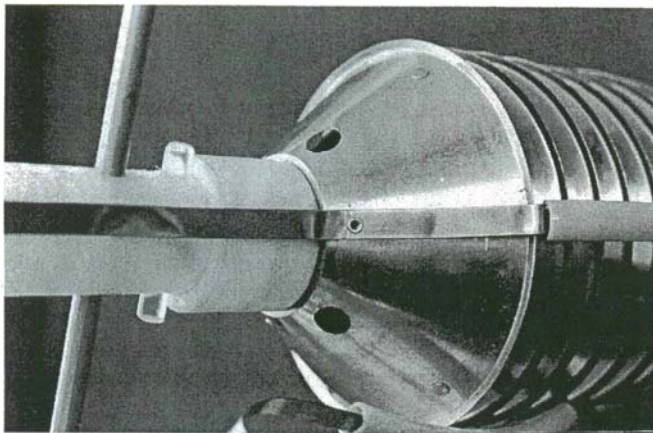


Abb7:
Ladebehälter. Eine Seitenansicht des Kegelstapels. Beachten Sie die Nieten-Befestigung der negativen Leitung und die Haltemethode des Kegelstapels mit der Akrylstange. Die obere Stange besteht aus rostfreiem Stahl und dient der Halterung des Kegelstapels im Ladebehälter.

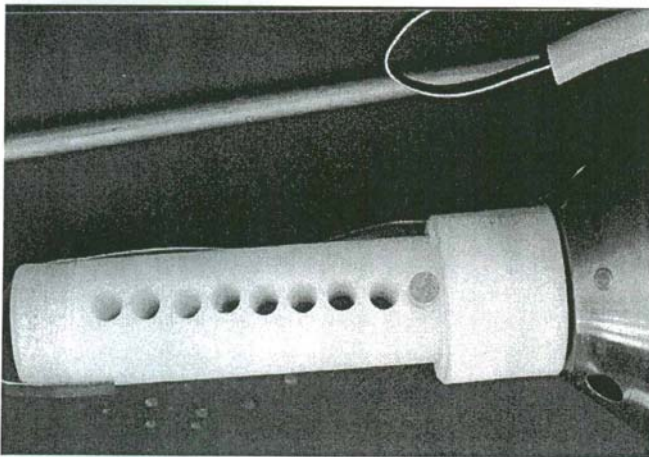


Abb. 8:
Ladebehälter. Eine Seitenansicht der zentralen Nylonstange zeigt die Einstelllöcher, welche eine Verstellung der Höhe des Kegelstapels über dem Boden des Ladebehälters erlauben.

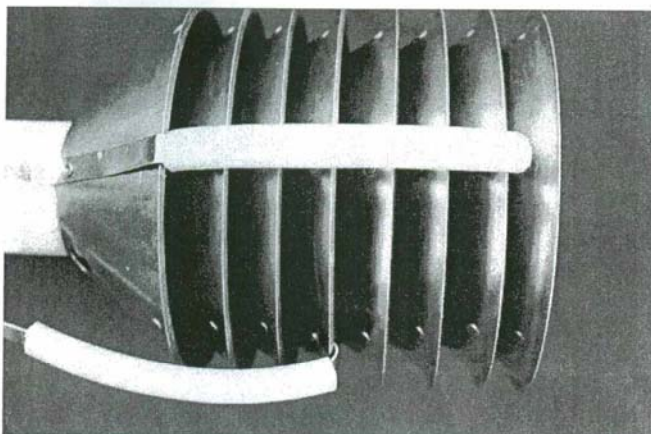


Abb. 9:
Ladebehälter. Eine Seitenansicht des Kegelstapels. Beachten Sie die Verbindung und Isolation der Streifen und die Verbindung zu den Kegeln.

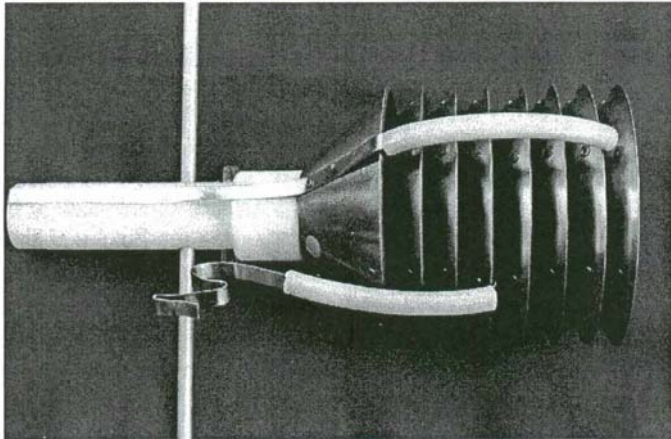


Abb. 10:
Ladebehälter. Eine Gesamtansicht der Konstruktion des Kegelstapels. Die positive Verbindung ist in der Mitte, die negativen am zweituntersten und obersten Kegel.



Abb. 11:
Zelle, 4 Zylinder. Die Zellteile zeigen zwei Arten von Deckeln. Der kleine Stapel von Hartkautschukscheiben steht in der Nähe der beiden Kegel.

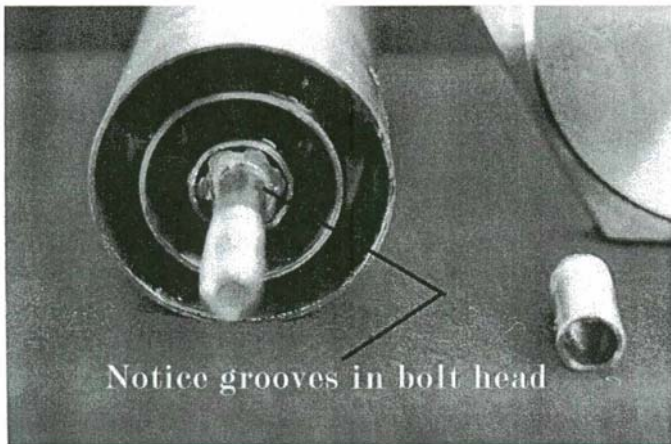


Abb. 12:
Zelle, 4 Zylinder. Zeigt, wie die Schraube aus rostfreiem Stahl in den 1 Zoll Zentralzylinder passt. Beachten Sie die Rillen im Schraubenkopf für den Wasserfluss. Beachten Sie auch, dass sich die Unterseite der Schraube zu $\frac{1}{4}$ Zoll innerhalb des Zylinders befindet.

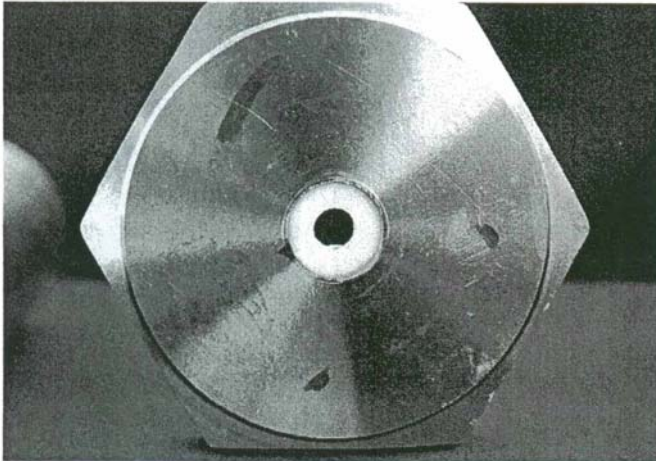


Abb. 13:
Zelle, 4 Zylinder. Zeigt den Isolator eingebaut in den unteren Zellverschluss. Dieser Isolator ermöglicht die Isolierung der zentralen Schraube vom Rest der Zelle. Der Isolator, den Sie sehen, ist der innere oder wasserseitige.

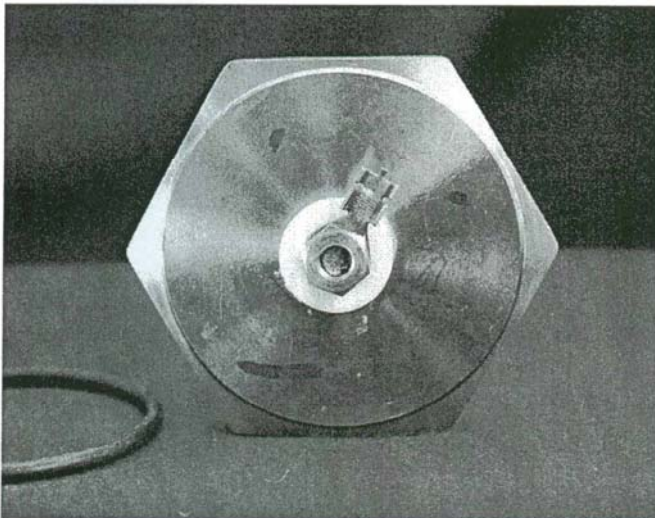


Abb. 14:
Zelle, 4 Zylinder. Zeigt den unteren Zellverschluss komplett mit äußerem Isolator, den Anschluss für die negative Leitung und Befestigung.

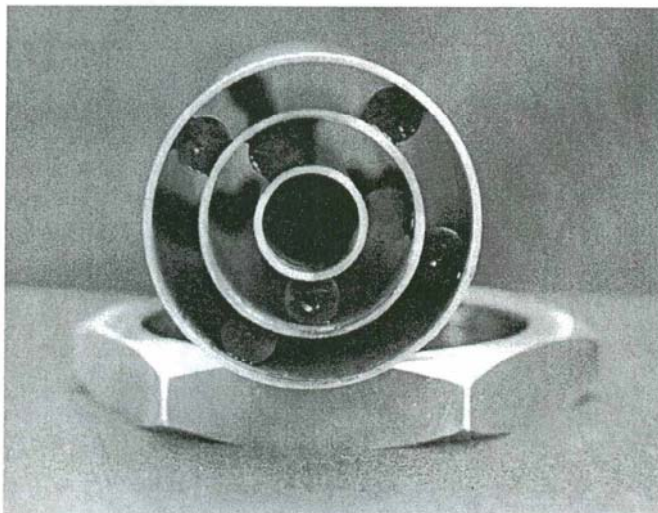


Abb. 15:
Zelle, 4 Zylinder. Ansicht einer Methode zur Befestigung des $\frac{1}{2}$ Zoll dicken und $\frac{1}{2}$ Zoll breiten Hartkautschukisolators.



Abb. 16:
Zelle, 4 Zylinder. Ansicht der zusammengebauten Zellbestandteile. Beachten Sie, dass die Kompressionsverbindung auf der Kegelspitze fehlt. Der Gummiring passt zwischen den Außenrand und den unteren Zellverschluss.



Abb. 17:
Zelle, 5 Zylinder. Ansicht der größeren Zellkomponenten. Beachten Sie, dass ich in diesem Entwurf eine separate Schraube und Unterplatte als Zellverschluss, im Gegensatz zu einer Ein-Stück-Konstruktion wie in der 4 Zylinder Zelle, verwendet habe. Beachten Sie auch, dass der Rand eine Druckverbindung auf dem unteren Teil des äußeren Zylinders sein wird.

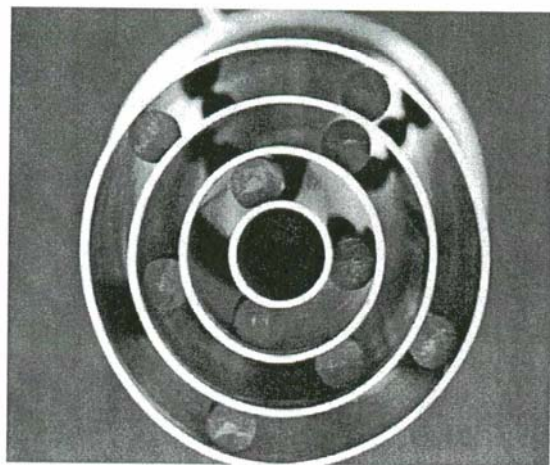


Abb. 18:
Zelle, 5 Zylinder. Position der Hartkautschuk Isolatoren und Abstandhalter. Ich verwende 3 Isolatoren für die kleineren Zylinder und 4 für die größeren (diese Anzahl für jedes Ende eines Zylinders).

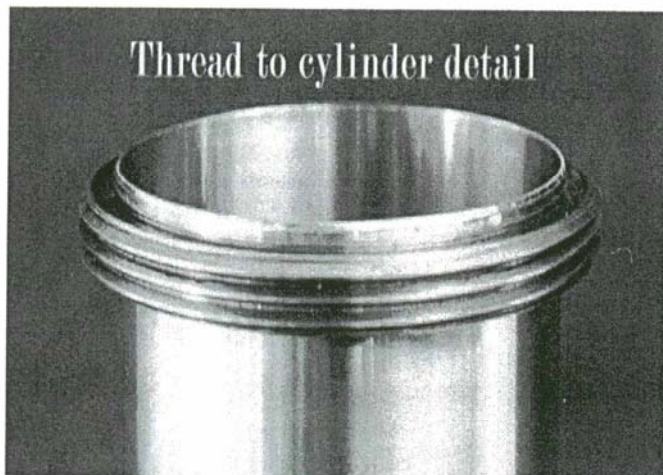


Abb. 19:
Zelle, 5 Zylinder. Eine Ansicht des pressverbundenen Rands. Beachten Sie die Position. Der äußere Zylinder muss eine Metall- Metall-Verbindung mit dem unteren Zellverschluss sein.

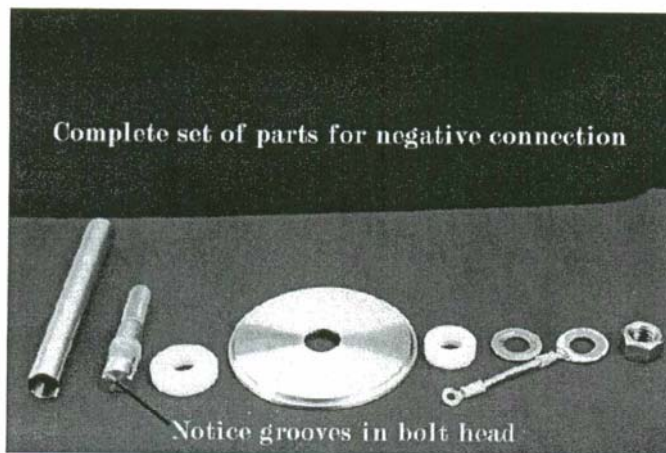


Abb. 20:
Zelle, 5 Zylinder. Alle erforderlichen Komponenten für die Konstruktion der negativen Verbindung zum zentralen 1 Zoll Zylinder.

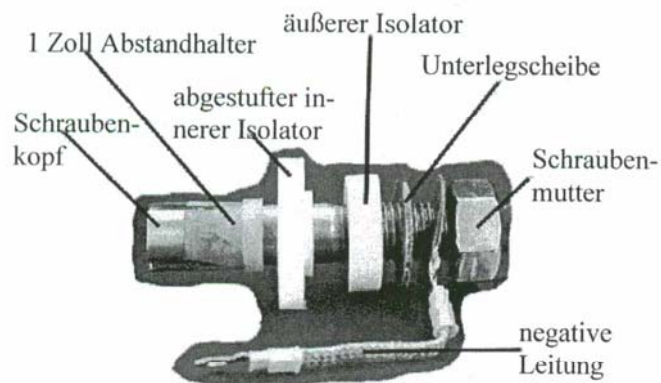


Abb. 21:
Zelle 5, Zylinder. Der korrekte Zusammenbau der Komponenten der zentralen Zylinderschraube.

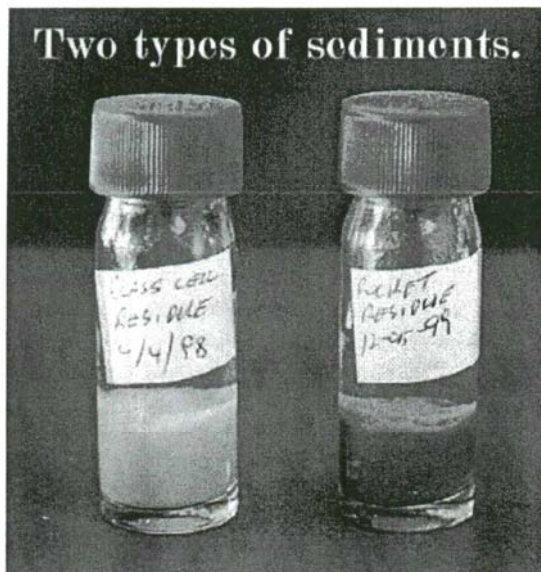


Abb. 22:

Wenn das falsche Wasser in einer Zelle verwendet wird, werden große Mengen von Sediment produziert. Verschiedene Verunreinigungen im Wasser werden verschiedene Arten von Sediment erzeugen. Es scheint, als ob die Zelle tatsächlich NEUE MATERIE erzeugt.

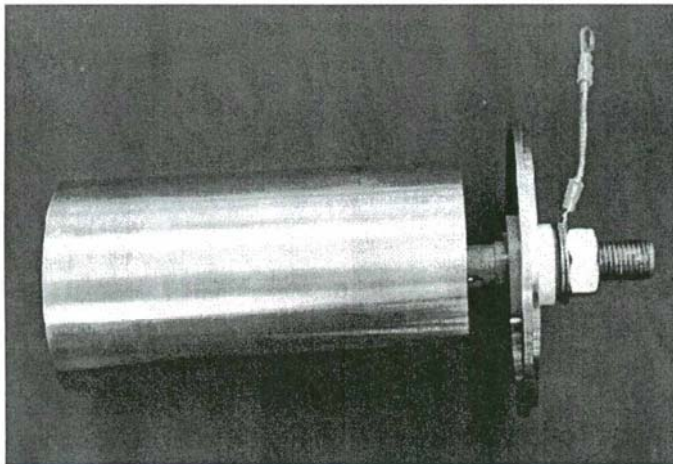


Abb. 23:

Zelle, 5 Zylinder. Der vollständige Zylinderaufbau.

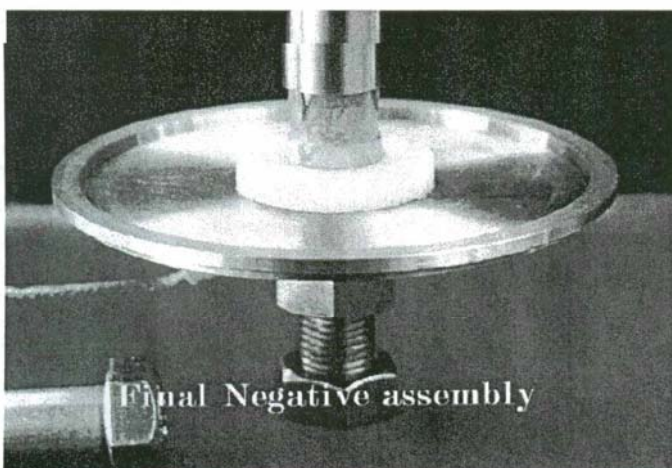


Abb. 24:

Zelle, 5 Zylinder. Ansicht der zentralen Zylinderkonstruktion.



Abb. 25:
Zelle, 5 Zylinder. Vollständige Zelle. Beachten Sie, dass die Kompressionsverbindung des Ausgangs fehlt.

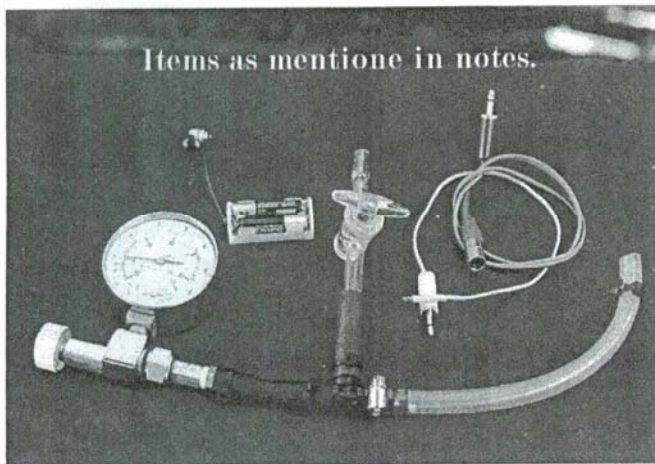


Abb. 26:
Nützliche Werkzeuge. Druckmesser zum Messen von Druck und Vakuum, Miniaturlampe zur Beobachtung des Inneren der zusammengebauten Zelle und kleiner Laser zur Beobachtung der Partikelgröße im Wasser.

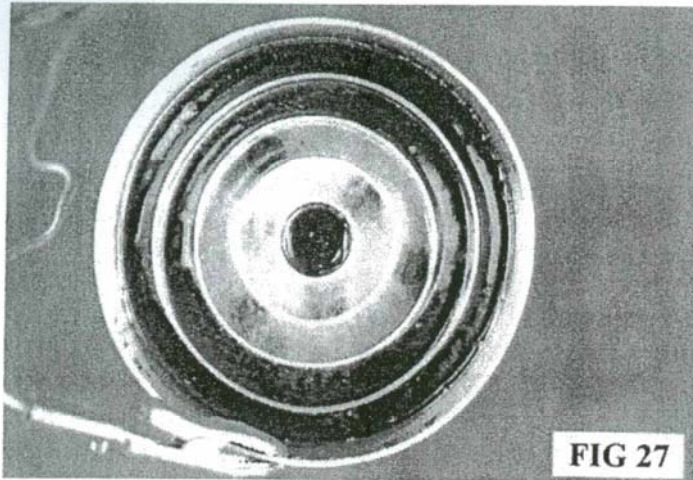


Abb. 27:
Stadium 1. Ansicht 20 Sekunden
nach dem Einschalten des
Stroms. Beachten Sie, dass Aktivi-
tät hauptsächlich in der zentralen
negativen Region auftritt.

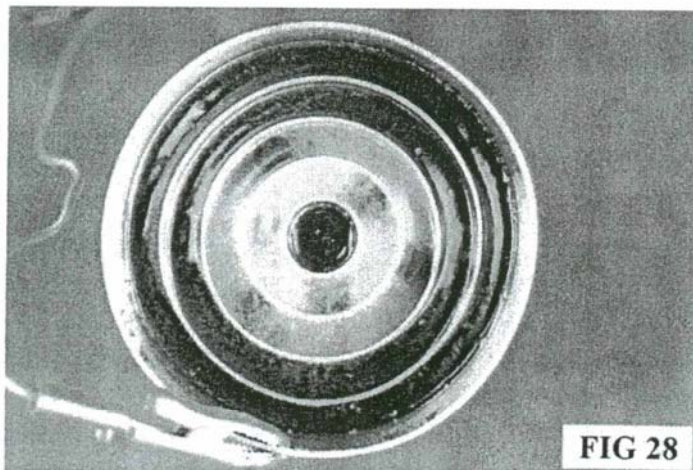


Abb. 28:
Stadium 1. Ansicht 30 Sekunden
nach dem Einschalten des
Stroms. Beachten Sie, dass nicht
wirklich eine Veränderung zum
Bild vorher zu erkennen ist.

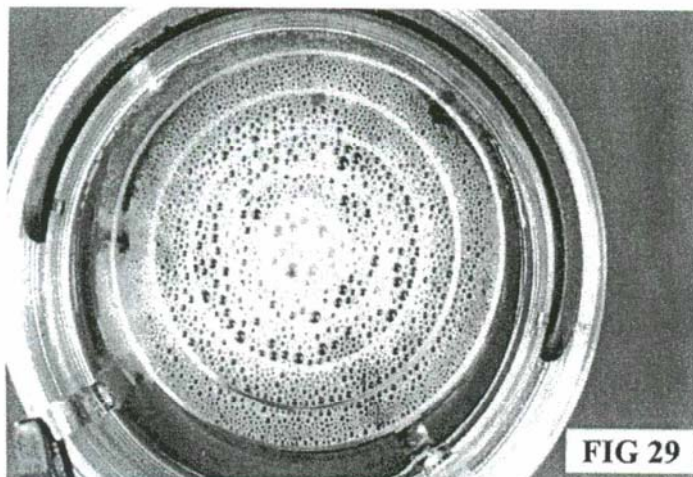


Abb. 29:
Stadium 2. Ansicht 20 Sekunden
nach dem Einschalten des
Stroms. Beachten Sie die unter-
schiedliche Aktivität im Vergleich
zu Stadium 1 zur gleichen Zeit.

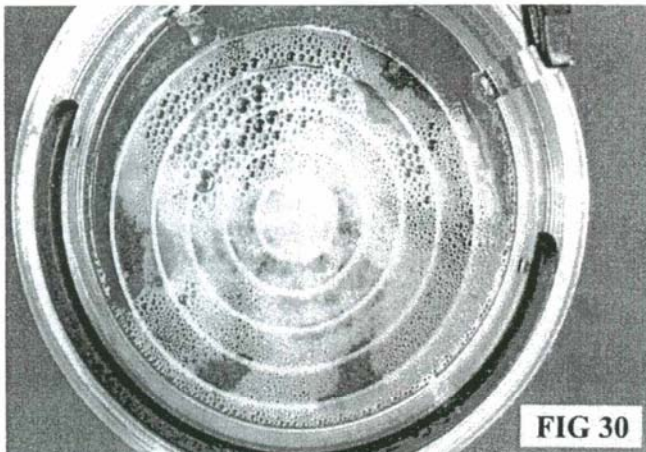


Abb. 30:
Stadium 2. Ansicht 30 Sekunden nach dem Einschalten des Stroms. Beachten Sie, wie die Zelle nun abstirbt und zum Muster wie in Stadium 1 zurückkehrt. Dieses Zellsäte, ging aber nicht in den Brütmodus Stadium 3 über.

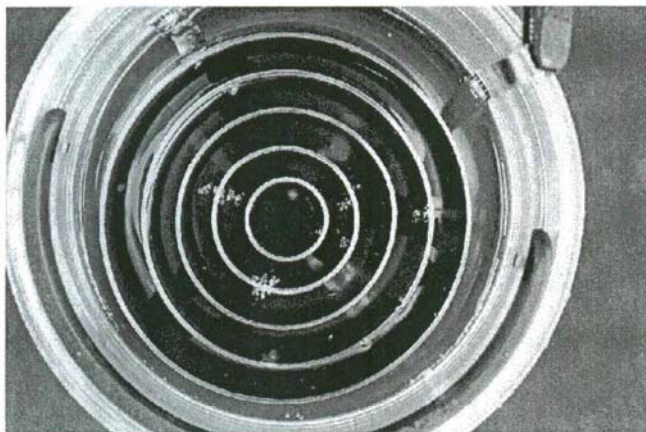


Abb. 31:
Stadium 2. Ansicht nach 1 Minute ohne Strom. Beachten Sie den Mangel an verbleibenden Blasen.

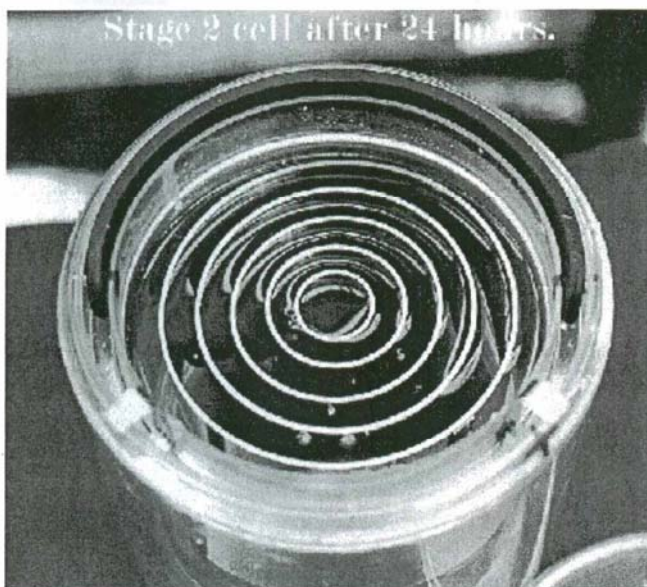


Abb. 32:
Stadium 2. Ansicht nach 24 Stunden. Beachten Sie, dass die Zelle jetzt tot ist (keine Blasen, keine Oberflächenspannung).

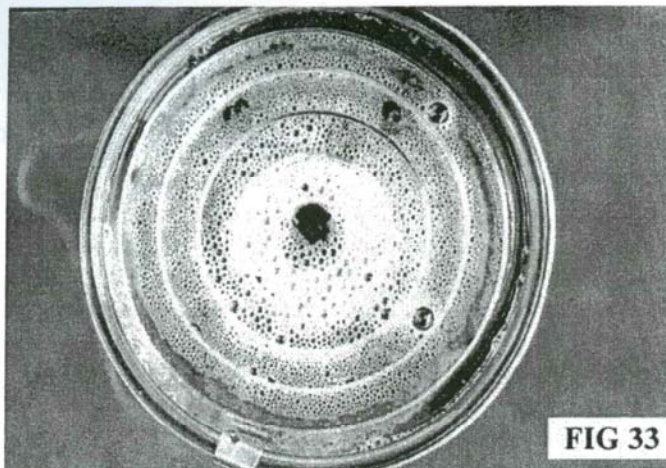


Abb. 33:
Stadium 3. Ansicht 10 Sekunden
nach dem Anschalten des Stroms.
Beachten Sie die unterschiedliche
Blasenformation.

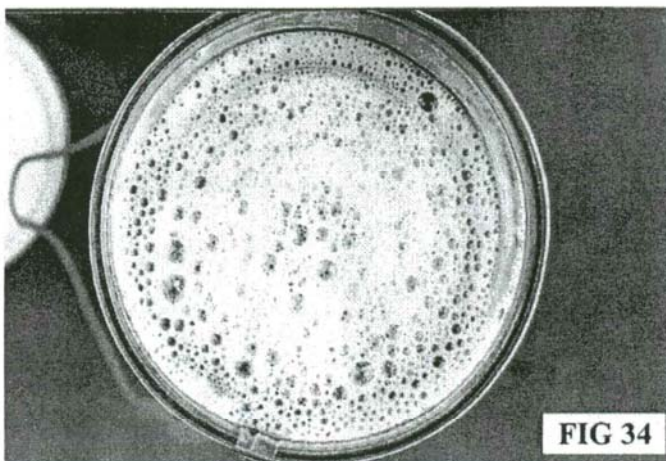


Abb. 34:
Stadium 3. Ansicht 15 Sekunden
nach Anschalten des Stroms. Be-
achten Sie die Blasenaktivität.

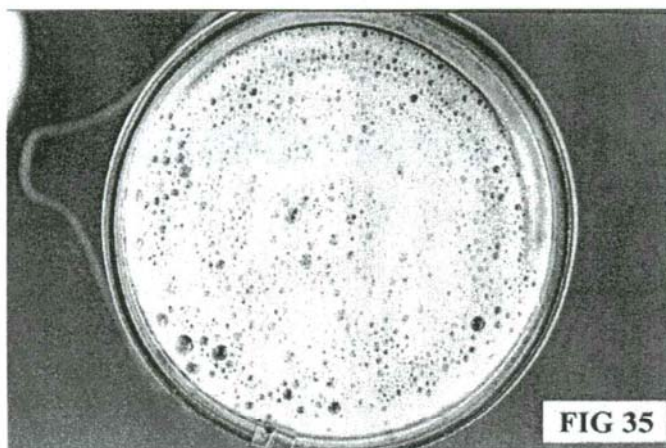


Abb. 35:
Stadium 3. Ansicht 20 Sekunden
nach Anschalten des Stroms. Die-
se Zeit stimmt mit den Zeiten der
vorangegangenen Fotos von Sta-
dium 1 und Stadium 2 überein. Die
Blasen haben nun die Zylinder be-
deckt und die Aktivität geht weiter.

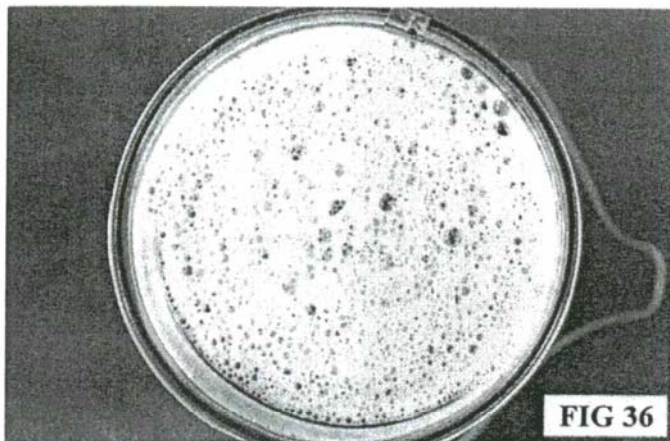


Abb. 36:
Stadium 3. Ansicht 25 Sekunden
nach Anschalten des Stroms. Die
Aktivität geht weiter und wenn der
Strom an bliebe, würden die Bla-
sen über- und an den Seiten der
Zelle herablaufen.

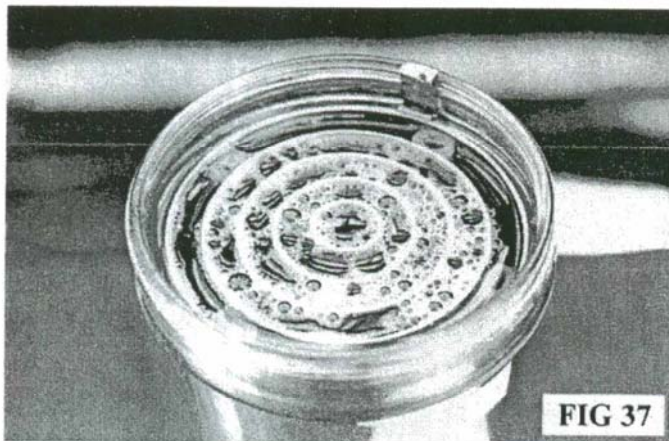


Abb. 37:
Stadium 3. Ansicht 24 Stunden
nachdem der Strom abgeschaltet
wurde. Beachten Sie die Blasen
und die Oberflächenspannung.
Das ist ein sicheres Zeichen für ei-
ne brütende Zelle.

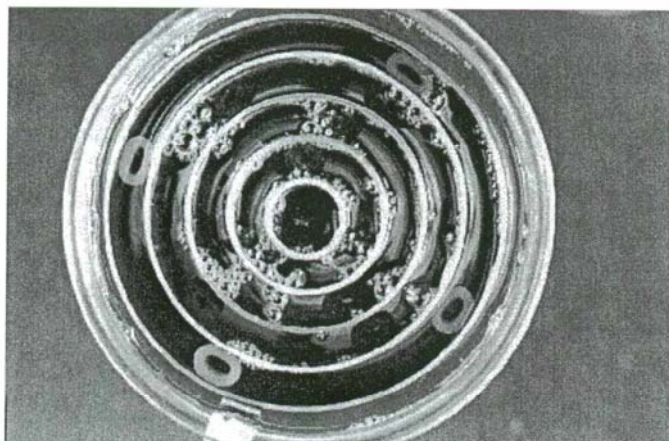


Abb. 38:
Stadium 3. Ansicht 2 Tage nach
Abschalten des Stroms. Die Zelle
lebt noch und einige der Blasen
sind noch sichtbar. Nur eine brü-
tende Zelle verhält sich so.

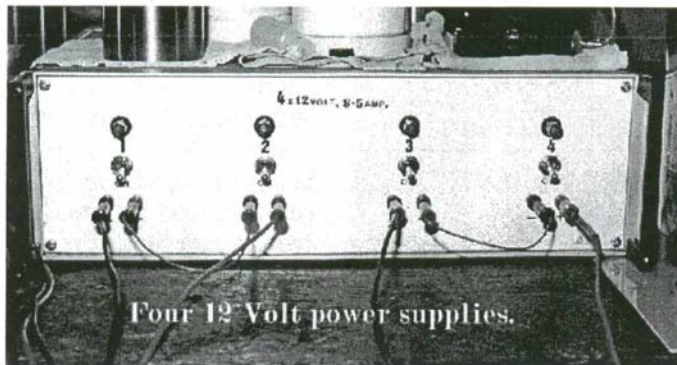


Abb. 39:
Eine Ansicht einer Stromquelle, die 4 Zellen gleichzeitig laden kann. Man kann auch, wenn erforderlich, die einzelnen 12 Volt Anschlüsse zu 24, 36 oder 48 Volt zusammenschließen.



Abb. 40:
Links. die Ansicht eines 60 Volt Ladegeräts, mit dem man Zellen mit Elektrolyten laden kann. -
Oben rechts. Oben auf einem Ladegerät für Autobatterien befinden sich zwei 2 Volt Batterien, die man dazu benutzen kann, die Joe Zelle am Leben zu halten, wenn sie nicht benutzt wird. -
Unten rechts. Normales Ladegerät, das zum Laden der Zelle benutzt werden kann.

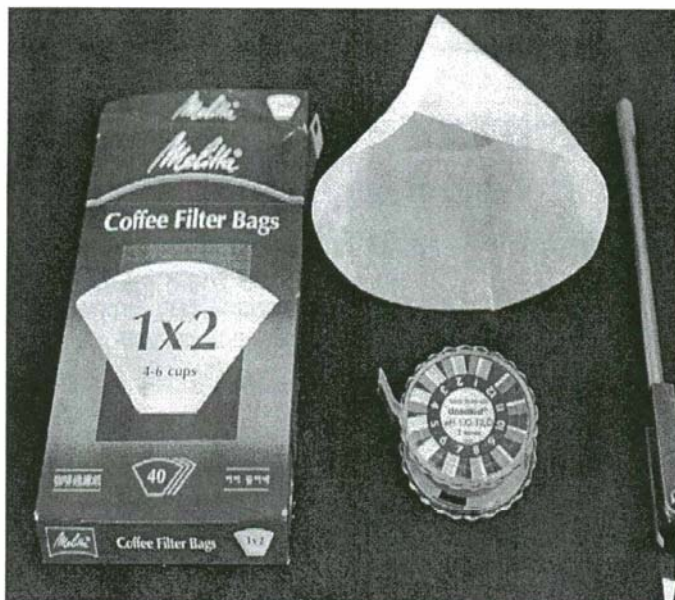


Abb. 41:
Links und Mitte. Ansicht des Filtertyps, den ich verwende, um Flusswasser zu filtern. In der Mitte eine Rolle von Lackmuspapier für die Bereiche 1 – 14, um den pH-Wert des Wassers zu testen. Zur Rechten ein Rotationsmagnet zum Testen von Paramagnetismus der Komponenten aus rostfreiem Stahl.

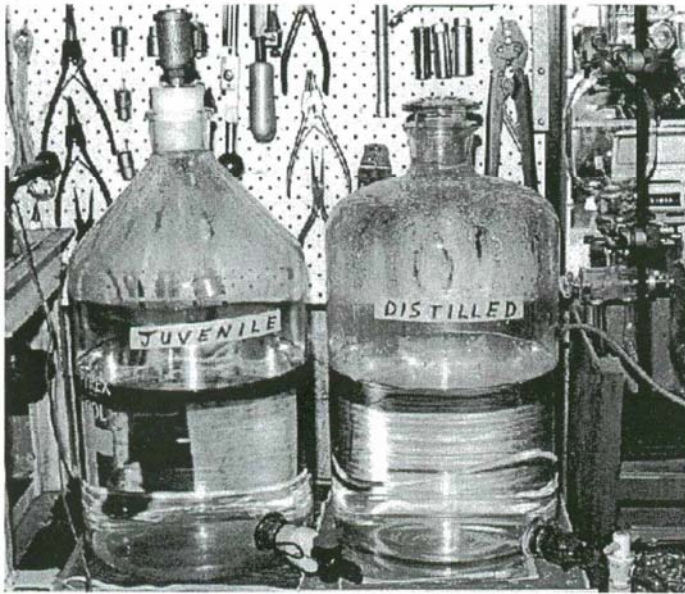


Abb. 42:
Ansicht von 20 Liter Behältern aus Pyrex zum Aufbewahren des kindlichen Wassers. Normalerweise sind diese Behälter mit purpurfarbenem Filz bedeckt.

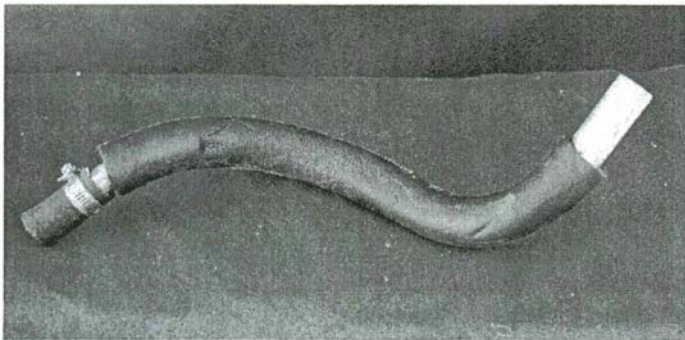


Abb. 43:
Ansicht der Röhre, die von der Zelle zum Motor führt. Beachten Sie, dass das Ende des Gummischlauchs für den Blindanschluss keinen Klemmverschluss hat und deshalb lose auf dem Anschluss sitzt.

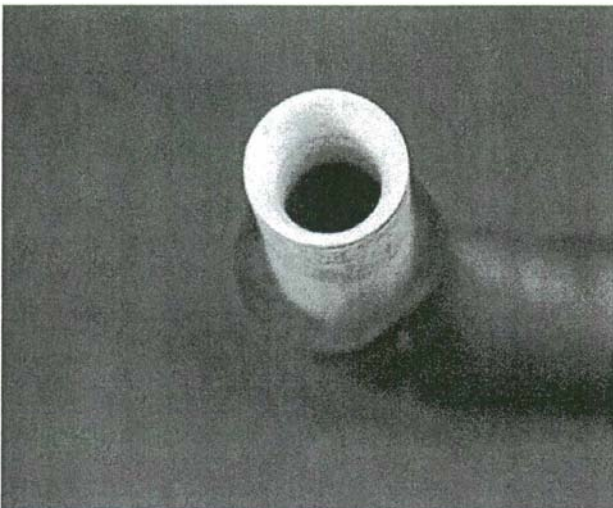


Abb. 44:
Innenansicht des Zellendes der Röhre aus Abb. 43. Beachten Sie die sanfte Verengung des Radius, um Behinderungen des Organflusses zu begrenzen.

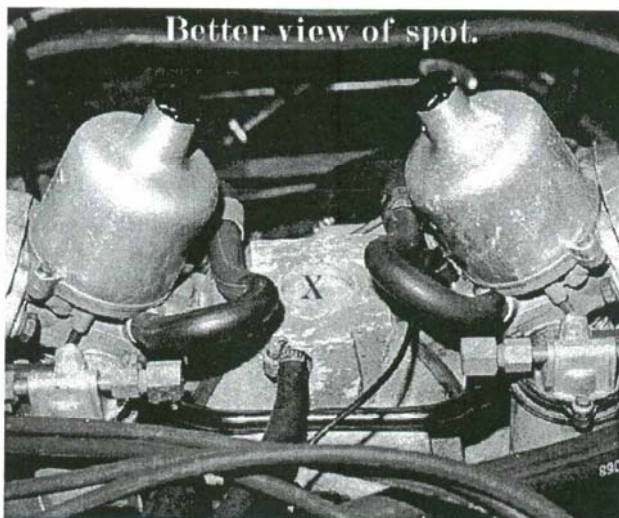


Abb. 45:
Nahaufnahme der ausgewählten Stelle,
an der der Blindanschluss befestigt wer-
den wird. 'X'



Abb. 46:
Ansicht des mit 2 Bolzen am Vergaser
befestigten Blindanschlusses. Der An-
schluss passt für einen Schlauch mit 1
Zoll Innendurchmesser.

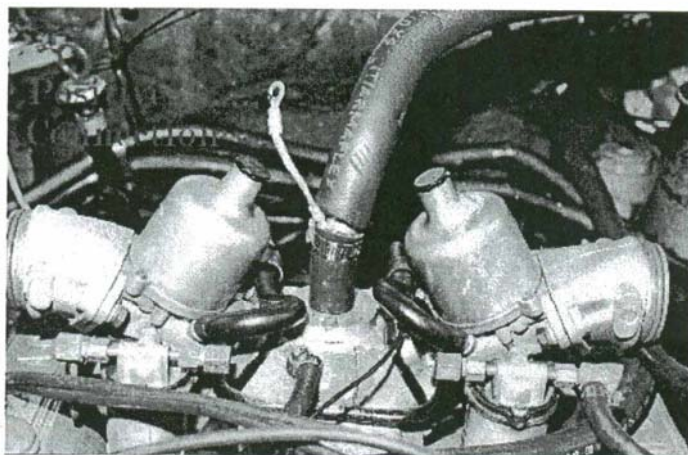


Abb. 47:
Verbindung Zellröhre zu Motor.
Beachten Sie, es gibt keine
Schelle an der Verbindung Röh-
re/Motor. Der kurze Elektrodraht
wird an die positive 'Zündung an'-
Verdrahtung des Autos ange-
schlossen (siehe Text).

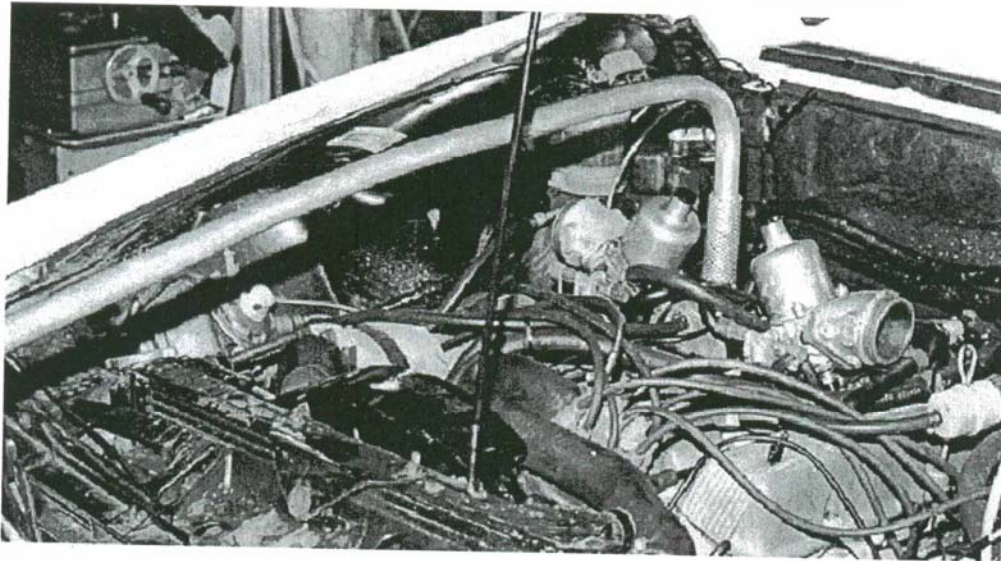


Abb. 48:
Ansicht des Rovermotors, der im Testaufbau verwendet wurde. Sie zeigt die von einer externen Zelle ausgehende Röhre, die mit dem Vergaser verbunden ist.

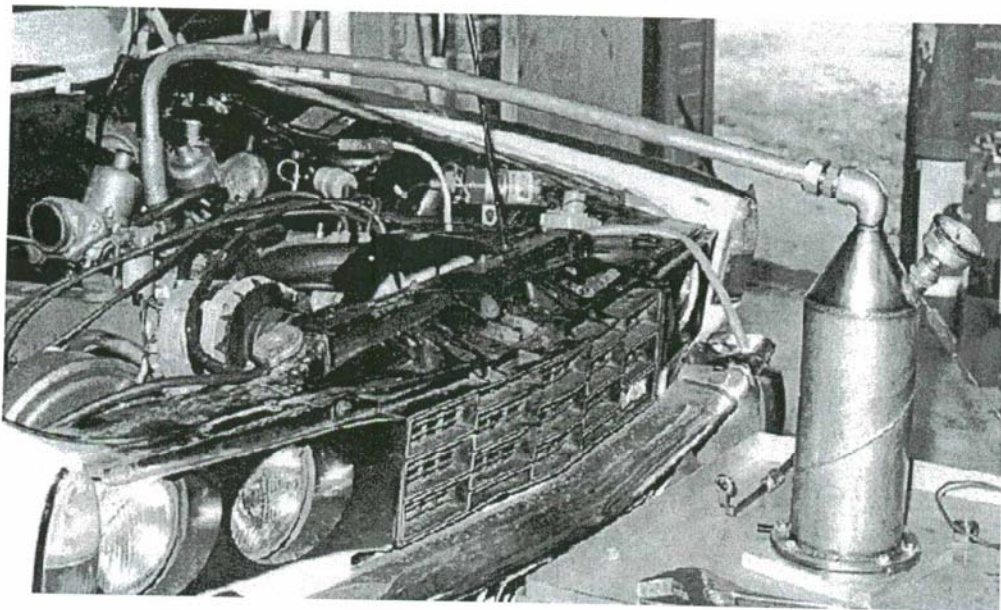


Abb. 49:
Gesamtansicht des Rovers und der externen Zellverbindung. Als Zelle für diesen Test dient der 'Alte Zuverlässige' aus Abb. 1.

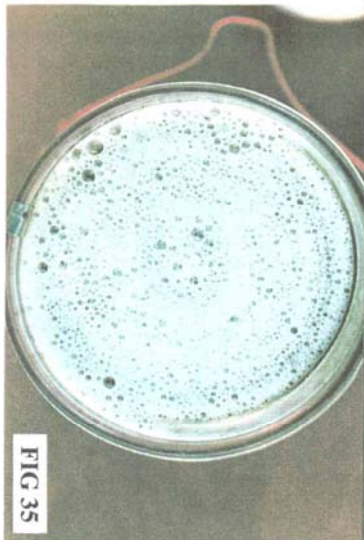


FIG 35

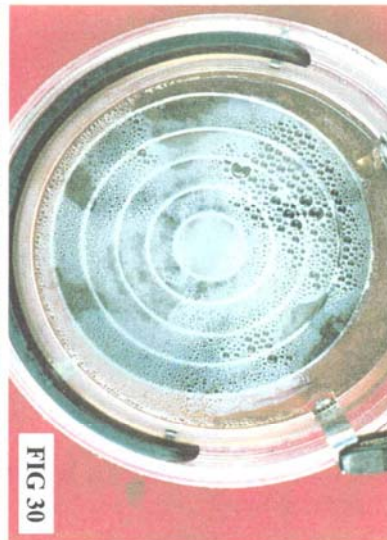


FIG 30

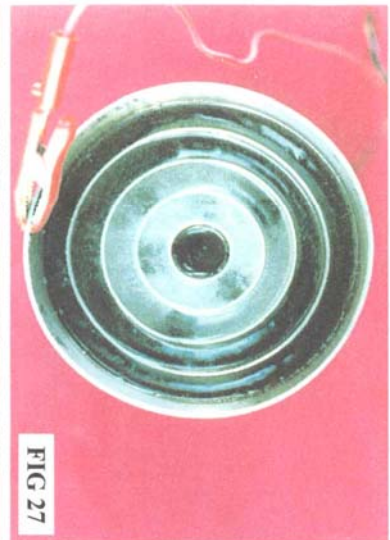


FIG 27



FIG 36

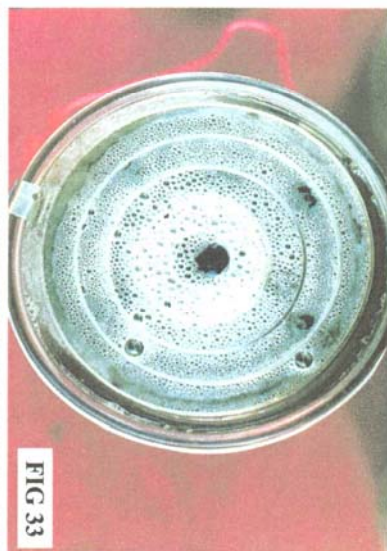


FIG 33

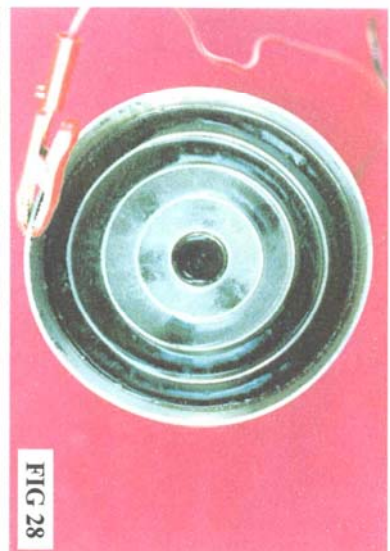


FIG 28



FIG 37

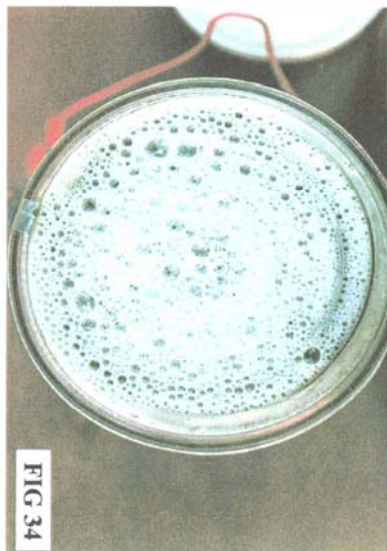


FIG 34

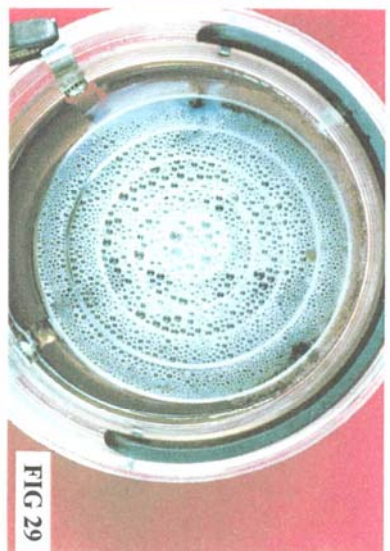


FIG 29

PHOTO PLATE ONE